



Ness D8x / D16x ALARM CONTROL PANEL
INSTALLATION & PROGRAMMING MANUAL



Security Products

www.ness.com.au

*“Australia’s largest
designer and
manufacturer of
high quality security
products”*



Head Office:

Ness Security Products Pty Ltd
ABN 28 069 984 372
4 / 167 Prospect Hwy
Seven Hills NSW 2147 Australia
Ph +61 2 8825 9222
Admin Fax +61 2 9838 8508
ness@ness.com.au

SYDNEY

4 / 167 Prospect Highway
Seven Hills NSW 2147
Ph 02 8825 9222
Fax 02 9674 2520
sales@ness.com.au

MELBOURNE

24 Terracotta Drive
Blackburn VIC 3130
Ph 03 9875 6400
Fax 03 9875 6422
nessmelb@ness.com.au

BRISBANE

Unit 3, 471 Lytton Road
Morningside QLD 4170
Ph 07 3399 4910
Fax 07 3217 9711
nessbris@ness.com.au

PERTH

Unit 1, 567 Newcastle Street
West Perth WA 6005
Ph 08 9328 2511
Fax 08 9227 7073
nessper@ness.com.au

ADELAIDE

Unit 1 / 22 Ware Street
Thebarton SA 5031
Ph 08 8152 0000
Fax 08 8152 0100
adelaide@ness.com.au

D8x/D16x INSTALLER MANUAL Revision 5.6 June 2007

Document Part Number: 890-007

For products:

106-000 D8x Control Panel with LED keypad
106-001 D8x Control Panel with LCD keypad
106-004 D16x Control Panel with LCD keypad



NESS SECURITY PRODUCTS
Australian Communications Authority
TELECOMMUNICATIONS COMPLIANCE

COPYRIGHT NOTICE

All rights reserved. No part of this publication may be reproduced, transmitted or stored in a retrieval system in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of Ness.

Ness reserves the right to make changes to features and specifications at any time without prior notification in the interest of ongoing product development and improvement.

© 2007 Ness Security Products Pty Ltd ABN 28 069 984 372

CONTENTS

| | | |
|---|--------|-------|
| INSTALLATION | | |
| Product features..... | 4 | |
| Specifications and approvals..... | 5 | |
| Installation notes..... | 6 | |
| Inputs and outputs..... | 7 | |
| CONNECTION DIAGRAM | 8–9 | |
| Keypad..... | 10 | |
| OPERATION | | |
| Operation Summary..... | 11 | |
| HOW TO PROGRAM | | |
| Quick start Programming..... | 12 | |
| How to enter Program Mode..... | 13 | |
| GENERAL OPTIONS | | |
| User Codes..... | 14, 15 | |
| Timers..... | 16 | |
| Vibration Sensitivity..... | 17 | |
| Zone Assignment..... | 18, 19 | |
| Definitions. Day Zones, Temp Day Zones, Monitor.... | 20 | |
| Zone To Output Mapping..... | 22–23 | |
| Various Options..... | 24–25 | |
| Tamper/Keypad Panic Output Mapping..... | 26 | |
| System Operation Shortcuts..... | 27 | |
| Monitor mode output mapping..... | 28 | |
| Day mode output mapping..... | 28 | |
| Miscellaneous Options..... | 29–30 | |
| Zone Supervision options..... | 31–33 | |
| Zone Split (D16 only)..... | 34 | |
| Misc. options..... | 35–37 | |
| DIALLER OPTIONS | | |
| TELEPHONE NUMBERS | 38–39 | |
| Account Numbers..... | 38 | |
| Report zone alarms..... | 40 | |
| Report zone restorals..... | 40 | |
| Report multiple zone alarms..... | 40 | |
| Account No.2 zones..... | 40 | |
| Report Miscellaneous alarms..... | 41 | |
| Report Miscellaneous Restorals..... | 41 | |
| Test Call options..... | 42 | |
| Dialler format options..... | 43–44 | |
| CONTACT ID REPORTING CODES | 43 | |
| Dialling options..... | 45 | |
| Area1, Area2 open/close reports..... | 46 | |
| Siren Chirp, Flash options..... | 46 | |
| Other reports..... | 47 | |
| Enable Test Calls..... | 48 | |
| Mains Report Delay..... | 48 | |
| Listen-in to dialler..... | 48 | |
| Swinger Shutdown..... | 49 | |
| Line Fault Monitor..... | 49 | |
| Remote access options..... | 50–51 | |
| Required Rings..... | 52 | |
| No Memory Warning zones..... | 52 | |
| SPECIAL FUNCTIONS | | |
| Send test report..... | 52 | |
| Siren test..... | 52 | |
| Panel reset..... | 52 | |
| Display software version..... | 52 | |
| FACTORY DEFAULTS | | |
| Clear Radio Devices..... | 53 | |
| Clear Memory..... | 53 | |
| Clear Panel Options..... | 53 | |
| Clear User Codes..... | 53 | |
| OUTPUT EXPANDER | | |
| Output Expander options..... | 54–55 | |
| AUX OUTPUTS | | |
| Aux1 output options..... | 57 | |
| Aux2 output options..... | 58 | |
| Aux3 output options..... | 59 | |
| Aux4 output options..... | 59 | |
| Enable/Disable hardwire zones..... | 60 | |
| RADIO OPTIONS | | |
| Signal strength test..... | 61 | |
| Ness Radio Interface..... | 61 | |
| Radio Devices, described..... | 61 | |
| RADIO DEVICE PROGRAMMING | 62 | |
| RADIO KEY PROGRAMMING | 63 | |
| Real Time Clock options..... | 64 | |
| ACCESS CONTROL OPTIONS | | |
| PROGRAMMING ACCESS CARDS | 65 | |
| Access Control options..... | 65–68 | |
| Weigand Reader wiring diagram..... | 69 | |
| REMOTE OPERATION | | |
| Monitoring operation..... | 70 | |
| Remote operation by telephone..... | 71 | |
| PROGRAMMING OPTIONS SUMMARY | | 72–74 |
| Operation summary..... | 75 | |
| Installation Record..... | 76 | |



FEATURES

- 8 or 16 alarm zones.
- Supports up to 3 remote LCD or LED keypads.
- 56 user codes can be programmed to operate by keypad PIN, radio key or access card.
- Optional Ness Radio Interface for fully integrated wireless security.
- Programmable 2 Area partitioning can split the panel into two independent areas plus a common area.
- Monitor Mode allows partial arming, (eg, perimeter security overnight).
- Day Mode feature allows daytime monitoring of fire doors, coolrooms etc.
- Temporary Day Zone feature allows easy enabling/disabling of Day Mode.
- Keypad Panic feature.
- Keypad Duress feature.
- Two button arming feature.
- Fire Alarm feature with different siren tones.
- Highly flexible zone to output mapping.
- Onboard Vibration Sensor Analyser with programmable sensitivity. Use with Nessensor™ vibration sensors.
- Siren chirp and strobe flash on arming with radio key.
- Quiet chirps option on arm/disarm by radio key.
- True Dynamic Battery Test actively tests the battery under load every hour.
- 4 programmable auxiliary outputs.
- Serial data input/output via RS232.
- Automatic reset fuses.
- Programmable siren/reset lockout.
- 30 event memory from keypad.
- Standard defaults to suit most applications.
- Easy programming by keypad or NessComms™ software.
- All programming data is permanently stored in a non-volatile memory.
- All inputs and outputs are heavily protected against lightning and high voltage supply transients.
- Optional output expander.

DIALLER

- Full remote upload/download by PC and modem using NessComms™ software.
- View system status and arm/disarm using NessComms™.
- Remote control of outputs via telephone.
- Contact ID Format - Two 14 digit phone numbers plus one "follow me" number.
- Audible Voice format feature.
- Phone line monitoring (activates output).
- Dialler 'Listen in' option for installers.
- Auto Test calls.
- Pulse or DTMF dialling.
- True dial tone detection.
- Hex programmable client codes.

RELEASE NOTES

v5.6 June 2007

New Options

1. LONG RADIO MESSAGE option gives greater protection against coding clashes with third party radio signals. P68E 3E, page 36.
2. REMOTE STATUS & ARMING option allows real-time viewing of zone status and arming/disarming using NessComms™ software V5.2 or later. P90E 6E, page 51.
3. AREA2 DISARM BY KEYSWITCH allowed. P120E 8E, page 56.
4. ENTRY DELAY EXTENDER allows Entry Delay Time1 to be up to 990 seconds. P120E 7E, page 56.
5. PULSE/TOGGLE AUX3 and AUX4 selects Aux3 and Aux4 for either Pulse or Toggle operation by remote telephone control. P123E 7E, page 59. P124E 7E, page 60.
6. Two way serial data communications with external devices via the onboard RS232 SERIAL PORT in ASCII format. P199E 1E-5E, page 64).

Operational Changes

1. SHORTCUT ARM of an Area even if the the other Area is already armed is now allowed.
2. CODE-ONLY ARMING does not arm if the code is meant to reset an alarm condition.
3. TEMPORARY DAY ZONE MODE is indicated by flashing MONITOR icon (on LCD keypad only).
4. A user code assigned only to Area2 will not disarm MONITOR Mode.
5. Audible Reporting format now reports ALARM ALARM ALARM voice message as well as tones. (Not available on the D16x C-Bus model).
6. Improved Radio & Weigand error correction to minimise bad data caused by interference from outside sources.
7. Audible Voice format acknowledgement now recommended using the '3' key on the receiving telephone, although '#' key will still work on most telephones.

v5.5 November 2005

- Telephone numbers can now be up to 30 digits in length, (previously 15 digits).
- New option P124E 5E enables AUX4 as 'Fail To Communicate' output to trigger backup communications devices such as GSM.
- If Audible Monitoring is enabled, disarming clears the dialler queue (after the current message is completed). This allows the user to cancel dialling by resetting the alarm.


v5.3 & v5.4 September 2005

- REX User Codes. Enabling a user code to Code Only Arm allows the code to be used as a Request To Exit code for access control.
- P64E 4E Radio Key Siren Chirps will now also chirp siren on Monitor disarm.
- P301E 8E, new option to enable/disable strobe flash on arming/disarming by access control Reader. previously this function was always on.
- Memory+E or 0+E will now delete codes in User Program Mode. This previously functioned only in Installer Program Mode.
- Changed operation of event memory. Normal Arming/Disarming events are not repeated in memory to prevent memory being filled with identical arm/disarm events.

v5.2 June 2005

- All user codes are now allocated to Area 1 by default. User codes can be allocated to Area 2 as required.
- Area 2 only User codes do not turn off Monitor mode. Previously any user code would disarm Monitor mode. This allows Area 2 to be armed/disarmed without affecting Monitor arming.
- New option P66E 5E enables Wired Zone Supervision. Useful as an "Inactivity Monitor". See page 33.
- Radio zones will reseal in the presence of high frequency radio interference.

NESS D8 AND D16 CONTROL PANELS

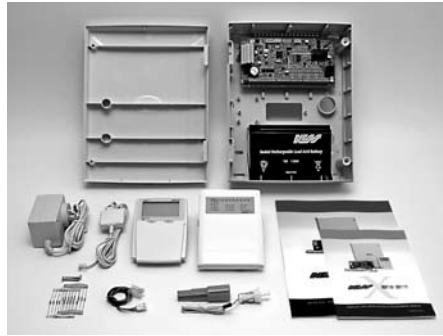

PACKING LIST

- 1 D8 or D16 Main board
- 1 Housing
- 1 Ness LED keypad (100-192) or Ness LCD keypad (100-667)
- 1 17VAC plug pack
- 1 12V 7Ah battery (optional)
- 1 Dialler telephone lead
- 1 User manual
- 1 Installer manual
- 9 or 17 End Of Line resistors 2K2 (D8/D16)
- 1 Lead assembly for battery
- 1 Lead assembly for internal tamper
- 1 Zone list label
- 2 Housing cover screws
- 4 Circuit board standoffs

106-000 D8x Panel with LED keypad

106-001 D8x Panel with LCD keypad

106-004 D16x Panel with LCD keypad

Ness D8x Ness D16x CONTROL PANELS

SPECIFICATIONS

Box dimensions 235w x 300h x 90d mm.
Plug pack 240V AC, output 17V AC@1.4A.
Power supply 13.8V DC @ 800mA.
Quiescent current draw 80mA with 1 keypad.
Operating voltage 9.5V– 14V DC.
Rechargeable battery..... 12 volt 7.0 Amp/hour Sealed Lead Acid.
Battery charging current..... 350mA maximum, current limited.
Dynamic battery test Backup battery is tested under load, hourly and on arming.
Fuses..... 2 Amp auto resetting / Siren output & Reset output.
500mA auto resetting / 12 volt auxiliary outputs.
200 mA auto resetting / strobe output.

INPUTS

Zones 8 or 16 zone inputs. 2 x 24hr tamper inputs.
End of line resistor 2200 Ohms (2K2), (Also see Zone Split option for the D16).
Maximum keypads..... 3.
RADIO Header Multi-pin connector for the Ness Radio Interface (100-200).
SERIAL Header Serial data port for direct connect programming using NessComms™ software.
READER Header Multi-pin port for connecting up to 3 Ness proximity access card readers.

OUTPUTS

Siren On board siren driver with timed output .
Maximum 3 x 8 Ohm horn speakers.
Strobe..... 12V DC timed output. Maximum 2 x 1 Watt strobe lights.
Reset 12V DC timed output. Maximum 3 x 12V piezo screamers.
Equipment power output 13.8V DC output for powering detectors and other equipment. Maximum 500mA.
AUX Header Multi-pin connector provides outputs Aux1, Aux2, Aux3, Aux4, 12V DC.

APPROVALS

EMC COMPLIANCE

EN 50130-4:1996 Part 4: Electromagnetic compatibility. Electrostatic Discharge, Radiated RF Immunity, Electrical Fast Transient/burst. Surge Immunity, Conducted RF Immunity, Voltage Dips and Interruptions, Mains Supply Variations.

AS/NZ CISPR 22:2002- Class B, Electromagnetic Radiation, Terminal Disturbance Voltage.

EN61000-6-3:2001, Harmonic Current Emissions, Voltage fluctuations and Flicker.

TELECOM

TBR21, EU. PTC200, NEW ZEALAND TELECOM . AS ACIF S002, AUSTRALIA

SAFETY

EN60950:2000 inc Country Deviations, Safety of Information Technology Equipment

AS/NZ3260-1993 incl. AMDTS 1,2,3 & 4. TS001-1997 ACA Australian Communications Authority



INSTALLATION

WARNING

Installation and maintenance shall be performed by qualified service personnel only.

CAUTION

Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions on the battery.

ESD WARNING

(Electrostatic Discharge).

Once properly installed, Ness control panels are well protected from ESD. However, take note of the following precautions during installation.

The human body can generate static electricity when it is insulated from earth - for instance by walking over carpet.

ESD occurs (and a small shock is sometimes felt) if an earthed metal object is then touched.

The installer should be aware that if he generates static electricity while installing the panel and then discharges this static electricity into the internal components on the main D8/D16 circuit board or the keypad board, then ESD damage may occur.

The circuit board should not be unwrapped until it is actually ready to be installed.

Methods to avoid electrostatic build-up.

1. Use a foot strap, a wrist strap, or a grounding mat. The aim is to connect the body to earth to discharge static before it builds up. The connection is a high resistance for personnel safety.
2. If the above is not available, then it is advisable to wear clothing that will minimise the build-up of static.
3. Handle circuit boards by the edges. Avoid touching any components on the board as the integrated circuits, in particular, are not guaranteed by their manufacturers to be safe from ESD.
4. To minimise the build-up of static, avoid walking around as much as possible while working on the installation.
5. Touch an earthed object to discharge any static before working on the installation.

ADSL NOTICE

ADSL broadband data can interfere with the operation of your alarm dialler.


It is recommended that a quality ADSL filter be installed as per the filter manufacturer's guidelines in all premises with an alarm dialler installed.

INSTALLATION PROCEDURES

The location of the main panel housing and all keypads should be in an area that is within the protected area of the premises. A linen closet or cupboard are good examples as these are generally located in the centre of the premises.

Positioning of the movement detectors should be considered as the incorrect position may cause unwanted alarms.

1. Remove the housing lid.
2. Remove the battery from the base.
3. Securely mount the rear panel housing to a secure location.
4. Run all cabling needed for the installation.
5. Before removing the circuit board from its protective wrapping.
6. Insert the PCB stand-offs in the panel and then plug the circuit board onto the stand-offs.
7. Wire to the circuit board terminal blocks, as per the wiring instructions shown in this installation manual.
8. Replace the battery.
9. Insert the panel tamper bracket as shown below.
10. Close the lid and program the panel as required.

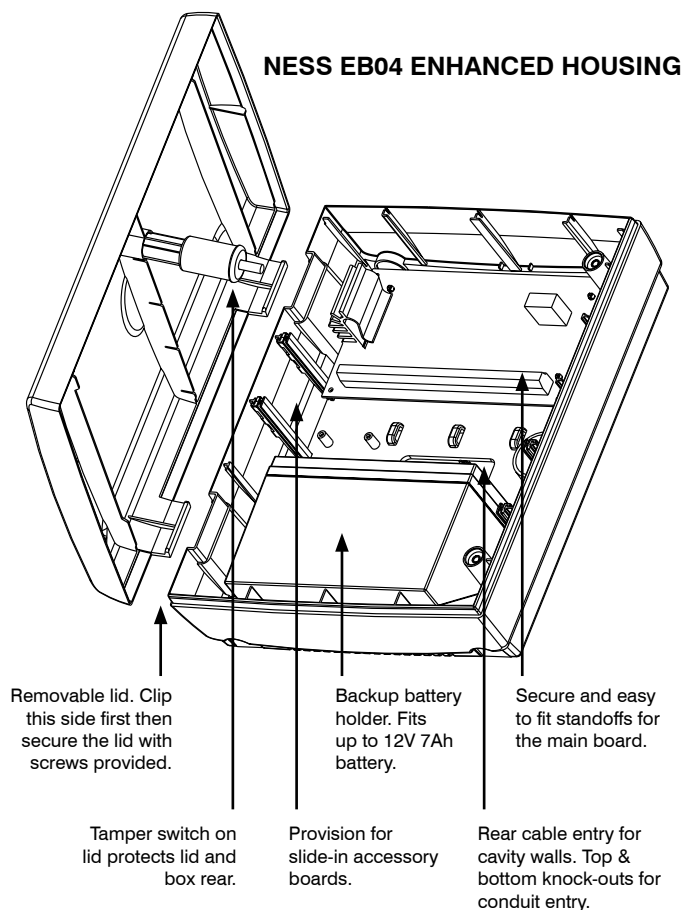

INPUTS

MONITORED ZONES

The Ness D8/D16 has multiple monitored inputs.

8 or 16 fully programmable zone inputs. (Monitored by end of line resistor).

1 x 24 hour External TAMP input. (Monitored by end of line resistor).

1 x 24 hour Box Tamper input. (Normally Closed input. Resistor is not required).

ZONE INPUTS

Each zone input must be terminated with a 2K2 (2200 ohm) resistor or 2K2 and 4K7 (D16) as supplied. All inputs must be sealed with an EOL resistor unless disabled by option P125E.

For wiring details of Keypads, Keyswitches, Panic Buttons and Warning devices, see the wiring diagrams in the wiring section of this manual.

TAMP – Tamper Input

The TAMP input must also be sealed with a 2K2 end of line resistor. This input is always a 24hr input.

AC INPUT TERMINALS

These terminals are for the connection of the Ness plugpack. The Ness D8/D16 requires an AC transformer rating of 1.4 Amps @ 17 V AC minimum. (Ness Part No. POW215)

BATTERY

These terminals are for the connection of a sealed lead-acid rechargeable 12Volt battery. Charge current is limited to 350mA. The charge voltage is factory preset at 13.8V and does not need changing. Note: A 12 Volt sealed lead acid rechargeable battery must be connected for correct panel operation. Observe correct polarity when connecting the battery.

(Ness Part Number BAT210 12V 7Ah battery)

EARTH

For maximum protection against damage caused by lightning strikes, connect a good earth to this terminal. Alternatively use the Earth lead from the plug pack.

PROG/TAMP – Program Link & Internal Tamper Input

The PROG/TAMP link appears on the two pin J1 header.

The PROG/TAMP link has two purposes:

1. **To enter Installer Program Mode on initial power up.** Power-up with the PROG link OFF. The PROG link (or Box Tamper lead) must be ON in operating mode.

2. **Box Tamper.** When used with the Internal Tamper Lead (supplied), PROG/TAMP serves as the 24hr tamper input for the panel's internal tamper switch.

Replace the PROG Link with the Box Tamper Lead. Connect the Internal Tamper Lead spade terminals directly to the terminals of the internal tamper switch (supplied). An end-of-line resistor is NOT required on this input.

When PROG/TAMP is used for Internal Tamper, powering up with the panel's cover open will enter Installer Program Mode.

OUTPUTS

12 VOLT OUTPUT

A regulated 13.8 VDC output is available to power detectors and other equipment. This output is available from two sets of terminals marked +12V and 0V. This output is protected by an Automatic Reset fuse.

A maximum load of 500mA may be connected to these terminals.

SIREN

The on-board siren driver will drive a maximum of 3 x 8 ohm horn speakers (Ness Part No. NOI110 or 100-171 Internal Siren). The output will reset at the end of siren time (P29E) or whenever the panel is reset, whichever comes first.

This output is protected by an Automatic Reset fuse.

STR

A latched 12VDC output for connecting strobe lights.

This output will reset after 72 hours (3 days) or when the panel is disarmed. (D8/D16 versions prior to V4.5 allow indefinite strobe operation, until the panel is reset).

A maximum of 2 x 1 Watt Strobes (Ness Part No. NOI300) can be connected to this output.

This output is protected by an Automatic Reset fuse.

RESET

A 12V DC output for connecting Ness sirens, piezo sirens or relays, etc. This output will reset at the end of siren time (P29E) or whenever the panel is reset, whichever comes first.

A maximum of 3 x 12V piezo screamers (Ness Part No. 100-238, 100-004) or 2 X Ness Piezo (Part No 100-172) can be connected to this output.

This output is protected by an Automatic Reset fuse.

AUX HEADER

The Aux outputs are open collector outputs (switch negative) which can supply a maximum of 100mA. Each Aux output can be programmed to perform one of several different functions.

Aux1: Programmed by option P121E 1E-8E.

Aux2: Programmed by option P122E 1E-8E.

Aux3: Programmed by option P123E 1E-8E.

Aux4: Programmed by option P124E 1E-8E.

12V: 12V DC output. Maximum current draw 100mA.

0V: 12V ground.

OUTPUT FUSING. The 12V outputs, Siren, Reset and Strobe outputs are protected by Automatic Reset electronic fuses. These outputs will automatically reset once the overload is removed.

BACKUP BATTERY. A properly charged battery must be installed to ensure the Siren, Strobe and Reset outputs operate correctly.

SIREN LOAD. A maximum output of 2.0A continuous is available from the SIREN and RESET outputs and 200mA from the STR output.


Recommended maximum power load:

3 x Horn speakers (SIREN output)


2 x Strobe lights (STR output)

2 x Ness Internal Sirens (100-172) (RESET output)


Note: (This assumes no more than 500mA is being drawn from the 12V device outputs).

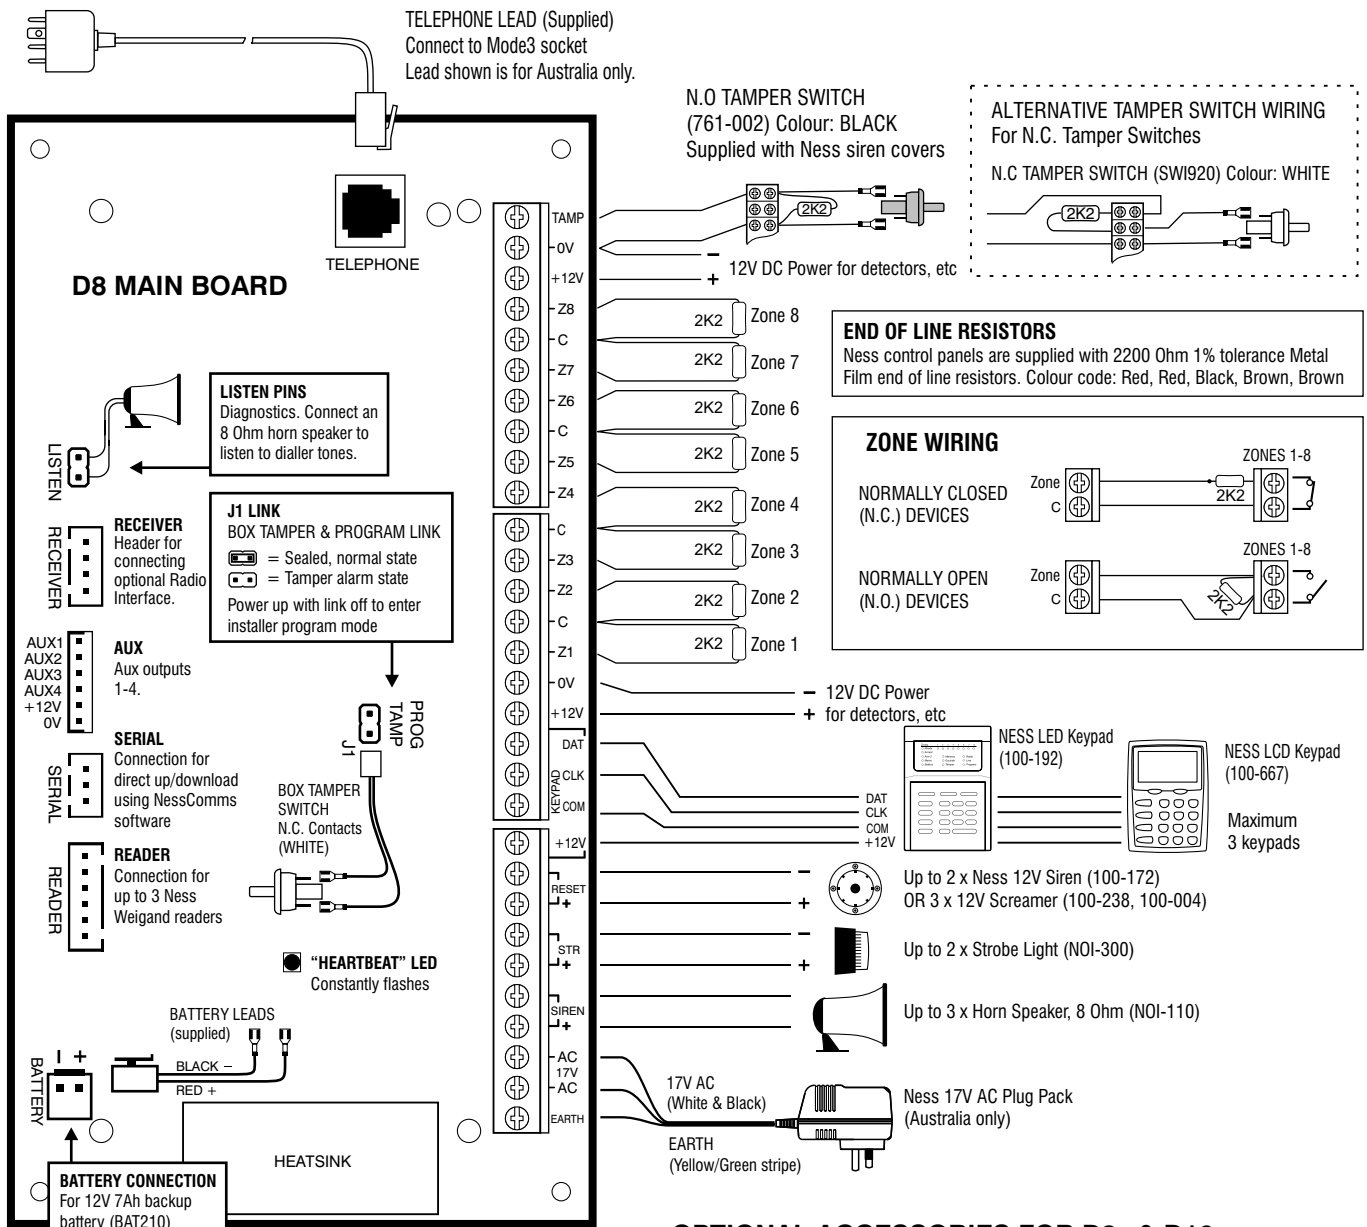

OPTIONAL ACCESSORIES FOR D8x & D16x

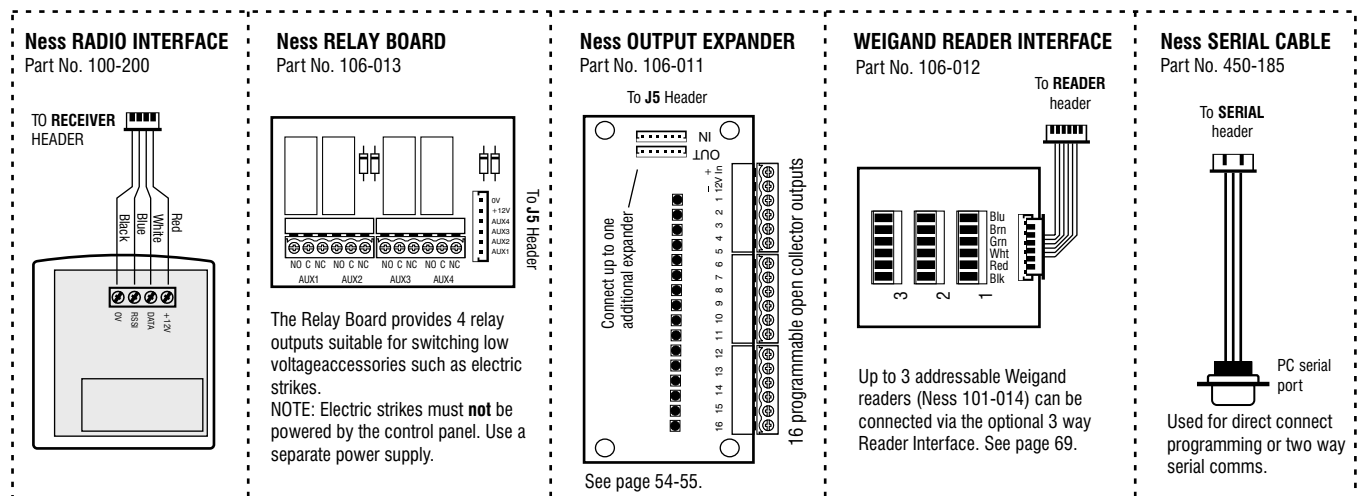


The Relay Board and the Output Expander Board connect to the Aux header on the D8x/D16x main board but you cannot connect both at the same time. If required, the Relay Board can be driven by outputs from the Output Expander.

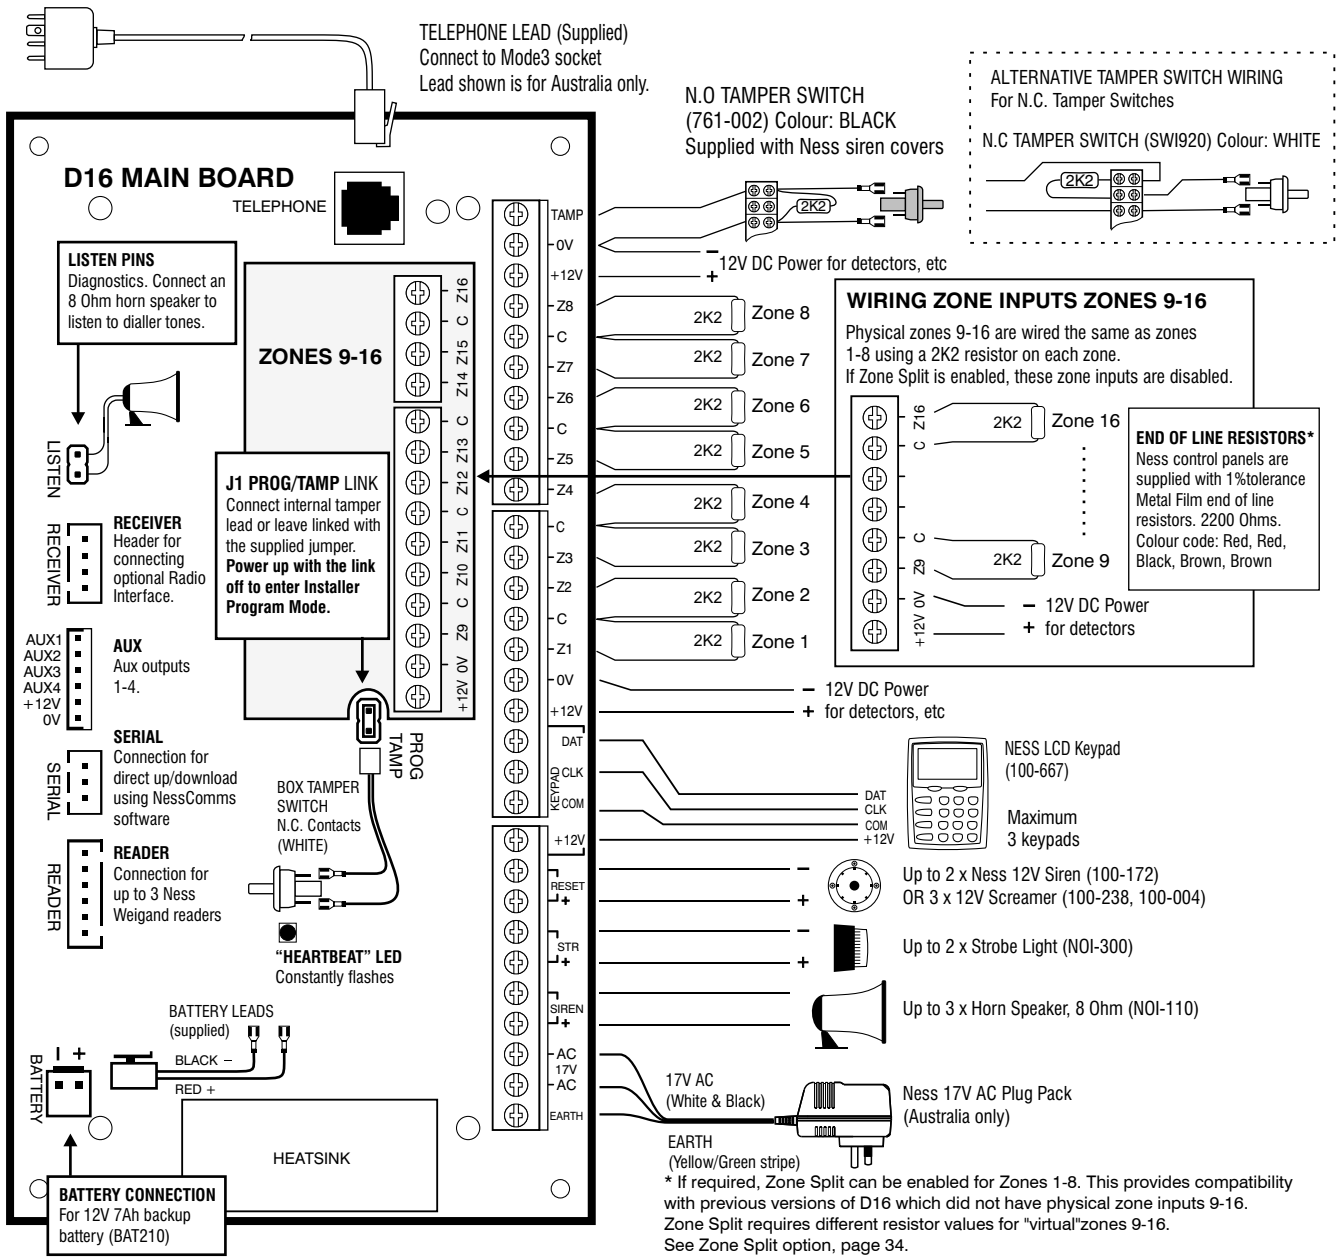


SIREN WIRING (D8 & D16)

NESS D8/D16 CONTROL PANEL



N.O. TAMPER SWITCH (761-002) Colour: BLACK

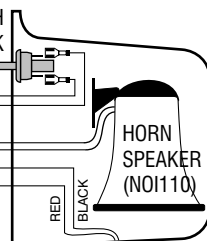


The terminal block should be mounted inside the siren cover.

EXTERNAL

INTERNAL

ALTERNATIVE 12V SIRENS:
100-172 Ness 12V Internal Siren
100-238 Top Hat 12V Piezo Screamer



Ness Panel & Noise KITS are supplied with the 100-238 Top Hat screamer

KEYPAD

D8 & D16 KEYPADS

The Ness LED or LCD keypad provides important visual and audible indication of the system status and is the main interface for controlling the many powerful features of the system.

DISPLAY TEST (LCD KEYPAD ONLY)

To display all the keypad icons press and hold the **(E)** button for at least 2 seconds. All the icons will be on whilst the **(E)** button is held down.

Display Test can be activated at any time either in operating mode or any program mode.

NUMBER OF KEYPADS

Up to 3 LED and/or LCD keypads can be connected to the D8 panel.

Up to 3 LCD keypads can be connected to the D16 panel.

CABLE LENGTH


The maximum allowable cable length is 100m (total cable length to all keypads).




KEYPAD INSTALLATION

- Unclip the top half of the keypad housing by pushing the top clips down with a small screwdriver and pulling the housing forward.
- Screw the base of the keypad housing to the wall using the 4 mounting holes provided.
- Bring the 4 connecting wires to the terminal block on the PCB on the rear of the keypad housing.
- Connect the wires to the screw terminals as per the wiring diagram shown in this manual.
- Clip the top half onto the base by first engaging the bottom clips and swinging the top closed. Push hard to ensure the clips engage.
- Attach the Zone list label on the inside of the lid.

NESS LED KEYPAD (100-192)
D8 PANEL ONLY

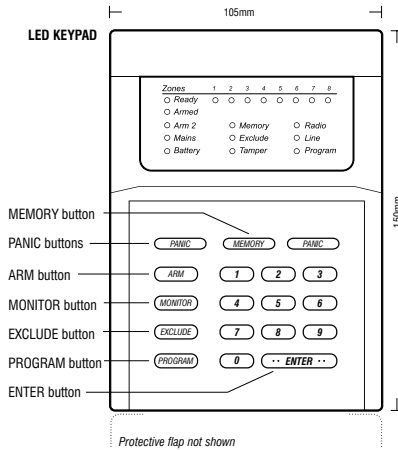

NESS D816 LCD KEYPAD (100-667)
D8 OR D16 PANEL

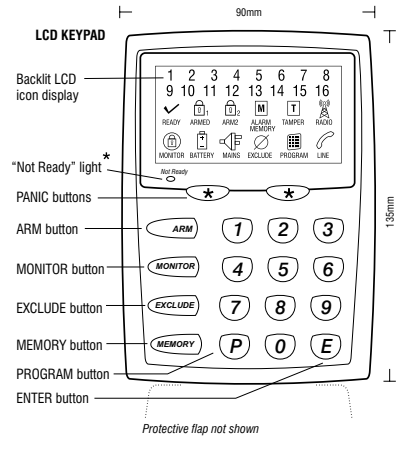



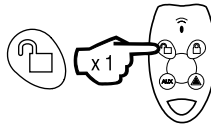

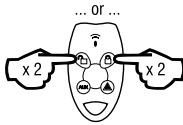
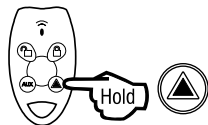
*The "Not Ready" light is on when the panel is not ready to Arm. i.e. a zone is unsealed, there may still be movement in the premises or a door or window left open

| KEYPAD ICON DISPLAY | KEYPAD ICON STATUS | | |
|----------------------|--|------------------------|--|
| | ● OFF | ○ ON | ☀ FLASHING |
| ZONES 1-16 | Zone is sealed | Zone is unsealed | Zone alarm |
| ✓ READY | Zone is unsealed, or Power fault or System is Armed, or phone line fault | Ready to Arm | |
| 🔒 ₁ ARMED | Disarmed | Armed (AREA 1) | Monitor Mode (LED Keypad only) |
| 🔒 ₂ ARM2 | Disarmed | Armed (AREA 2) | |
| 🔒 MONITOR | Disarmed | Monitor Mode | |
| 🔊 MAINS | Normal | | Mains Power is off |
| 🔋 BATTERY | Normal | | The panel's backup battery is low |
| M ALARM MEMORY | Normal | Memory Mode selected | New alarms in memory |
| ⊘ EXCLUDE | Normal | | Zones are excluded |
| T TAMPER | Normal | | Tamper alarm |
| 📡 RADIO | Normal | Receiving radio signal | Indicates that a Radio Key or other radio device has a low battery |
| 📞 LINE | Normal | Dialler is on line | Phone line fault or failure to communicate |
| 📱 PROGRAM | Normal | User Program Mode | Installer Program Mode |
| ⚠ Not Ready | Ready to Arm | Not ready to Arm | |

MEMORY MODE - EVENTS INDICATED BY KEYPAD LIGHTS

| LIGHT | MEMORY EVENT |
|-------------------------------------|--|
| Zone lights 1-8 or 1-16 (no lights) | Zone alarm Panel Disarmed |
| ARMED | Panel Armed (or Area 1 Armed) |
| ARM2 | Area 2 Armed |
| MAINS | Mains power failure |
| BATTERY | Low Battery |
| TAMPER | Tamper alarm (Siren cover, panel etc) |
| EXCLUDE | Panic alarm |
| LINE | Telephone line fail |
| RADIO, EXCLUDE | Radio Key Panic alarm |
| RADIO, BATTERY, ZONE | Radio Device battery low, (Device number is indicated by zone lights) |
| RADIO, BATTERY, ARM | Radio Key battery low, (Radio Key number is NOT indicated) |
| RADIO, TAMPER, ZONE | Radio Device tamper alarm (Device number is indicated by zone lights) |
| RADIO, MONITOR, ZONE | Radio Supervision alarm (Device number is indicated by zone lights) |
| MONITOR, ZONE | Wired Zone Supervision alarm (Zone number is indicated by zone lights) |

OPERATION SUMMARY
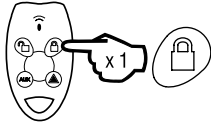
| OPERATION | by KEYPAD | by RADIO KEY | by ACCESS CARD or FOB |
|---|---|--|---|
| to ARM The panel must initially be disarmed. | Press (ARM) + (E) (If the ARMING SHORTCUT is enabled, P62E 5E) or press (ARM) + [USER CODE] + (E) or press [USER CODE] + (E) (If CODE ONLY ARMING has been enabled for that user code. Extra Option 4E) |  Press the ON button once. |  Present a Card or Fob twice. (if P301E 2E is on). Or, present a Card or Fob once + press button. (if P301E 3E is on). |
| to DISARM To disarm and/or reset alarms. | Press [USER CODE] + (E) |  Press the OFF button once.* |  Present a Card or Fob once. (if P301E 4E is on). |
| to arm MONITOR MODE Area1 must initially be disarmed. Monitor Mode can be used if the panel is fully disarmed or if only Area2 is armed, see page 20 for more information. | Press (MONITOR) + (E) (If the MONITOR SHORTCUT is enabled, P62E 3E) or press (MONITOR) + [USER CODE] + (E) | ... Or ...  Press either the OFF button or the ON button twice within 4 seconds. (P69E 5E must be on). Or press the AUX button once. (If P120E 3E is on). RK4 radio key only. Radio Key Monitor Arm chirps can be enabled by option P120E 2E, (off by default). | |
| PANIC alarm | Press (*) (*) star keys together or press (*) + [USER CODE] + (E) or press (*) + (E) (If KEYPAD PANIC SHORTCUT is enabled, P62E 4E) |  Press and hold the PANIC button for at least 4 sec. | |
| KEYPAD DUESS Keypad Duress allows the user to send a silent duress report while disarming, (if the system is being monitored by a central station). | Press [5, 6, 8 OR 9] + [USER CODE] + (E) Add one these digits in front of a user code when disarming. This sequence will disarm the panel and send a Duress report by dialler to the central station. (REPORT KEYPAD DUESS must be enabled, P75E 1E) | | |
| EXCLUDE ZONES EXCLUDE + E can only be used when the panel is disarmed. EXCLUDE + CODE + E can be used anytime. | Press (EXCLUDE) + (E) (If the EXCLUDE SHORTCUT is enabled, P62E 2E) then [ZONE No.] + (E) [ZONE No.] + (E) (Enter the zone number/s to be excluded.) then press (E) to exit Exclude mode The Exclude light flashes constantly while zones are excluded. Excluded zones are automatically Included next time the panel is disarmed. | | |

* If a user code is assigned to a radio key and has Extra Option 4E enabled, (CODE ONLY ARMING), then pressing OFF toggles the panel arm/disarm state.

TEMPORARY DAY ZONE (TDZ) operation

While remaining in normal operating mode, the user can add and remove Temporary Day Zones and enable/disable day zone operation.

| | |
|---|--|
| The panel must initially be disarmed. P64E 2E must be on to enable the use of Temporary Day Zones. See page 20 for more information on Temporary Day Zones. | Press (P) + (E) To enter TDZ Selection Mode. then press [ZONE No.] + (E) To select one or more zone to be Temporary Day Zones. then press (E) To save changes and exit TDZ Selection Mode. Press (0) + (E) To enable/disable TDZ operation. Temporary Day Zone mode enabled is indicated by the MONITOR icon flashing (LCD Keypad only). |
|---|--|

PROGRAMMING

QUICK START PROGRAMMING

Use one of these programming summaries for fast setup of your Ness D8 or D16 control panel as a Local, Audible Monitored or Central Station Monitored system.

QUICK START 1 - LOCAL SYSTEM

Quick Start 1 shows you how to change User Code 1 (the Master Code).

QUICK START 1

| STEP | KEYSTROKES | DESCRIPTION | COMMENT |
|------|------------|--|--|
| 1 | P 1 2 3 E* | Enters User Program Mode. | Program light will turn on. |
| 2 | P 2 0 1 E | Selects the option for User Code 1. | The existing code will be displayed on the keypad one digit at a time. |
| 3 | ____ E | Enter your new PIN code followed by E. | Keypad codes can be 3 to 6 digits in length. |
| 4 | ____ E | Enter your new PIN code again. | The new code will be displayed on the keypad one digit at a time. |
| 5 | P E | To exit program mode. | Program light will turn off. |

QUICK START 2 - AUDIBLE MONITORING

Quick Start 2 shows you how to change User Code 1 (the Master Code), enable Audible Monitoring and program a telephone number. This will enable the dialler to report alarms to any telephone including mobile phones.

QUICK START 2

| STEP | KEYSTROKES | DESCRIPTION | COMMENT |
|------|----------------|--|--|
| 1 | P 1 2 3 E* | Enters User Program Mode. | Program light will turn on. |
| 2 | P 0 0 0 0 0 E* | Enters Installer Program Mode. | Program light will flash. |
| 3 | P 2 0 1 E | Selects the option for User Code 1. | The existing code will be displayed on the keypad one digit at a time. |
| 4 | ____ E | Enter your new PIN code followed by E. | Keypad codes can be 3 to 6 digits in length. |
| 5 | ____ E | Enter your new PIN code again. | The new code will be displayed on the keypad one digit at a time. |
| 6 | P 8 6 E 4 E | Turns on option P86E 4E | Enables Audible Monitoring. |
| 7 | P 7 0 E | Selects the option for Telephone Number 1. | |
| 8 | _____ E | Enter the telephone number followed by E. | 30 digits maximum. |
| 9 | P E | To exit program mode. | Program light will turn off. |

QUICK START 3 - CENTRAL STATION MONITORING

Quick Start 3 shows you how to change User Code 1 (the Master Code), enable Central Station Monitoring and program one telephone number. This will enable

QUICK START 3

| STEP | KEYSTROKES | DESCRIPTION | COMMENT |
|------|----------------|--|--|
| 1 | P 1 2 3 E* | Enters User Program Mode. | Program light will turn on. |
| 2 | P 0 0 0 0 0 E* | Enters Installer Program Mode. | Program light will flash. |
| 3 | P 2 0 1 E | Selects the option for User Code 1. | The existing code will be displayed on the keypad one digit at a time. |
| 4 | ____ E | Enter your new PIN code followed by E. | Keypad codes can be 3 to 6 digits in length. |
| 5 | ____ E | Enter your new PIN code again. | The new code will be displayed on the keypad one digit at a time. |
| 6 | P 8 6 E 2 E | Turns on option P86E 2E | Enables Contact ID format. |
| 7 | P 7 0 E | Selects the option for Telephone Number 1. | |
| 8 | _____ E | Enter the telephone number followed by E. | 30 digits maximum. |
| 8 | P 7 2 E | Selects the option for Account Number 1. | |
| 10 | ____ E | Enter the Account number followed by E. | 4 digits maximum. The account number is supplied by your central monitoring station. |
| 11 | P E | To exit program mode. | Program light will turn off. |

* Default Master Code is: 123

* Default Installer Code is: 000000

FACTORY DEFAULTS

Master Code: 123
Installer Code: 000000

INSTALLER PROGRAM MODE

Installer Program Mode allows access to ALL program options.


Note: The panel will remain in Installer Program Mode indefinitely.

USER PROGRAM MODE

User Program Mode allows the owner to program:

- All User Codes
- Entry Exit Times
- Follow Me Telephone number

Note: The panel will automatically drop out of User Program Mode to Operating Mode if no keypad buttons are pressed for 4 minutes.

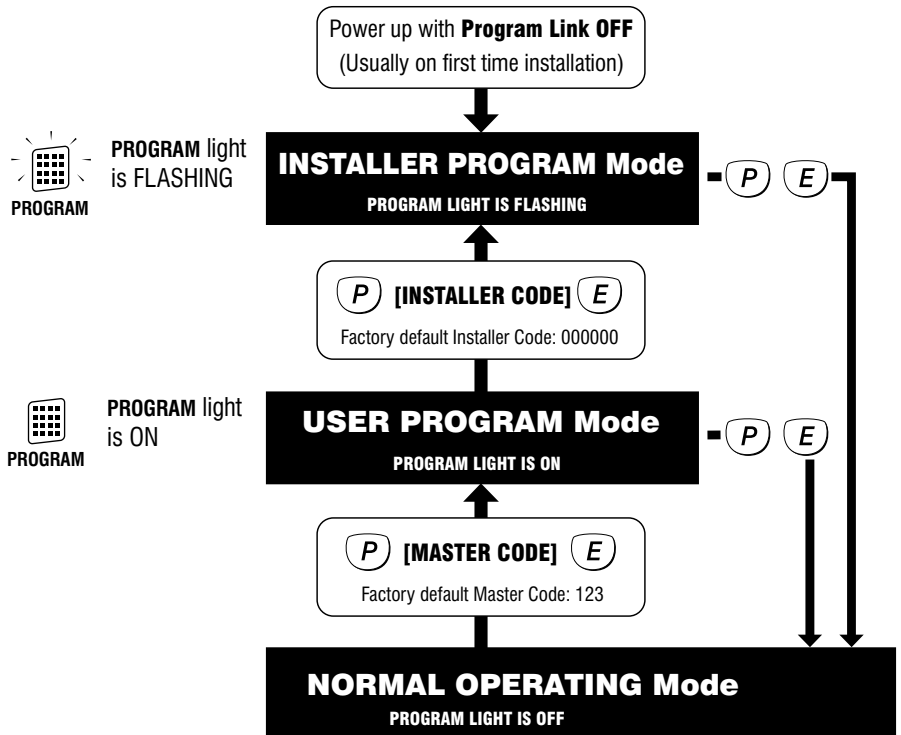

PROGRAM MODE LEVELS

TABLE 4. FLOW CHART

HOW TO ENTER PROGRAM MODE

METHOD 1. FIRST TIME PROGRAMMING – FROM POWER UP

1. Power-up with the PROG link OFF.
(The PROG link (or Box Tamper lead) must be ON in Operating Mode).

METHOD 2. USING THE KEYPAD TO ENTER PROGRAM MODE

The panel must be Disarmed.

1. Press **P** **[MASTER CODE]** **E** The keypad will respond with 3 beeps. This is User Program Mode (PROGRAM light is ON).
2. Press **P** **[INSTALLER CODE]** **E** The keypad will respond with 3 beeps. This is Installer Program Mode (PROGRAM light is FLASHING).

HOW TO EXIT PROGRAM MODE

1. Press **P** then **E**
Exits directly to Operating Mode (PROGRAM light is OFF).



PROGRAMMING

P101E – P116E

P201E – P256E

PROGRAM MODE LEVEL

User, Installer, Remote by PC (except radio keys and access cards).

FACTORY DEFAULT

User Code 1: 123

All other codes: [blank]

NOTES

1. To clear all codes (except the Installer Code), enter P98E in Installer Program mode. This also defaults user code 1 to 123. See Page 51.

2. Open/Close reports are identified by user number when the control panel is base station monitored.

RELATED OPTIONS

Installer Code. See Page 13, How To Enter Program Mode.

Page 53, Programming The Installer Code.

Installer Code default: 000000

RELATED OPTIONS

Programming Radio Codes, page 62

IMPORTANT NOTES

❗ A User Code can be a Keypad Code, Radio Code or Reader Code, but only one type at any one time.

❗ Any user codes not assigned to be Radio Codes or Reader Codes are automatically Keypad Codes.

❗ By factory default all user codes are Keypad Codes.

❗ When a user code is selected as a Radio Code or Reader Code, its Keypad Code (if any) is automatically deleted. The same applies to Radio Codes and Reader Codes - their codes are auto deleted when the code is changed to any other type.

❗ User Code 1 is the Master Code and is always a keypad code and cannot be programmed to be a Radio Code or Reader Code.

TIP: The Ness D8x/D16x has 56 user codes which are programmed using a new set of options as per this table. Experienced users can still use option numbers P11E – P25E, but only for programming user codes 1–15.


RADIO PROGRAMMING See pages 62, 63.

USER CODES

D8x and D16x version 5 and later have 56 User Codes which are used to operate the panel by a variety of methods.

Each User Code can be assigned to either a KEYPAD CODE or a RADIO KEY or an ACCESS CARD.

KEYPAD (PIN) CODES



Up to 56 Keypad Codes can be used at up to 3 wired keypads for controlling all panel functions including Arming/Disarming, Monitor Mode, Panic, memory recall and much more.

- Keypad Codes can be 3 to 6 digits in length and can be individually programmed and deleted.

- Keypad Codes can optionally be programmed to be "Arm Only" codes.
- User Code 1 is also the Master Code which is used to enter Client Program mode.
- All 56 User Codes are Keypad Codes by default. User Codes can be programmed to be Radio Codes or Access Cards as required.

NOTES

1. Keypad Codes beginning with 0 (zero) can be programmed but they will not operate the panel. This is an alternative method for disabling user codes. The MEMORY E function is recommended for deleting user codes. See below.

2. All codes must be unique to each other. Codes are rejected if already used. Some codes that are similar to existing codes may also be rejected.

PROGRAMMING KEYPAD CODES

Press P [Any user option number from 201 to 256] E (The existing code is displayed one digit at a time).

Press [NEW CODE] E [NEW CODE AGAIN] E (The new code is displayed).

Example: To program the Master Code to be 1234.

Press P201E 1234E (1 beep) 1234E (3 beeps)

❗ When replacing a Keypad Code, the old code does not need to be deleted first. The new code will overwrite the old code.

DELETING KEYPAD CODES

To delete a User Code without programming a new code, press the MEMORY key in place of the code.

Example: To delete User Code 2, press P202E MEMORY E

❗ A keypad code only needs to be deleted if you're not replacing it with a new code.

ARM ONLY CODES

'Arm Only' is an extra option for user codes. See next page for further information.

User Codes 2–56 can optionally be programmed as Arm Only Codes, which can Arm but cannot Disarm the panel. (Used for cleaners, temporary staff, etc).

Example: To program User Code 2 to be 1234 and an Arm Only code.

Press P202E EXCLUDE E 3E EXCLUDE E 1234E 1234E

(EXCLUDE E enters Extra Options mode, 3E enables the Arm Only option, then EXCLUDE E toggles back to normal user code program mode.)

When the code is viewed in program mode, the ARMED icon is briefly displayed before the digits of the code.

To disable the Arm Only feature for a keypad code, simply enter the option for that code, press EXCLUDE E to view Extra Options then press 3 E without re-entering a new code. This retains the existing code and toggles off the Arm Only feature.

❗ The Arm Only feature also applies to Radio Keys and Access Cards.

❗ Arm Only codes can also arm the panel directly from Monitor Mode. (Normally, user codes can arm the panel only if it is fully disarmed).

❗ Arm Only codes can also arm Monitor Mode as normal.

❗ Radio Keys programmed as an Arm Only can toggle the armed/disarmed state of the panel using the OFF button on the radio key.

USER CODES

ASSIGNING EXTRA OPTIONS

Each user code has several "extra options" which can be assigned when programming the code or at any time later.

In **NORMAL USER CODE PROGRAMMING mode**, (Exclude light is off), you can do the following:

- Program Keypad Codes (see page 14).
- Program Radio Codes (see page 63).
- Program Access cards (see page 65).
- View radio signal strength (see page 60).

In **EXTRA OPTIONS mode**, (Exclude light is on), you can assign several powerful functions to each user code. See below.

To view and program the Extra Options:

1. Select a User Code (P201–P256E). *The Exclude light is OFF.*
2. Press EXCLUDE E. *The Exclude light turns ON.*

The following Extra Options can now be changed:

- 1E AREA 1 CODES.** Assign/remove user codes to Area 1. (By default all user codes are assigned to Area 1.)
- 2E AREA 2 CODES.** Assign/remove user codes to Area 2.
 - ❗ User codes can be assigned to Area 1, Area 2, both areas or no areas.
 - ❗ An Area will not arm unless it has one or more zones assigned to it (P45E, P46E).
 - ❗ If a code is not assigned to any Area/s, the code can be used for special functions such as to trigger outputs.
- 3E ARM ONLY.** User Codes 2–56 can be programmed to Arm but not Disarm the panel. (See page 14).
- 4E "CODE ONLY" ARMING.** Enables selected user codes to allow "code only arming". Arming can then be done either with or without the use of the arm key on the keypad.
 - ❗ In the case of radio codes the radio key OFF button will toggle the armed state of the area assigned to the radio key.
 - ❗ If the User code is assigned to both AREA 1 and AREA 2. If AREA 1 is already armed, then entering the code will disarm AREA 1 - but arm AREA 2.

If the intention is to either ARM or DISARM both areas using this code then ARM + [code] must be used first to arm both areas. Once both are armed they can be disarmed.

 - ❗ If in Monitor mode, then the action is to exit Monitor mode.
 - ❗ Codes selected for Code Only Arming and not assigned to any areas are automatically REX codes. See page 69.
- 5E RADIO CODE.** Enables selected user codes as Radio Codes for operation by Ness Radio Key or Radio Keypad. (Page 63 - how to program Radio Codes).
- 6E READER CODE 1.** Enables user codes as Access Control codes assigned to Reader 1. (Page 65 - Access Cards).
- 7E READER CODE 2.** Enables user codes as Access Control codes assigned to Reader 2. (Page 65 - Access Cards).
- 8E READER CODE 3.** Enables user codes as Access Control codes assigned to Reader 3. (Page 65 - Access Cards).
 - ❗ A user code can be assigned to any one, two or all three access control readers.

**USER CODE
OPTIONS TABLE**

EXCLUDE +E toggles EXTRA OPTIONS MODE.
The Exclude light indicates this mode is on/off.
(Installer Program mode only)

| USER CODE | OPTION NO. | KEYPAD PIN | 1E AREA 1 CODE | 2E AREA 2 CODE | 3E ARM ONLY | 4E "CODE ONLY" ARM (REX CODE) | 5E RADIO CODE | 6E Reader Code 1 | 7E Reader Code 2 | 8E Reader Code 3 |
|------------|------------|------------|----------------|----------------|-------------|-------------------------------|---------------|------------------|------------------|------------------|
| 1 (Master) | P201E | 123 | ON | ON | | | | | | |
| 2 | P202E | | ON | | | | | | | |
| 3 | P203E | | ON | | | | | | | |
| 4 | P204E | | ON | | | | | | | |
| 5 | P205E | | ON | | | | | | | |
| 6 | P206E | | ON | | | | | | | |
| 7 | P207E | | ON | | | | | | | |
| 8 | P208E | | ON | | | | | | | |
| 9 | P209E | | ON | | | | | | | |
| 10 | P210E | | ON | | | | | | | |
| 11 | P211E | | ON | | | | | | | |
| 12 | P212E | | ON | | | | | | | |
| 13 | P213E | | ON | | | | | | | |
| 14 | P214E | | ON | | | | | | | |
| 15 | P215E | | ON | | | | | | | |
| 16 | P216E | | ON | | | | | | | |
| 17 | P217E | | ON | | | | | | | |
| 18 | P218E | | ON | | | | | | | |
| 19 | P219E | | ON | | | | | | | |
| 20 | P220E | | ON | | | | | | | |
| 21 | P221E | | ON | | | | | | | |
| 22 | P222E | | ON | | | | | | | |
| 23 | P223E | | ON | | | | | | | |
| 24 | P224E | | ON | | | | | | | |
| 25 | P225E | | ON | | | | | | | |
| 26 | P226E | | ON | | | | | | | |
| 27 | P227E | | ON | | | | | | | |
| 28 | P228E | | ON | | | | | | | |
| 29 | P229E | | ON | | | | | | | |
| 30 | P230E | | ON | | | | | | | |
| 31 | P231E | | ON | | | | | | | |
| 32 | P232E | | ON | | | | | | | |
| 33 | P233E | | ON | | | | | | | |
| 34 | P234E | | ON | | | | | | | |
| 35 | P235E | | ON | | | | | | | |
| 36 | P236E | | ON | | | | | | | |
| 37 | P237E | | ON | | | | | | | |
| 38 | P238E | | ON | | | | | | | |
| 39 | P239E | | ON | | | | | | | |
| 40 | P240E | | ON | | | | | | | |
| 41 | P241E | | ON | | | | | | | |
| 42 | P242E | | ON | | | | | | | |
| 43 | P243E | | ON | | | | | | | |
| 44 | P244E | | ON | | | | | | | |
| 45 | P245E | | ON | | | | | | | |
| 46 | P246E | | ON | | | | | | | |
| 47 | P247E | | ON | | | | | | | |
| 48 | P248E | | ON | | | | | | | |
| 49 | P249E | | ON | | | | | | | |
| 50 | P250E | | ON | | | | | | | |
| 51 | P251E | | ON | | | | | | | |
| 52 | P252E | | ON | | | | | | | |
| 53 | P253E | | ON | | | | | | | |
| 54 | P254E | | ON | | | | | | | |
| 55 | P255E | | ON | | | | | | | |
| 56 | P256E | | ON | | | | | | | |

You can use this table as a programming record.

PROGRAMMING

| Option No. | Description | Default | Note |
|------------|--------------------|---------|-----------------|
| P26E | ENTRY DELAY TIME 1 | 20 | seconds |
| P27E | ENTRY DELAY TIME 2 | 6 | x10 = 60seconds |
| P28E | EXIT DELAY TIME | 60 | seconds |
| P29E | SIREN RESET TIME | 5 | minutes |

P26E

PROGRAM MODE LEVEL
User, Installer, Remote by PC.

FACTORY DEFAULT
20 (seconds)

NOTES
Programmable from 1 – 99 seconds.

RELATED OPTIONS
P120E 7E Entry Delay Extender

ENTRY DELAY TIME1

The Entry Delay Time 1 is the time given to disarm the panel after a Entry Delay 1 zone is unsecured.

The Entry Delay Time1 setting is from 1 to 99 seconds in 1 second increments. Entry Delay Time1 can be up to a maximum of 990 seconds by enabling options P120E 7E.

PROGRAMMING SEQUENCE:

P26E existing time is displayed one digit at a time

[ENTER NEW TIME] E new time is displayed one digit at a time

EXAMPLE: To program Entry Delay Time1 to be 30 seconds: P26E 30E

P27E

PROGRAM MODE LEVEL
User, Installer, Remote by PC.

FACTORY DEFAULT
6 (= 60 seconds)

NOTES
Programmable from 10 – 990 seconds.

ENTRY DELAY TIME2

The Entry Delay Time2 is the time given to disarm the panel after an Entry Delay2 zone is unsecured.

The Entry Delay Time2 setting is from 10 to 990 seconds (1 – 99).

Note: The Entry Delay Time2 is set in 10 second increments so that a value setting of 6 means a 60 seconds delay.

PROGRAMMING SEQUENCE:

P27E existing time is displayed one digit at a time

[ENTER NEW TIME] E new time is displayed one digit at a time

EXAMPLE: To program Entry Delay Time2 to be 600 seconds: P27E 60E

P28E

PROGRAM MODE LEVEL
User, Installer, Remote by PC.

FACTORY DEFAULT
60 (seconds)

NOTES
Programmable from 1 – 99 seconds

RELATED OPTIONS
P62E 8E Exit Time x10

EXIT DELAY TIME

The Exit Delay Time is the time given to secure and depart the premises after the panel is armed. All zones (except 24hr zones) are inactive during the Exit Delay time.

The Exit Delay Time setting is from 1 to 99 seconds in 1 second increments.

PROGRAMMING SEQUENCE:

P28E existing time is displayed one digit at a time

[ENTER NEW TIME] E new time is displayed one digit at a time

EXAMPLE: To program Exit Delay to be 85 seconds: P28E 85E

P29E

PROGRAM MODE LEVEL
Installer, Remote by PC.

FACTORY DEFAULT
5 (minutes)

NOTES

- Programmable from 1 – 99 minutes.
- Siren times of longer than 5 minutes are contrary to noise pollution regulations in most areas.

SIREN RESET TIME

The Siren Reset Time sets the duration of the Siren and Reset outputs.

The Siren Reset Time setting is from 1 to 99 minutes in 1 minute increments.

PROGRAMMING SEQUENCE:

P29E existing time is displayed one digit at a time

[ENTER NEW TIME] E new time is displayed one digit at a time

EXAMPLE: To program Siren Time to be 4 minutes: P29E 4E

P30E – P36E

PROGRAM MODE LEVEL

Installer, Remote by PC.

FACTORY DEFAULT

Normal sensitivity.
P30E, all zones = ON.

NOTES

- Sensitivity can be individually programmed for each zone.
- Zones are allocated to one sensitivity level at any one time. Turning a zone ON in a sensitivity level, turns the zone OFF in any other sensitivity level.
- To revert zone sensitivity back to Normal, turn on the required zone/s at P30E.

i Sensitivity Level "Extreme" (P31E) is provided as a guide to the upper limit and should **NOT BE USED**.

i For compatibility with existing installations, the sensitivity levels P31E to P36E are identical to previous versions of D8/D16.

VIBRATION SENSITIVITY

Each zone has individually adjustable sensitivity for connection of Nessensor Vibration Sensors. Zone sensitivity is adjusted by toggling zones ON in options P30E to P36E.

P30E is Normal Sensitivity, vibration analyser disabled. This is used for normal alarm devices. Zone response time, 200ms.

P31–36E are the options for the 6 levels of vibration sensitivities. P31E is the most sensitive setting.

PROGRAMMING SEQUENCE:

P [30–38] E zones are displayed [Zone No] E

**EXAMPLE: To program zones 2 and 3 to be Medium sensitivity:
P34E 2E 3E the keypad display will show zone lights 2 & 3 on.**

| Option No. | Description | ZONES 1–8 (D8 & D16) | | | | | | | ZONES 9–16 (D16) | | | | | | | | |
|------------|--------------------|----------------------|----|----|----|----|----|----|------------------|----|----|----|----|----|----|----|----|
| | | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 |
| P30E | NORMAL | ON | ON | ON | ON | ON | ON | ON | ON | ON | ON | ON | ON | ON | ON | ON | ON |
| P31E | Vibration EXTREME* | | | | | | | | | | | | | | | | |
| P32E | Vibration HIGHEST | | | | | | | | | | | | | | | | |
| P33E | Vibration HIGH | | | | | | | | | | | | | | | | |
| P34E | Vibration MEDIUM | | | | | | | | | | | | | | | | |
| P35E | Vibration LOWER | | | | | | | | | | | | | | | | |
| P36E | Vibration LOWEST | | | | | | | | | | | | | | | | |
| P37E | 1 second ZONES | | | | | | | | | | | | | | | | |
| P38E | 3 second ZONES | | | | | | | | | | | | | | | | |

* Extreme sensitivity (P31E) should not be used. It is provided as a guide only




ADJUSTING NESSENSORS

Nessensors are sensitive to high frequencies and insensitive to low frequencies. Therefore it is not necessary to apply much force to the protected structure, rather a very rapid succession of blows.

The sensitivity has been correctly adjusted when a single blow applied with a soft object (e.g. by hand) does not cause an alarm whereas a rapid series of blows (using a metal object such as a screwdriver blade) will cause an alarm.

Ness NESSENSOR™ Vibration Sensor Part No. VIB100

In addition to zone sensitivity adjustment, the overall sensitivity of the Nesssensor can be adjusted by rotating the body of the Nesssensor within its bracket.

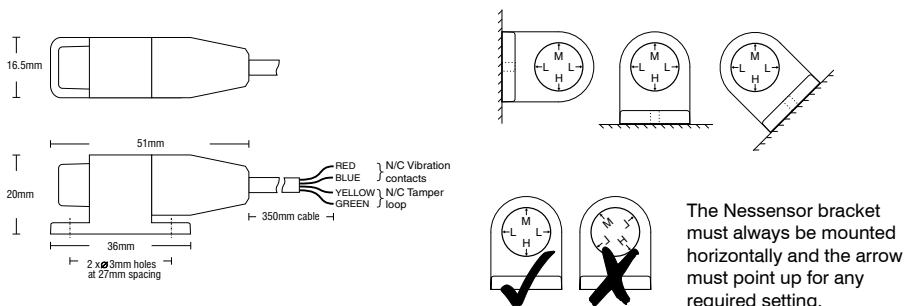

P37E – P38E

PROGRAM MODE LEVEL

Installer, Remote by PC.

FACTORY DEFAULT

all off

NOTES

- A Long Response Zone cannot be a Normal Zone or Vibration zone at the same time.
- To convert zone/s back to a Normal Zone, turn on the required zone/s at P30E.

RELATED OPTIONS

P301E 5E-7E Request To Exit (REX)

LONG RESPONSE ZONES

Long Response Zones are normal alarm zones with a long reaction time. Individual zones can be programmed to have either a 1 second response (P37E) or 3 second response (P38E).

This is useful where zones 5, 6 or 7 have been programmed as REX inputs for access control purposes, (P301E 5E-7E). To prevent accidental door opening, the REX button then must be pressed and held for 1sec or 3sec, as programmed.

PROGRAMMING SEQUENCE:

P37E or P38E [Zone No]E toggles zones ON and OFF

PROGRAMMING

| Option No. | Description | ZONES 1-8 (D8 & D16) | | | | | | | | ZONES 9-16 (D16) | | | | | | | |
|------------|---------------------------|----------------------|----|----|----|----|----|----|----|------------------|----|----|----|----|----|----|----|
| | | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 |
| P39E | DOUBLE TRIGGER zones | | | | | | | | | | | | | | | | |
| P40E | INSTANT zones | | | ON | ON | ON | ON | ON | ON | ON | ON | ON | ON | ON | ON | ON | ON |
| P41E | ENTRY DELAY 1 zones | ON | | | | | | | | | | | | | | | |
| P42E | HANDOVER zones | | ON | | | | | | | | | | | | | | |
| P43E | ENTRY DELAY 2 zones | | | | | | | | | | | | | | | | |
| P44E | LOCKOUT zones (Reset O/P) | ON | ON | ON | ON | ON | ON | ON | ON | ON | ON | ON | ON | ON | ON | ON | ON |
| P45E | AREA 1 zones | ON | ON | ON | ON | ON | ON | ON | ON | ON | ON | ON | ON | ON | ON | ON | ON |
| P46E | AREA 2 zones | | | | | | | | | | | | | | | | |
| P51E | MONITOR zones | | | | | | | | | | | | | | | | |
| P52E | 24HR zones | | | | | | | | | | | | | | | | |
| P53E | DAY zones | | | | | | | | | | | | | | | | |

ZONE DELAY TYPES
 Only one option per zone can be selected. For example; a zone cannot be instant and delayed at the same.

P39E

PROGRAM MODE LEVEL
 Installer, Remote by PC.

FACTORY DEFAULT
 All OFF: No Double Trigger zones.

NOTES
 • Double Trigger is useful for preventing unwanted alarms from zones in harsh environments such as sheds and garages.

• **0E** will turn all selections OFF.
MEMORY E will turn all selections ON.

DOUBLE TRIGGER ZONES

Zones programmed to Double Trigger will recognise an alarm condition if:

- The zone has been triggered twice within a 4 minute period.
- If any 2 zones (both programmed for double trigger), each trigger once.
- The zone is left unsealed for longer than 15 seconds.

PROGRAMMING SEQUENCE:

P39E [Zone No]E toggles the options ON and OFF
 [Zone No] OFF: The zone is not a Double Trigger zone
 [Zone No] ON: The zone is a Double Trigger zone

P40E

PROGRAM MODE LEVEL
 Installer, Remote by PC.

FACTORY DEFAULT
 D8, 3E-8E ON: Zones 3-8 are Instant.
 D16, 3E-16E ON: Zones 3-16 are Instant.

NOTES
 • When a zone is selected for this type, it is automatically deselected from any other zone type in the DELAY GROUP.

INSTANT ZONES

Instant Zones operate only in the Armed state. When Armed at the expiry of exit time, Instant Zones will activate assigned outputs immediately when triggered.

P40E [Zone No]E turns the options ON
 [Zone No] ON: The zone is an Instant Zone
 To deselect the option, select a different zone type in the DELAY GROUP.

P41E

PROGRAM MODE LEVEL
 Installer, Remote by PC.

FACTORY DEFAULT
 1E ON: Zone 1 has Entry Delay1.

NOTES
 • The keypad sonalert will beep during Entry Delay as a reminder to disarm the panel. Entry beeps can be disabled by program option P60E 1E.
 • When a zone is selected for this type, it is automatically deselected from any other zone type in the DELAY GROUP.

ENTRY DELAY1 ZONES

Entry Delay1 zones operate only in the Armed state. When Armed, at the expiry of exit time these zones will activate the Entry Delay Timer1 (P26E) when they are triggered. If the panel is not disarmed before the expiry of the Entry Delay Timer1, the alarm outputs will be activated.

P41E [Zone No]E turns the options ON
 [Zone No] ON: The zone is an Entry Delay1 zone
 To deselect the option, select a different zone type in the DELAY GROUP.

P42E

PROGRAM MODE LEVEL
Installer, Remote by PC.

FACTORY DEFAULT
2E ON: Zone 2 is a Handover zone.

NOTES
• When a zone is selected for this type, it is automatically deselected from any other zone type in the DELAY GROUP.

P43E

PROGRAM MODE LEVEL
Installer, Remote by PC.

FACTORY DEFAULT
All OFF: No zones have Entry Delay2.

NOTES

P44E

PROGRAM MODE LEVEL
Installer, Remote by PC.

FACTORY DEFAULT
All ON: All zones are Lockout zones.

NOTES
• The SIREN output always locks out.
• **0E** will turn all selections OFF.
MEMORY E will turn all selections ON.

RELATED OPTIONS
P60E 4E Tamper Reset Lockout.
P78E Multiple alarm reports.

HANDOVER ZONES

Handover zones are delayed only if entry is made through an Entry Delay zone first. If a Handover zone is triggered first, the zone behaves as an instant zone. Normally, the “point of entry” zone should be Delay zone, with any other zones in the entry path programmed as Handover zones.

PROGRAMMING SEQUENCE:

P42E [Zone No]E turns the options ON
P42E [Zone No]E ON: The zone is a Handover zone
To deselect the option, select a different zone type in the DELAY GROUP.

ENTRY DELAY2 ZONES

When an Entry Delay2 zone is triggered, it has entry delay as set by the Entry Delay Time2 (P27E).

PROGRAMMING SEQUENCE:

P43E [Zone No]E turns the options ON
P43E [Zone No]E ON: The zone is an Entry Delay2 zone
To deselect the option, select a different zone type in the DELAY GROUP.

RESET LOCKOUT ZONES

All zones and tamper input can be programmed to Lockout, i.e. cause the RESET OUTPUT to sound only once whilst the panel is armed.
The RESET OUTPUT is then locked out for that alarmed zone until entering a valid code has reset the panel. If using area partitioning, disarming either partition resets the zone lockout for both partitions.

PROGRAMMING SEQUENCE:

P44E [Zone No]E toggles the options ON and OFF
P44E [Zone No]E OFF: The zone is not a Lockout zone
P44E [Zone No]E ON: The zone is a Lockout zone

AREA PARTITIONING

| ASSIGNING ZONES TO AREAS | | ZONES 1–8 (D8 & D16) | | | | | | | | ZONES 9–16 (D16) | | | | | | | |
|--------------------------|--------------|----------------------|----|----|----|----|----|----|----|------------------|----|----|----|----|----|----|----|
| | | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 |
| P45E | AREA 1 ZONES | ON | ON | ON | ON | ON | ON | ON | ON | ON | ON | ON | ON | ON | ON | ON | ON |
| P46E | AREA 2 ZONES | | | | | | | | | | | | | | | | |

P45E, P46E

PROGRAM MODE LEVEL
Installer, Remote by PC.

FACTORY DEFAULT
No zones assigned to Area 2.

NOTES
• For options P45E and P46E, **[Zone No] E** toggles the selection ON and OFF.
• Zones assigned to BOTH areas become Common zones.
• If no Area operation is required, assign all zones to Area 1. (This is also the factory default).

ASSIGNING ZONES TO AREAS

Assign (or remove) zones that will operate in Area 1 and/or Area 2.

PROGRAMMING SEQUENCE:

P45E [Zone No]E toggles the options ON and OFF for Area1
[Zone No] OFF: The zone is not in Area1
[Zone No] ON: The zone is in Area1
P46E [Zone No]E toggles the options ON and OFF for Area2
[Zone No] OFF: The zone is not in Area2
[Zone No] ON: The zone is in Area2

EXAMPLE:

To program zones 1–4 for Area 1 and zones 1, 5–8 for Area 2.
In this example, we have assigned zone 1 to both areas, so it becomes a Common Zone.

P45E use the **[Zone No] E** sequence to turn ON only zones 1–4.
P46E use the **[Zone No] E** sequence to turn ON zone 1 and zones 5–8.

PROGRAMMING

AREA PARTITIONING

DEFINITION

Area Partitioning allows the control panel zones to be split into two partitions; Area1 and Area2. The panel then effectively operates as two separate systems sharing only the siren outputs and dialler.

COMMON AREA ZONES

Zones assigned to both Areas are armed only when Area1 and Area2 are both armed. This allows the Common Area zone/s to be shared by both Areas.

For example, Office A and Office B operate as separate areas but the entrance foyer used by both offices is assigned to both areas meaning it will automatically arm when both Areas have armed. The Common Area then automatically disarms when either Area1 or Area2 disarms.

USER CODE ASSIGNMENT

A User Code assigned to an Area can arm and disarm only that Area. User Codes assigned to both Areas will operate both Areas simultaneously.

OPERATION

Arming and disarming is carried out as normal from a single keypad or separate keypads installed in both areas or by Radio Key.

Area operation only applies to zones when they are in the armed state. This means that Day zones and 24hr zones are independent of area operations.

AREA PARTITIONING & MONITOR MODE

The panel can be armed in MONITOR mode if Area2 is already armed on these conditions:

1. Area 1 must be OFF.
2. Area 2 must be armed first, and then Monitor armed – not the reverse.
3. Zones assigned to both Monitor mode (P51E) and to Area 2 (P46E) will act as Monitor zones when both Area 2 and Monitor are armed.
4. Zones must be assigned to P51E to allow Monitor arm.
5. User codes assigned only to Area2 will not disarm Monitor mode.

Note: Monitor arming when AREA 2 is armed cannot be done by Radio Key (double OFF button) or by keyswitch.

Note: Monitor Mode is not available when Area 1 is armed.

MONITOR MODE

Monitor Mode, (or Home Mode), allows selected zones to be armed whilst the system is disarmed. For example, this is often used to arm door and windows sensors overnight, while allowing free movement within the house.

- Monitor Mode will not work if Area 1 is armed.
- Zones which are to be armed in Monitor Mode are selected using option P51E.
- Monitor Mode can be armed by:
Keypad: MONITOR+ [code] +E or MONITOR+E
Radio Key: See option P69E 5E
Access Card:
- Audible outputs in Monitor Mode (set by options P63E 1E-4E) are independent of audible outputs in fully armed mode.
- If dialler reporting is enabled, Monitor Mode alarms will be reported as normal providing that:
 - a/ The zone/s are selected to report alarms by option P74E.
 - b/ Options P64E 1E & 3E are off. (Brief Monitor Alarm, Monitor Entry Delay2).
- Zones selected to be Entry Delay1 zones also have entry delay in Monitor Mode.
- If Monitor Zones Entry Delay2 (P64E 3E) is enabled, then *all* Monitor zones will have entry delay as set by P27E.
- Monitor Mode will not arm if there are no Monitor zones programmed, (P51E).

TEMPORARY DAY ZONES

The Temporary Day Zone feature allows easy and flexible Day Zone selection and operation.

While remaining in normal operating mode, the user can add and remove Temporary Day Zones and enable/disable day zone operation using simple key strokes.

TO ENABLE TEMPORARY DAY ZONES

To enable Temporary Day Zone selection and operation, the Brief Day Alarm feature (installer option P64E 2E) must be ON. If P64E 2E is OFF, the Temporary Day Zone feature will be unavailable but Permanent Day Zones will still operate and will sound the programmed output while the zone is unsealed.

P64E 2E is OFF by default.

USER COMMANDS (In normal Operating Mode).

(P) + (E) Selection Mode. Enter **P** followed by **E** when in operating mode to enter Temporary Day Zone selection mode.

[Zone No.] + (E) Zone Selection. To select or deselect zones to be Temporary Day

Zones. The selected zones are indicated by the corresponding zone number.

Permanent Day Zones, (set by installer option P53E), are not displayed in selection mode. Permanent Day Zones can be selected as Temporary Day Zones but this has no effect as those zones are already day zones.

(E) Saves changes and returns to normal operating mode.

(O) + (E) Enables and Disables Day Mode. This enables/disables both Temporary and Permanent Day Zones.

INDICATION

The MONITOR icon flashes continuously when Temporary Day Mode is enabled. (LCD keypad only).

OPERATION

When Day Mode is enabled, any unsealed day zone will sound the programmed output for 2 seconds. When Day Mode is disabled, an unsealed day zone will simply be indicated on the keypad as an unsealed zone.

AUX 2 OPTION

When the Temporary Day Zone feature is enabled, the installer option P63E 6E selects Aux 2 output instead of the strobe output. This allows a remote warning device such as a buzzer to be connected for day zone warning. This may be needed if an additional audible day zone warning is needed, although the keypad sonalert, (P63E 7E), is more than adequate in most cases.

RELATED OPTIONS

P64E 2E, Brief Day Alarm. Turn this option on to enable Temporary Day Zones. Factory default = OFF.

P63E 5E, Day Mode to Reset output.

P63E 6E, Day Mode to Strobe output.

If P64E 2E is ON, then this option sends day alarms to the AUX 2 output.

P63E 7E, Day Mode to Sonalert.

P63E 8E, Day Mode to Siren output.

P53E, Permanent Day Zone selection.

(I) Temporary Day Zone selections will be lost if the panel is powered down or reset, but are not affected by arming/disarming or entering program mode.

P47E, P48E, P49E, P50E

See page 14, 15 programming User Codes.

P51E

PROGRAM MODE LEVEL

Installer, Remote by PC.

FACTORY DEFAULT

all OFF: No Monitor zones.

NOTES

By default, all Monitor zones have Entry Delay2, see P64E 3E. If this option is off Monitor zones have normal entry delay attributes set by options P40E–P42E.

RELATED OPTIONS

P63E Monitor Mode output mapping.

P64E 1E Brief Monitor alarm.

P64E 3E Monitor zones have Entry Delay2.

P69E 3E Quiet Monitor siren.

P69E 5E Radio Key ON or OFF button arms Monitor Mode.

P120E 2E Monitor arm chirps by radio key.

P120E 3E Radio Key AUX button arms monitor mode.

P120E 6E Smart Beeps for Monitor and Day zones.

P52E

PROGRAM MODE LEVEL

Installer, Remote by PC.

FACTORY DEFAULT

All OFF: No 24hr zones.

NOTES

- The Tamper input is always a 24hr zone.
- For silent 24hr zones, deselect the zones from options P54E-P57E (Reset, Strobe, Sonalert & Siren).
- To change a 24hr zone to any other zone type, the zone must also be re-assigned to an AREA (P45E or P46E).

P53E

PROGRAM MODE LEVEL

Installer, Remote by PC

FACTORY DEFAULT

all OFF: No Day zones

RELATED OPTIONS

P63E 5E-8E Day zone output mapping.

P64E 2E Brief Day Mode alarm.

P120E 6E Smart Beeps for Monitor and Day zones.

TYPICAL USES FOR DAY ZONES: Instant alert when a delivery door is opened, doorwary alert for a shop.

ASSIGNING USER CODES TO AREAS

Options P201E–P256E are now used for assigning user codes to areas.

(Experienced users can still use options P47E–P50E for this function, but only up to user code 15).

MONITOR ZONES

Monitor zones allow you to Arm selected zones while others are ignored. Typically used for perimeter zones such as windows and doors while you are at home.

For example: upstairs zones are Disarmed while downstairs zones are Armed in Monitor mode.

PROGRAMMING SEQUENCE:

P51E [Zone No]E toggles the options ON and OFF

P51E [Zone No]E OFF: The zone is not a Monitor zone

P51E [Zone No]E ON: The zone is a Monitor zone

NOTE: Zones selected to Report Zone Alarms (P74E) will by default report alarms in Monitor Mode, (if the dialler is enabled).

The Brief Monitor Alarm option P64E 1E, when enabled, prevents monitor alarms from reporting.

See page 20 for Monitor operation.

24hr ZONES

24hr Zones operate at all times regardless of the mode of panel operation, i.e. Armed, Disarmed or Monitor. When alarmed, these zones will activate assigned outputs immediately. To reset those alarms a valid user code must be entered.

Selecting a zone as 24hr will override any other zone type setting such as Instant, Delayed or Handover. 24hr zones are independent of Area operation. All other zone types must be assigned to at least one Area to become active.

PROGRAMMING SEQUENCE:

P52E [Zone No]E toggles the options ON and OFF

[Zone No] OFF: The zone is not a 24hr zone

[Zone No] ON: The zone is a 24hr zone

DAY ZONES

Day Zones operate when the panel is fully disarmed, i.e. when Area 1, Area 2 and Monitor are all off. When alarmed, these zones will activate their assigned outputs instantly.

The outputs mapped to the Day Zone will turn on while the zone is unsealed. Turn P64E 2E on, to limit Day Zone alarms to 2 seconds.

The Temporary Day Zones feature allows day mode to be easily enabled/disabled and day zones added/removed by the user from any keypad.

PROGRAMMING SEQUENCE:

P53E [Zone No]E toggles the options ON and OFF

[Zone No] OFF: The zone is not a Day zone

[Zone No] ON: The zone is a Day zone

See page 20 for information on TEMPORARY DAY ZONES.

PROGRAMMING

ZONE TO OUTPUT MAPPING

When a zone alarms, it can turn on any or all of the following 6 outputs: Sonalert, Strobe, Siren, Reset, AUX1, AUX2.

The programming is selected with options P54E – P59E. Simply set the zone number to the output to select it. The zone LED will indicate if the zone is selected.

The Tamper Input and the Keypad Panic can be programmed to turn on the Reset, Strobe, Sonalert and Siren by using option P61E.



Zone To Output Mapping applies to zones when the panel is in the Armed or 24hr state. For MONITOR and DAY mode Output Mapping – see Option P63E 1E–8E, page 28.

MAPPING ZONES TO OUTPUTS

| Option No. | Description | ZONES 1–8 (D8 & D16) | | | | | | | | ZONES 9–16 (D16) | | | | | | | |
|------------|----------------|----------------------|----|----|----|----|----|----|----|------------------|----|----|----|----|----|----|----|
| | | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 |
| P54E | RESET Zones | ON | ON | ON | ON | ON | ON | ON | ON | ON | ON | ON | ON | ON | ON | ON | ON |
| P55E | STROBE Zones | ON | ON | ON | ON | ON | ON | ON | ON | ON | ON | ON | ON | ON | ON | ON | ON |
| P56E | SONALERT Zones | ON | ON | ON | ON | ON | ON | ON | ON | ON | ON | ON | ON | ON | ON | ON | ON |
| P57E | SIREN Zones | ON | ON | ON | ON | ON | ON | ON | ON | ON | ON | ON | ON | ON | ON | ON | ON |
| P58E | AUX1 Zones | | | | | | | | | | | | | | | | |
| P59E | AUX2 Zones | | | | | | | | | | | | | | | | |

P54E

PROGRAM MODE LEVEL

Installer, Remote by PC.

FACTORY DEFAULT

All ON: All zones trigger Reset output.

NOTES

- 0E will turn all selections OFF.
- MEMORY E will turn all selections ON.

RESET OUTPUT ZONES

Selects the zones to trigger the Reset output.

PROGRAMMING SEQUENCE:

P54E [Zone No]E toggles the options ON and OFF

[Zone No] OFF: The zone will not trigger the Reset output

[Zone No] ON: The zone will trigger the Reset output

P55E

PROGRAM MODE LEVEL

Installer, Remote by PC.

FACTORY DEFAULT

all ON: All zones trigger Strobe output.

NOTES

- 0E will turn all selections OFF.
- MEMORY E will turn all selections ON.

STROBE OUTPUT ZONES

Selects the zones to trigger the Strobe output.

PROGRAMMING SEQUENCE:

P55E [Zone No]E toggles the options ON and OFF

[Zone No] OFF: The zone will not trigger the Strobe output

[Zone No] ON: The zone will trigger the Strobe output

P56E

PROGRAM MODE LEVEL

Installer, Remote by PC.

FACTORY DEFAULT

All ON: All zones sound the Keypad Sonalert.

NOTES

- 0E will turn all selections OFF.
- MEMORY E will turn all selections ON.

KEYPAD SONALERT ZONES

Selects the zones which will sound the Keypad Sonalert (beeper).

PROGRAMMING SEQUENCE:

P56E [Zone No]E toggles the options ON and OFF

[Zone No] OFF: The zone will not trigger the Keypad Sonalert

[Zone No] ON: The zone will trigger the Keypad Sonalert

P57E

PROGRAM MODE LEVEL

Installer, Remote by PC.

FACTORY DEFAULT

All ON: All zones trigger Siren output.

NOTES

- **0E** will turn all selections OFF
- MEMORY E** will turn all selections ON

P58E

PROGRAM MODE LEVEL

Installer, Remote by PC.

FACTORY DEFAULT

All OFF: No zones trigger AUX1.

NOTES

- **0E** will turn all selections OFF.
- MEMORY E** will turn all selections ON.

RELATED OPTIONS

P121E 5E-8E Day zone output mapping.

P59E

PROGRAM MODE LEVEL

Installer, Remote by PC.

FACTORY DEFAULT

All OFF: No zones trigger AUX2.

NOTES

- **0E** will turn all selections OFF.
- MEMORY E** will turn all selections ON.

SIREN OUTPUT ZONES

Selects the zones to trigger the Siren output.

PROGRAMMING SEQUENCE:

P57E [Zone No]E toggles the options ON and OFF

[Zone No] OFF: The zone will not trigger the Siren output

[Zone No] ON: The zone will trigger the Siren output

AUX1 OUTPUT ZONES

Selects the zones to trigger the AUX1 output on the main board. This option selects *which* zones trigger AUX1. Use P121E to enable the output.

Once turned on by a zone alarm, the output will remain on until the panel is reset/disarmed.

PROGRAMMING SEQUENCE:

P58E [Zone No]E toggles the options ON and OFF

[Zone No] OFF: The zone will not trigger the AUX1 output

[Zone No] ON: The zone will trigger the AUX1 output

AUX2 OUTPUT ZONES

Selects the zones to trigger the AUX2 output on the main board. This option selects *which* zones trigger AUX2. Use P122E to enable the output.

Once turned on by a zone alarm, the output will remain on until the panel is reset/disarmed.

PROGRAMMING SEQUENCE:

P59E [Zone No]E toggles the options ON and OFF

[Zone No] OFF: The zone will not trigger the AUX2 output

[Zone No] ON: The zone will trigger the AUX2 output

PROGRAMMING

| Option No. | Description | 1E | 2E | 3E | 4E | 5E | 6E | 7E | 8E |
|------------|-----------------|----|----|----|----|----|----|----|----|
| P60E | VARIOUS OPTIONS | ON | | | ON | | ON | | |

P60E 1E

PROGRAM MODE LEVEL
Installer, Remote by PC.

FACTORY DEFAULT
Entry Beeps ON.

NOTES

ENTRY BEEPS

The sonalert will beep during Entry Delay.

PROGRAMMING SEQUENCE:

P60E 1E toggles the option ON and OFF
OFF: Entry Beeps OFF
ON: Entry Beeps ON

P60E 2E, 3E

PROGRAM MODE LEVEL
Installer, Remote by PC.

FACTORY DEFAULT
No keyswitch enabled.
P60E 3E, 4E off.

NOTES

The keyswitch:
a/ Always Arms Area1 only.
b/ Does not arm Area2.
c/ Can disarm Area2 if option P120E 8E is enabled.

RELATED OPTIONS

P120E 1E Latched Keyswitch.
P120E 4E Keyswitch Disarms only.
P120E 5E Keyswitch Arms only.
P120E 8E Keyswitch disarm Area2.


KEYSWITCH OPERATION

An externally fitted, normally open momentary Keyswitch can be used to Arm, Disarm or arm the Monitor mode.

The keyswitch is wired to zone 8 (zone 8 is then no longer available as a normal alarm input, but is still available for use as a Radio Zone).

PROGRAMMING SEQUENCE:

P60E 2E or 3E toggles the option ON and OFF
2E & 3E OFF: No keyswitch operation. Zone 8 is a normal alarm input.
2E ON: Keyswitch cycles between Monitor and Disarm.
3E ON: Keyswitch cycles between Arm and Disarm.
2E & 3E ON: Keyswitch cycles between Arm, Monitor and Disarm.

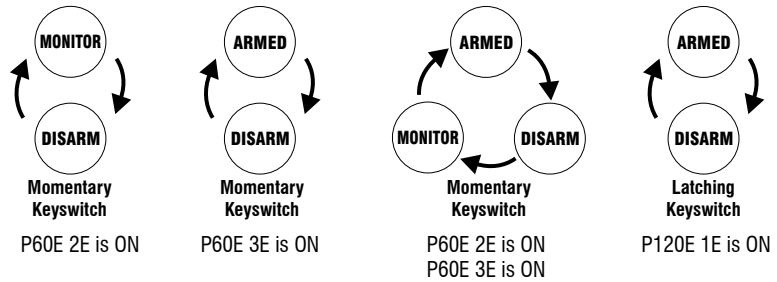

KEYSWITCH WIRING

If P60E 3E or 4E are enabled, use a momentary action keyswitch with normally open contacts. A momentary closed circuit across the resistor will toggle panels modes. Open circuit the resistor to trigger Panic if required. (Panic on this input is disabled if P120E 1E is enabled).

If P120E 1E is enabled, use a latching keyswitch. When the resistor is sealed, panel is disarmed. If the resistor is unsealed, (either by open circuit or short circuit), the panel will arm Area1, (Area2 will be ignored).



KEYSWITCH WIRING.

A momentary or latching keyswitch can be wired as shown.

P60E 4E

PROGRAM MODE LEVEL

Installer, Remote by PC.

FACTORY DEFAULT

ON Tamper Reset Lockout enabled.

RELATED OPTIONS

P44E Lockout zones.

P60E 5E

PROGRAM MODE LEVEL

Installer, Remote by PC.

FACTORY DEFAULT

OFF No Reset output on Duress alarm.

RELATED OPTIONS

P75E 1E Enable reporting of Duress.

P60E 6E

PROGRAM MODE LEVEL

Installer, Remote by PC.

FACTORY DEFAULT

ON Auto Exclude enabled.

RELATED OPTIONS

P62E 7E Siren burst on Auto Exclude.

P60E 7E

PROGRAM MODE LEVEL

Installer, Remote by PC.

FACTORY DEFAULT

OFF: Display is always ON.

NOTES

- The LCD keypad display and display backlighting will turn off but the keys backlighting will remain on. The keypad flap can be closed to reduce stray light from the keys.

P60E 8E

PROGRAM MODE LEVEL

Installer, Remote by PC.

FACTORY DEFAULT

OFF: AUX3 & AUX4 outputs are instant.

RELATED OPTIONS

P123E 1E, AUX3 output when Area1 armed.

P124E 1E, AUX4 output when Area2 armed.

TAMPER SIREN LOCKOUT

This option programs the Tamper input to Lockout, i.e. cause the Siren & Reset outputs to sound only once whilst the panel is armed.

PROGRAMMING SEQUENCE:

P60E 4E toggles the option ON and OFF

OFF: Tamper Reset Lockout disabled

ON: Tamper Reset Lockout enabled

DURESS TO RESET OUTPUT

Keypad Duress is normally a silent alarm. This option makes the Duress alarm trigger the Reset output. To Disarm with Duress, add any of the digits 5,6,8 or 9 in front of the user code when Disarming.

PROGRAMMING SEQUENCE:

P60E 5E toggles the option ON and OFF

OFF: No Reset output on Duress alarm

ON: Duress alarm triggers Reset output

AUTO EXCLUDE ZONES

If a zone is unsealed at the end of Exit Time the panel can either Exclude (ignore) that zone or immediately alarm.

The panel will give a 2 second Siren burst at the end of Exit Time to indicate that the panel is armed with a zone/s Auto Excluded. The 2 sec Siren burst can be disabled by option P62E 7E.

PROGRAMMING SEQUENCE:

P60E 6E toggles the option ON and OFF

OFF: Auto Exclude disabled (instant alarm if unsealed at end of Exit Time)

ON: Auto Exclude enabled (zone is excluded if unsealed at end of Exit Time)

DISABLE THE DISPLAY

The LED indicators on the keypad can be programmed to blank after 4 minutes of no keypad use. Any action that causes a beep will restore the display (Use the **(E)** button preferably).

PROGRAMMING SEQUENCE:

P60E 7E toggles the option ON and OFF

OFF: Display is always on

ON: Display will blank after 4 minutes

DELAYED AUX3 & AUX4 OUTPUTS

The AUX3 and AUX4 outputs can be programmed to turn on when Areas 1 and 2 are armed. These outputs can be programmed to turn on instantly or at the end of Exit Time.

This option only applies when AUX3 and AUX4 outputs are enabled as Arm1 and Arm2 outputs, (P123E 1E on and P124E 1E on).

PROGRAMMING SEQUENCE:

P60E 8E toggles the option ON and OFF

OFF: AUX3 & AUX4 outputs turn on instantly, (Default).

ON: AUX3 & AUX4 outputs turn on at the end of exit time.

PROGRAMMING

| Option No. | Description | Tamper to RESET output 1E | Tamper to STROBE output 2E | Tamper to keypad SONALERT 3E | Tamper to SIREN output 4E | KP Panic to RESET output 5E | KP Panic to STROBE output 6E | KP Panic to keypad SONALERT 7E | KP Panic to SIREN output 8E |
|------------|------------------------------|-------------------------------------|--------------------------------------|--|-------------------------------------|---------------------------------------|--|--|---------------------------------------|
| P61E | TAMPER & PANIC ALARM MAPPING | ON | ON | ON | ON | ON | ON | ON | ON |

P61E 1E-4E

PROGRAM MODE LEVEL
Installer, Remote by PC.

FACTORY DEFAULT
1E-4E, ON: Tamper alarm triggers all outputs.

NOTES
• A Tamper Alarm can be caused by the TAMP input or by removing the the J1 PROG/TAMP link on the main board.

TAMPER ALARM / OUTPUT MAPPING

This option selects which outputs will trigger when a Tamper Alarm occurs.

PROGRAMMING SEQUENCE:
P61E 1E-4E toggles the options ON and OFF
 1E ON: Tamper Alarm to Reset output
 2E ON: Tamper Alarm to Strobe output
 3E ON: Tamper Alarm to Keypad Sonalert output
 4E ON: Tamper Alarm to Siren output

P61E 5E-8E

PROGRAM MODE LEVEL
Installer, Remote by PC.

FACTORY DEFAULT
5E-8E, ON: Panic alarm triggers all outputs.

NOTES
• A Keypad Panic Alarm can be caused by the PANIC keys on the keypad (* E or ** together, depending on Option P64E6E).

KEYPAD PANIC ALARM / OUTPUT MAPPING

This option selects which outputs will trigger when a Keypad Panic alarm occurs.

PROGRAMMING SEQUENCE:
P61E 5E-8E toggles the options ON and OFF
 5E ON: Keypad Panic Alarm to Reset output
 6E ON: Keypad Panic Alarm to Strobe output
 7E ON: Keypad Panic Alarm to Keypad Sonalert output
 8E ON: Keypad Panic Alarm to Siren output

| Option No. | Description | 1E | 2E | 3E | 4E | 5E | 6E | 7E | 8E |
|------------|-------------------------|----|----|----|----|----|----|----|----|
| P62E | OPERATION SHORTCUTS ETC | ON | ON | ON | | ON | | ON | |

P62E 1E-6E

PROGRAM MODE LEVEL

Installer, Remote by PC.

FACTORY DEFAULT

1E, ON: Memory Display shortcut enabled.
 2E, ON: Zone Exclude shortcut enabled.
 3E, ON: Monitor Mode shortcut enabled.
 4E, OFF: Keypad Panic shortcut disabled.
 5E, ON: Area1 Arming shortcut enabled.
 6E, OFF: Area2 Arming shortcut disabled.

RELATED OPTIONS

P64E 6E Double Key keypad Panic.

NOTES

If either Area1 or Area2 are armed by shortcut and no user codes are assigned to that Area then it will always remain armed. You will then need to enter program mode on power-up and assign codes to Areas.

P62E 7E

PROGRAM MODE LEVEL

Installer, Remote by PC.

FACTORY DEFAULT

ON: Siren burst on Auto Exclude enabled.

RELATED OPTIONS

P60E 6E Auto Exclude zones.

P62E 8E

PROGRAM MODE LEVEL

Installer, Remote by PC.

FACTORY DEFAULT

OFF: Exit Time x10 disabled.

RELATED OPTIONS

P28E Exit Time.

SYSTEM OPERATION SHORTCUTS

Some keypad operations can be programmed to operate with or without a User Code.

PROGRAMMING SEQUENCE:

P62E 1E-6E toggles the options ON and OFF

1E ON: Memory Display shortcut
 2E ON: Zone Exclude shortcut
 3E ON: Monitor Mode shortcut
 4E ON: Keypad Panic shortcut
 5E ON: Area1 Arming shortcut
 6E ON: Area2 Arming shortcut

OPERATING EXAMPLES:

Arming without shortcut: **ARM** [User Code] **E**

Arming with shortcut: **ARM** **E**

Keypad Panic without shortcut: ***** [User Code] **E**

Keypad Panic with shortcut: ***** **E**

NOTE: ***** [User Code] **E** always triggers Keypad Panic.
 Also see option P64E 6E to enable Double Key Panic.

SIREN BURST ON AUTO EXCLUDE

This option allows the disabling of the 2 second siren burst at the end of Exit Time which indicates a zone/s has been Auto Excluded.

PROGRAMMING SEQUENCE:

P62E 7E toggles the option ON and OFF

OFF: Siren burst on Auto Exclude disabled
 ON: Siren burst on Auto Exclude enabled

EXIT TIME X10

This option multiplies the normal exit time by a factor of 10.

PROGRAMMING SEQUENCE:

P62E 8E toggles the option ON and OFF

OFF: Exit Time is the time set by P28E
 ON: Exit Time is multiplied by 10

EXAMPLE: If P28E = 22 seconds then if P62E 8E is ON, the exit time is 22 x 10 = 220 seconds.

PROGRAMMING

| Option No. | Description | 1E | 2E | 3E | 4E | 5E | 6E | 7E | 8E |
|------------|----------------------------|----|----|----|----|----|----|----|----|
| P63E | MONITOR & DAY MODE MAPPING | ON | ON | | | ON | ON | | |

P63E 1E-4E

PROGRAM MODE LEVEL
Installer, Remote by PC.

FACTORY DEFAULT
1E, 2E ON.
3E, 4E OFF.

RELATED OPTIONS
P64E 1E Brief Monitor alarm.

MONITOR MODE OUTPUT MAPPING

This option selects which outputs are triggered by alarms in Monitor Mode.

PROGRAMMING SEQUENCE:

P63E 1E-4E toggles the options ON and OFF

1E ON: Monitor Mode to Reset output

2E ON: Monitor Mode to Strobe output

3E ON: Monitor Mode to Keypad Sonalert output

4E ON: Monitor Mode to Siren output

P63E 5E-8E

PROGRAM MODE LEVEL
Installer, Remote by PC.

FACTORY DEFAULT
5E, 6E ON.
7E, 8E OFF.

RELATED OPTIONS
P64E 2E Brief Day alarm.

DAY MODE OUTPUT MAPPING

This option selects which outputs are triggered by alarms in Day Mode.

PROGRAMMING SEQUENCE:

P63E 5E-8E toggles the options ON and OFF

5E ON: Day Mode to Reset output

6E ON: Day Mode to Strobe output, (If Brief Day Alarm is enabled, (P64E 2E), then this option sends day alarms to the AUX2 output).

7E ON: Day Mode to Keypad Sonalert output

8E ON: Day Mode to Siren output

For ZONE TO OUTPUT MAPPING for armed & 24hr states – see options P54E – P59E, page 22-23.

| Option No. | Description | Brief Monitor alarm | Brief Day alarm | Monitor zones have Entry Delay2 | Radio Key chirp | 50 Hz mains frequency | Double key Keypad Panic | Keypad Fire Alarm | Keypad Medical Alarm |
|------------|---------------|---------------------|-----------------|---------------------------------|-----------------|-----------------------|-------------------------|-------------------|----------------------|
| | | 1E | 2E | 3E | 4E | 5E | 6E | 7E | 8E |
| P64E | MISC. OPTIONS | | | ON | | ON | ON | | |

P64E 1E

PROGRAM MODE LEVEL

Installer, Remote by PC.

FACTORY DEFAULT

OFF: Brief Monitor Alarm disabled.

RELATED OPTIONS

P51E Set Monitor zones.
P63E 1E–4E Monitor Mode output mapping

BRIEF MONITOR MODE ALARM

Alarms in Monitor Mode can either activate the programmed outputs for Siren Time duration (P29E) or they can activate the outputs for 2 seconds only.

NOTE: If Brief Monitor alarm is enabled, then Monitor alarms will not be reported by dialler.

PROGRAMMING SEQUENCE:

P64E 1E toggles the option ON and OFF

OFF: Monitor Mode outputs have normal time as set by P29E

ON: Monitor Mode outputs are ON for 2 seconds only

P64E 2E

PROGRAM MODE LEVEL

Installer, Remote by PC.

FACTORY DEFAULT

OFF: Brief Day Alarm disabled.

RELATED OPTIONS

P53E Assign Day zones.
P63E 5E–8E Day Mode output mapping.

BRIEF DAY ALARM

Alarms in Day Mode will activate the programmed outputs while the zone is unsealed or they can activate the outputs for 2 seconds only.

This option also enables the TEMPORARY DAY ZONE feature. See page 20.

PROGRAMMING SEQUENCE:

P64E 2E toggles the option ON and OFF

OFF: Brief Day Alarm disabled. Day alarm outputs are ON while the zone is unsealed

ON: Brief Day Alarm Enabled. Day alarm outputs are ON for 2 seconds only

P64E 3E

PROGRAM MODE LEVEL

Installer, Remote by PC.

FACTORY DEFAULT

ON: Monitor zones all have Entry Delay 2.

RELATED OPTIONS

P27E Entry Delay Time 2.
P51E Assign Monitor zones.
P63E 1E–4E Monitor Mode output mapping.

MONITOR ZONES ENTRY DELAY 2

Monitor zones can either have the delay types set by options P40E–P43E or they can all be assigned to have Entry Delay 2. This allows all Monitor zones to be programmed with the same entry delay time.

PROGRAMMING SEQUENCE:

P64E 3E toggles the option ON and OFF

OFF: Monitor zones behave as programmed by P40E–P43E

ON: Monitor zones all have Entry Delay 2

P64E 4E

PROGRAM MODE LEVEL

Installer, Remote by PC.

FACTORY DEFAULT

OFF: No siren chirps.

RELATED OPTIONS

P68E 8E Quiet Chirps.
P69E 5E Monitor Arm by Radio Key.
P120E 2E Monitor Arm chirps.
P120E 3E Radio Key AUX button arms Monitor Mode.

ARM/DISARM CHIRPS

If this option is selected the Siren output will "Chirp" when the panel is armed and disarmed with the Keyswitch input, prox cards or Radio Keys. This option applies to *siren chirps*, the *strobe* output always flashes when arming/disarming by the above methods. (Monitor arming chirps are enabled separately by option P120E 2E).

The siren output will make 1 Chirp on Arming, and 3 Chirps on Disarming.

PROGRAMMING SEQUENCE:

P64E 4E toggles the option ON and OFF

OFF: No Arm/Disarm siren chirps

ON: Siren & Strobe outputs will chirp on arm/disarm

PROGRAMMING

P64E 5E

PROGRAM MODE LEVEL

Installer, Remote by PC.

FACTORY DEFAULT

ON: 50Hz mains frequency.

NOTES

50Hz MAINS FREQUENCY

Selects either 50Hz or 60Hz mains power frequency operation. Leave the factory default for use in Australia and New Zealand. Users in North America should select 60Hz mains frequency.

Required for the accurate timing of dialler test reports (if programmed). It has no effect on local or other dialler operations.

PROGRAMMING SEQUENCE:

P64E 5E toggles the option ON and OFF

OFF: 60Hz mains frequency

ON: 50Hz mains frequency

P64E 6E


PROGRAM MODE LEVEL

Installer, Remote by PC.

FACTORY DEFAULT

ON: Double key Keypad Panic enabled.


NOTES

The Ness LCD keypad has two buttons labelled 

RELATED OPTIONS

P62E 4E Shortcut Keypad Panic

DOUBLE KEY KEYPAD PANIC

This option allows the Keypad Panic alarm to be triggered by pressing both  Panic buttons together.

NOTE:  [User Code]  always triggers Keypad Panic

PROGRAMMING SEQUENCE:

P64E 6E toggles the option ON and OFF

OFF: No double key Keypad Panic

ON: Double key Keypad Panic enabled

P64E 7E

PROGRAM MODE LEVEL

Installer, Remote by PC.

FACTORY DEFAULT



OFF: No Keypad Fire Alarm.

RELATED OPTIONS

P68E 6E Fire Siren sound.

P75E 4E Report Fire Alarms.

KEYPAD FIRE ALARM

This option enables the Keypad Fire Alarm. Pressing  and then  triggers the siren using the "Fire Alarm" siren sound.

If P75E 4E is enabled, the fire alarm is reported by dialler to the central station.

PROGRAMMING SEQUENCE:

P64E 7E toggles the option ON and OFF

OFF: No Keypad Fire Alarm

ON: Keypad Fire Alarm enabled

P64E 8E

PROGRAM MODE LEVEL

Installer, Remote by PC.



FACTORY DEFAULT

OFF: No Keypad Medical Alarm.

RELATED OPTIONS

P75E 2E Report Medical Alarms.

KEYPAD MEDICAL ALARM

This option enables the Keypad Medical Alarm. Pressing  and then  activates the dialler and reports a Medical Alarm.

If P75E 2E must be enabled for the Medical alarm to be reported.

PROGRAMMING SEQUENCE:

P64E 8E toggles the option ON and OFF

OFF: No Keypad Medical Alarm

ON: Keypad Medical Alarm enabled

| Option No. | Description | ZONES 1-8 (D8 & D16) | | | | | | | | ZONES 9-16 (D16) | | | | | | | |
|------------|------------------|----------------------|---|---|---|---|---|---|---|------------------|----|----|----|----|----|----|----|
| | | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 |
| P65E | SUPERVISED ZONES | | | | | | | | | | | | | | | | |

P65E

PROGRAM MODE LEVEL

Installer, Remote by PC.

FACTORY DEFAULT

all OFF: No Supervision zones.

NOTES

0E will turn all selections OFF.

MEMORY E will turn all selections ON.

RELATED OPTIONS

P66E 1E-4E Supervision Alerts.

P66E 5E Wired Zone Supervision.

P67E Zone Supervision Time.

P92E 4E (D8) Report Supervision.

P75E 12E (D16) Report Supervision.

SUPERVISED ZONES

Any zone 1-8 or 1-16 can be a Supervised Zone.

In operation, a Supervised Zone is subject to the Supervision Time (P67E). If the zone/s has not sealed or unsealed during the Supervision Time, then the programmed alerts will turn on (as programmed by P66E 1E-4E, P92E 4E or P75E 12E). Zone Supervision can be used as an "inactivity monitor" to sound an alert or send a dialler report if a zone has had no activity during a set period of time. (For example, to monitor an aged person's home).

- A zone which is permanently in a sealed or unsealed state for the duration of Supervision Time will be treated as a Supervision alarm.
- If P66E 5E is on, Zone Supervision acts on wired zones. If P66E 5E is off, Zone Supervision acts on radio zones.
- Each Supervised zone has its own supervision timer.
- Zone Supervision is independent of the armed state of the panel.
- Zone Supervision can be temporarily disabled by Excluding the zone/s.
- The zone which caused the Supervision alarm flashes on the keypad. Entering a valid code + E will reset Supervision alarms.

PROGRAMMING SEQUENCE:

P65E [Zone No]E toggles the options ON and OFF

[Zone No]E OFF: The zone is not a Supervised Zone

[Zone No]E ON: The zone is a Supervised Zone

P66E 1E-8E

ZONE SUPERVISION ALERTS, SUPERVISION TIME SPEEDUP

See pages 32-33.

P67E

PROGRAM MODE LEVEL

Installer, Remote by PC.

FACTORY DEFAULT

24 hours or 24 minutes.

NOTES

- A setting of less than 3 hours for radio supervision is not recommended.
- Supervision time must be 2 minutes or greater for correct operation.
- The Supervision timer is reset on exit from Installer Program Mode and on Arm or Disarm.

RELATED OPTIONS

P65E Supervised Zones.

P66E 1E-4E Supervision Alerts.

P66E 7E-8E Supervision Time Speed-up.

SUPERVISION TIME

SUPERVISION TIME sets the time interval before an inactive Supervised Zone triggers a Supervision alarm.

The SUPERVISION TIME setting is from 01 to 24 hours.

For timing up to 24 minutes, set P66E 7E 7 8E on.

For timing up to 24 hours, set P66E 7E 7 8E off.

PROGRAMMING SEQUENCE:

P67E existing time is displayed one digit at a time

[ENTER NEW TIME] E new time is displayed one digit at a time

EXAMPLE: To program SUPERVISION TIME to be 4 hours:

P67E 04E

RADIO SUPERVISION OPERATION

The purpose of Radio Supervision is to verify the correct operation of Ness Radio PIRs. The Supervision signal from the Radio PIR tells the panel that the device has not been removed from radio range and is in working order.

A non-SUPERVISION enabled Radio PIR will transmit signals to the panel only when it has detected an event. Obviously, there is no guaranteed signal period.

In either case, when the allowed time limit is exceeded then a WARNING is first given (if programmed by P66E 3E), and then after 1 minute, the programmed RADIO SUPERVISION ALERTS are generated by the panel.

PROGRAMMING

| Option No. | Description | 1E | 2E | 3E | 4E | 5E | 6E | 7E | 8E |
|------------|-------------------------|------------------------------------|-------------------------------------|---------------------------------------|------------------------------------|----|----|------------------------|-------------------------|
| P66E | ZONE SUPERVISION ALERTS | Supervision alarms to RESET output | Supervision alarms to STROBE output | Supervision alarms to SONALERT output | Supervision alarms to SIREN output | | | Supervision speedup x6 | Supervision speedup x10 |

P66E 1E

PROGRAM MODE LEVEL
Installer, Remote by PC.

FACTORY DEFAULT
OFF: Supervision Reset output disabled.

RELATED OPTIONS
P65E Supervised Zones.

ZONE SUPERVISION ALERTS – RESET OUTPUT

Setting this option turns the Reset output ON when a SUPERVISED ZONE alert occurs. The Reset output will remain ON for the duration of the ALARM TIME (Set by Option P29E).

PROGRAMMING SEQUENCE:
P66E 1E toggles the option ON and OFF
OFF: Supervision Reset output disabled
ON: Supervision Reset output enabled

P66E 2E

PROGRAM MODE LEVEL
Installer, Remote by PC.

FACTORY DEFAULT
OFF: Supervision Strobe output disabled.

RELATED OPTIONS
P65E Supervised Zones.

ZONE SUPERVISION ALERTS – STROBE OUTPUT

Setting this option turns the Strobe output ON when a SUPERVISED ZONE alert occurs. The Strobe output will remain ON until the panel is disarmed.

PROGRAMMING SEQUENCE:
P66E 2E toggles the option ON and OFF
OFF: Supervision Strobe output disabled
ON: Supervision Strobe output enabled

P66E 3E

PROGRAM MODE LEVEL
Installer, Remote by PC.

FACTORY DEFAULT
OFF: Supervision Keypad Sonalert disabled.

NOTES
• When this option is turned ON, it delays the operation of all other selected Supervision outputs by one minute.

RELATED OPTIONS
P65E Supervised Zones.

ZONE SUPERVISION ALERTS – KEYPAD SONALERT

Setting this option turns the Keypad Sonalert ON when a SUPERVISED ZONE alert occurs. The Keypad Sonalert remains ON until any keypad key is pressed. Also, turning this option ON makes all Supervision outputs delayed by one minute.

PROGRAMMING SEQUENCE:
P66E 3E toggles the option ON and OFF
OFF: Supervision Keypad Sonalert disabled and all Supervision outputs trigger instantly
ON: Supervision Keypad Sonalert enabled and all Supervision outputs are delayed by 1 minute

P66E 4E

PROGRAM MODE LEVEL

Installer, Remote by PC.

FACTORY DEFAULT

OFF: Supervision Siren output disabled.

RELATED OPTIONS

P65E Supervised Zones.

P66E 5E

THIS OPTION IS AVAILABLE IN
D8X/D16X V5.2 AND LATER

PROGRAM MODE LEVEL

Installer, Remote by PC.

FACTORY DEFAULT

OFF: Radio Zone Supervision enabled.

RELATED OPTIONS

P65E Supervised Zones.
P66E 1E–4E Supervision Alerts.
P66E 5E Wired Zone Supervision.
P67E Zone Supervision Time.
P92E 4E (D8) Report Supervision.
P75E 12E (D16) Report Supervision.

P66E 7E

PROGRAM MODE LEVEL

Installer, Remote by PC.

FACTORY DEFAULT

OFF: Supervision Time normal.

RELATED OPTIONS

P67E Supervision Time.
P66E 8E Supervision Time speedup x10.

P66E 8E

PROGRAM MODE LEVEL

Installer, Remote by PC.

FACTORY DEFAULT

OFF: Supervision Time normal.

RELATED OPTIONS

P67E Supervision Time.
P66E 7E Supervision Time speedup x6.

ZONE SUPERVISION ALERTS – SIREN OUTPUT

Setting this option turns the Siren output ON when a SUPERVISED ZONE alert occurs. The Siren output will remain ON for the duration of the ALARM TIME (Set by Option P29E).

PROGRAMMING SEQUENCE:

P66E 4E toggles the option ON and OFF

OFF: Supervision Siren output disabled

ON: Supervision Siren output enabled

ENABLE WIRED ZONE SUPERVISION

This option enables Wired Zone Supervision or Radio Zone Supervision.

PROGRAMMING SEQUENCE:

P66E 5E toggles the option ON and OFF

OFF: Radio Zone Supervision enabled

ON: Wired Zone Supervision enabled

SUPERVISION TIME SPEEDUP X6

Setting this option speeds up the Supervision Time by 6. For instance if P67E is set to 1 hour (60 minutes), then this option will reduce it to 10 minutes. (i.e., 60 divided by 6).

PROGRAMMING SEQUENCE:

P66E 7E toggles the option ON and OFF

OFF: Supervision Time normal as set by P67E

ON: Supervision Time speedup x6

SUPERVISION TIME SPEEDUP X10

Setting this option speeds up the Supervision Time by 10. For instance if P67E is set to 1 hour (60 minutes), then this option will reduce it to 6 minutes. (i.e., 60 divided by 10).

PROGRAMMING SEQUENCE:

P66E 8E toggles the option ON and OFF

OFF: Supervision Time normal as set by P67E

ON: Supervision Time speedup x10

NOTE: If both P66E 7E and 8E are both ON then the Supervision time is sped up by 60. For instance if P67E is set to 1 hour (60 minutes), then this option will reduce it to 1 minute. (i.e., 60 divided by 60).

P67E

SUPERVISION TIME, page 31.

PROGRAMMING

P68E 1E

PROGRAM MODE LEVEL:
Installer, Remote by PC.

FACTORY DEFAULT:
OFF: No zone split.

NOTES:

- Zone Split is required when zones 9-16 are used as hardwire zones.
- Zone Split does not have to be enabled to use zones 9-16 as RADIO zones.
- If Zone 8 is converted to a Keyswitch Input, then a 2K2 monitoring resistor is always used and Zone Splitting is not available on the Z8 input (no Zone8, Zone16). Zone8, Zone16 are still available as RADIO ZONES however. See Keyswitch Operation, page 24.
- N.O. contacts can be used only on zones 1 to 8.

END OF LINE RESISTOR NOTES:

- NESS supplies 1% tolerance metal film resistors for the end of line termination. These are accurate value resistors and they stay accurate long term.
- Avoid using carbon film or 5% tolerance resistors, especially when zone splitting. Problems may not become evident until some time after the installation, due to resistor aging, moisture or dust build up.
- If a particular zone will not seal, then check the resistance of BOTH the low zone and high zone cabling (i.e. if zone 1 will not seal then also check zone 9 wiring). The resistance checks should be done after removing the cabling from the D16 terminals and separating into their individual wires.
- A 2K2 monitored line should measure between 2100 Ohms minimum and 2400 Ohms maximum.
- A 4K7 monitored line should measure between 4600 Ohms minimum and 4950 Ohms maximum.

INPUT TABLE

| Input | Zone | Zone |
|-------|------|------|
| 1 | 1 | 9 |
| 2 | 2 | 10 |
| 3 | 3 | 11 |
| 4 | 4 | 12 |
| 5 | 5 | 13 |
| 6 | 6 | 14 |
| 7 | 7 | 15 |
| 8 | 8 | 16 |



ZONE SPLIT IS ONLY AVAILABLE ON D16 CONTROL PANELS.

NOTE 1

The D16x panel has 16 physical zone inputs, so Zone Split is usually not required, although you may want to use Zone Split in cases where:

- Retro-fitting an existing D16 installation where 4K7 resistors have been used on zones 9-16.
- It may be more convenient to use Zone Split to avoid running extra cables for zones 9-16. (Zone Split allows 2 zones to work on 1 zone input.

NOTE 2

If Zone Split is enabled, physical zone 9-16 inputs cannot be used. They will become inactive.

ZONE SPLIT

This option splits zone inputs 1-8 into 16 zones using pairs of zones so that there are 16 wired zones available.

When Zone Split is enabled, the physical zone inputs 9-16 are ignored by the panel.

Zones 1-8 use 2K2 end of line resistors on the Z1-Z8 inputs.

Zones 9-16 use 4K7 end of line resistors on the Z1-Z8 inputs (with Zone 9 connected to the Z1 input etc).


The monitoring resistors must be wired in parallel, making this zone splitting arrangement suitable for Normal Closed (N.C.) detectors.

PROGRAMMING SEQUENCE:

P68E 1E toggles the option ON and OFF

- OFF: No Zone Split
- ON: Zone split enabled

CONNECTION DIAGRAMS

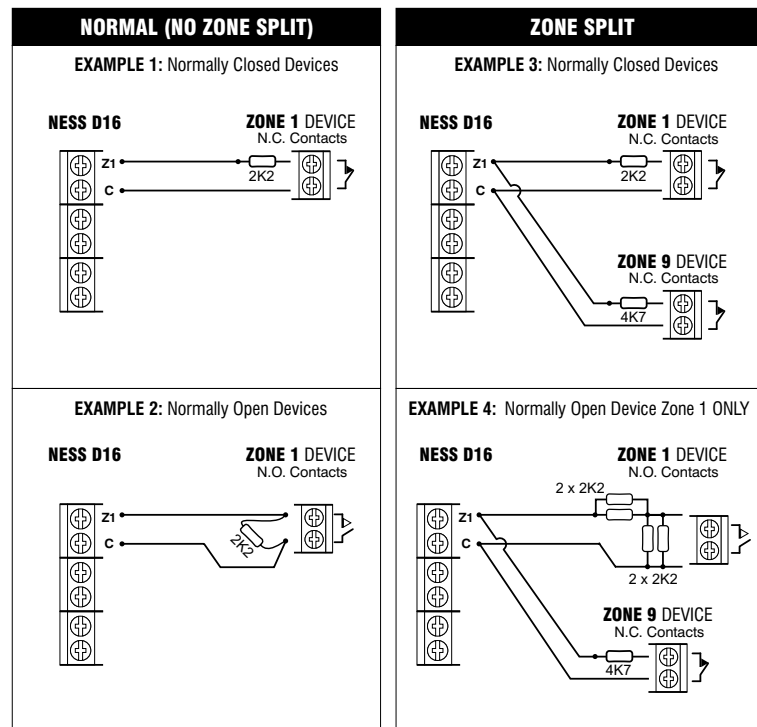

Normally Open (N.O.) wiring is possible only on Zones 1 to 8. This is done by splitting the 2K2 resistor into 2x 1K1 resistors, joining them in series, and then placing the N.O. contact across one of the 1K1 resistors. (Make a 1K1 resistor by wiring 2x 2K2 resistors in parallel).

| Option No. | Description | 1E | 2E | 3E | 4E | 5E | 6E | 7E | 8E |
|------------|---------------|----|----|----|----|----|----|----|----|
| P68E | MISC. OPTIONS | | | | | | | | |

P68E 2E

PROGRAM MODE LEVEL
Installer, Remote by PC.

FACTORY DEFAULT
OFF: Zone resistors are 2k2

- NOTES**
- The 3k3 zone resistor option is useful if the site is pre-wired with 3k3 resistors.
 - If Zone 8 is a keyswitch input (P60E 2E 3E) then a 2k2 resistor is always used.

P68E 3E

Available in D8x/D16x V5.6 and later.

PROGRAM MODE LEVEL
Installer, Remote by PC.

FACTORY DEFAULT
OFF: Normal Radio Message.

NOTE:
Older detectors and radio keys without encryption will not work with this setting on.

P68E 5E

PROGRAM MODE LEVEL
Installer, Remote by PC.

FACTORY DEFAULT
OFF: Radio Key siren warning disabled.

P68E 6E

PROGRAM MODE LEVEL
Installer, Remote by PC.

FACTORY DEFAULT
OFF: No 24hr Fire siren sound.

P68E 8E

PROGRAM MODE LEVEL
Installer, Remote by PC.

FACTORY DEFAULT
OFF: Quiet Chirps disabled.

- RELATED OPTIONS**
- P64E 4E Radio Key Chirps.
 - P69E 5E Monitor Arm by Radio Key.
 - P120E 2E Monitor Arm chirps.
 - P120E 3E Radio Key AUX / arms Monitor

3K3 ZONE RESISTORS

Setting this option ON changes the Zones 1 – 8 monitoring resistor from 2k2 to 3k3. (External Tamper input always uses a 2k2 resistor).

PROGRAMMING SEQUENCE:
P68E 2E toggles the option ON and OFF
OFF: Zone resistors are 2k2
ON: Zone resistors are 3k3

LONG RADIO MESSAGE

Setting this option ON enables Long Radio Message for Radio Keys and Radio Devices. Radio detectors will now need the encryption link turned on. Enabling Long Radio Message gives greater protection against coding clashes with third party radio signals.

PROGRAMMING SEQUENCE:
P68E 3E toggles the option ON and OFF
OFF: Normal Radio Message
ON: Long Radio Message

RADIO KEY ARMING, UNSEALED ZONE WARNING

Setting this option ON allows a 2 second SIREN warning if there is an unsealed zone in an Area Armed by a Radio Key.

PROGRAMMING SEQUENCE:
P68E 5E toggles the option ON and OFF
OFF: Radio Key arming, siren warning disabled
ON: Radio Key arming, siren warning enabled

24HR ZONE FIRE SIREN SOUND

This option changes the siren sound when a 24hr zone is triggered. The keypad key sequence for FIRE (3 E) always outputs the FIRE siren sound.

PROGRAMMING SEQUENCE:
P68E 6E toggles the option ON and OFF
OFF: Fire siren sound disabled
ON: Fire siren sound enabled

QUIET CHIRPS ON ARM/DISARM

This quietyens the siren chirps that are made whenever keyswitch or radio key Arming or Disarming is used.
(Arm/Disarm Chirps must be enabled at P64E 4E).

PROGRAMMING SEQUENCE:
P68E 8E toggles the option ON and OFF
OFF: Quiet Chirps disabled
ON: Quiet Chirps enabled

PROGRAMMING

| Option No. | Description | 1E | 2E | 3E | 4E | 5E | 6E | 7E | 8E |
|------------|-----------------|----|----|----|----|----|----|----|----|
| P69E | MISC. OPTIONS 2 | | | | | | | | |

P69E 1E

PROGRAM MODE LEVEL
Installer, Remote by PC.

FACTORY DEFAULT
OFF: ARM1 output toggles.

NOTES
• This is useful as a Smoke Detector reset output with an optional external relay.

RELATED OPTIONS
P60E 8E Delay ARM1/ARM2 outputs
P123E 1E, AUX3 output when Area1 armed.

AUX3 (ARM1) PULSE OUTPUT

This option selects the AUX3 output to pulse on for 2 seconds whenever arming or disarming of Area1. (The AUX3 output normally toggles when arming/disarming).

Note also that when Arming with the P60E 8E option selected that the pulse will occur at the end of Exit Time.

This option only applies when AUX3 output is enabled as Arm1 output, (P123E 1E on).

PROGRAMMING SEQUENCE:
P69E 1E toggles the option ON and OFF

OFF: AUX3 output toggles
ON: AUX3 output pulses

P69E 2E

PROGRAM MODE LEVEL
Installer, Remote by PC.

FACTORY DEFAULT
OFF: ARM2 output toggles.

NOTES
• This is useful as a Smoke Detector reset output with an optional external relay.

RELATED OPTIONS
P60E 8E Delay ARM1/ARM2 outputs
P124E 1E, AUX4 output when Area2 armed.

AUX4 (ARM2) PULSE OUTPUT

This option selects the AUX4 output to pulse on for 2 seconds whenever Arming or Disarming of Area2.

(The AUX4 output normally toggles when arming/disarming).

Note also that when arming with the P60E 8E option selected that the pulse will occur at the end of Exit Time.

This option only applies when AUX4 output is enabled as Arm2 output, (P124E 1E on).

PROGRAMMING SEQUENCE:
P69E 2E toggles the option ON and OFF

OFF: AUX4 output toggles
ON: AUX4 output pulses

P69E 3E

PROGRAM MODE LEVEL
Installer, Remote by PC.

FACTORY DEFAULT
OFF: Normal siren sound in Monitor Mode.

NOTES
• This does not affect the RESET output.

QUIET MONITOR SIREN

This option selects the 'Quiet Siren' sound in Monitor Mode. The Quiet Siren sound is a continuous "beep beep beep" sound rather than the normal siren sound.

PROGRAMMING SEQUENCE:
P69E 3E toggles the option ON and OFF

OFF: Normal siren sound in Monitor Mode
ON: Quiet Siren sound in Monitor Mode

P69E 4E

PROGRAM MODE LEVEL

Installer, Remote by PC.

FACTORY DEFAULT

OFF: Keypad gives 3 beeps on Arming.

NOTES

- The keypad beeps on Arm/Disarm when Arming/Disarming by keypad, keyswitch or by Radio Key.

P69E 5E

PROGRAM MODE LEVEL

Installer, Remote by PC.

FACTORY DEFAULT

OFF: Radio Keys cannot Arm Monitor Mode.

NOTES

- Radio Key Monitor Arming will work only if one or more zones have been programmed as Monitor Zones (P51E).
- When using a Radio Keypad to Monitor arm, ensure that the ARM ONLY option is OFF for the USER CODE on the panel. Otherwise further MONITOR E keypresses on the Radio keypad could AREA arm the panel.

RELATED OPTIONS

P51E Program Monitor zones.
 P63E Monitor Mode output mapping.
 P64E 1E Brief Monitor alarm.
 P64E 3E Monitor zones have Entry Delay2.
 P64E 4E Radio Key Chirps.
 P69E 3E Quiet Monitor siren.
 P69E 5E Monitor Arm by Radio Key.
 P120E 2E Monitor arm chirps by radio key.
 P120E 3E Radio Key AUX button arms monitor mode.
 P120E 6E Smart Beeps for Monitor and Day zones.

P69E 6E

PROGRAM MODE LEVEL

Installer, Remote by PC.

FACTORY DEFAULT

OFF: Mains Fail alarm normal.

NOTES

This does not affect Dialler mains fail reporting or saving to the History memory or operation of the Mains Fail output on the Output Expander.

6 BEEPS ON ARMING

Normally the keypad/s onboard SONALERT gives 3 beeps when the panel is armed. Turning this option ON will give 6 keypad beeps when Arming.

PROGRAMMING SEQUENCE:

P69E 4E toggles the option ON and OFF

OFF: Keypad gives 3 beeps on Arming

ON: Keypad gives 6 beeps on Arming

MONITOR ARMING BY RADIO KEY ON/OFF BUTTONS

Setting this option on allows MONITOR Mode arming by Radio Key ON or OFF buttons.

Note: This is independent of Monitor arming by AUX button if using the RK4 radio key.

PROGRAMMING SEQUENCE:

P69E 5E toggles the option ON and OFF

OFF: Radio Key Monitor Mode Arming disabled

ON: Radio Key Monitor Mode Arming enabled

OPERATION:

Panel version 4

Press the Radio Key OFF button twice within 4 seconds.

Panel version 4.5

- Press the Radio Key OFF button twice within 4 seconds.

or.... - Press the Radio Key ON button twice within 5 seconds.

See page 20 for Monitor operation.

DISABLE MAINS FAIL ALARM

When set ON, a Mains Fail alarm is: 1. Not displayed on the keypad, 2. Does not give warning beeps, 3. Is not saved to MEMORY and the MEMORY display does not flash.

PROGRAMMING SEQUENCE:

P69E 6E toggles the option ON and OFF

OFF: Mains Fail alarm operates normally

ON: Mains Fail alarm is disabled

PROGRAMMING

| Option No. | Description | Default |
|------------|---|---------|
| P70E | TELEPHONE NUMBER 1 - PRIMARY | |
| P71E | TELEPHONE NUMBER 2 - SECONDARY | |
| P80E | TELEPHONE NUMBER 3 - TEST CALLS | |
| P81E | TELEPHONE NUMBER 4 - CALLBACK FOR UPLOAD | |
| P00E | FOLLOW-ME TELEPHONE NUMBER - For audible dialling | |
| | | |
| P72E | ACCOUNT NUMBER 1 | 0000 |
| P73E | ACCOUNT NUMBER 2 | 0000 |

P70E, P71E

PROGRAM MODE LEVEL
Installer, Remote by PC.

FACTORY DEFAULT
No telephone numbers.

- NOTES**
- If telephone number 2 is disabled, all calls are made on telephone number 1 and the setting of P87E 1E has no effect.
 - If telephone number 3 is disabled, all test calls are made on telephone number 1&2
 - Any keypress will stop the telephone number display sequence.

RELATED OPTIONS
P87E 1E Alternate Primary/Secondary telephone numbers.
P86E 1E Disable dialler (still allows remote up/download if programmed).

TELEPHONE NUMBERS 1 & 2

The panel can dial up to 2 phone numbers when an event is to be transmitted to a central monitoring station or other location. Telephone numbers may be up to 30 digits in length.

PROGRAMMING SEQUENCE:

P70E existing telephone number is displayed one digit at a time
[ENTER NEW TELEPHONE No] E new telephone number is displayed one digit at a time
EXAMPLE: To program Telephone No.1 to be 03 1234 1234:
P 70 E 0312341234 E

SPECIAL FUNCTIONS FOR ALL TELEPHONE NUMBERS

TO CLEAR A TELEPHONE NUMBER

To clear a telephone number, enter the MEMORY key in place of the telephone number. Example, to clear a Telephone Number 1 press: P70E MEMORY E

SPECIAL CHARACTERS (Applies to all telephone Numbers)

Pauses, * (star) or # (hash) (VF digits) can be included in the dialling sequence by using the keys in the table below.

| SPECIAL CHARACTER | KEY ENTRY | DISPLAYED ON LCD DISPLAY |
|-------------------|-------------|--------------------------|
| PAUSE (1.6sec) | ARM Key | 12 |
| * (Star) | MONITOR Key | 10 |
| # (Hash) | EXCLUDE Key | 11 |

P72E, P73E

PROGRAM MODE LEVEL
Installer, Remote by PC.

FACTORY DEFAULT
P72E Account No.1: 0000
P73E Account No.2: 0000

RELATED OPTIONS
P79E Account No.2 zones
Also see page 39, Hex Client Codes.

ACCOUNT NUMBER 1 & 2

Account numbers for identifying the panel to the Central Station. Area 1 Open/Close reports will report on Account No.1 and Area 2 Open/Close reports will report on Account No.2.

Zone Alarms can be assigned to report on either Account Number as set by Option P79E.

All miscellaneous events (eg. Tamper, Mains Fail) will report on Account No. 1.

PROGRAMMING SEQUENCE:

P72E (or P73E) existing account number is displayed one digit at a time
[ENTER NEW ACCOUNT No] E new account number is displayed one digit at a time
EXAMPLE: To program Account No.1 to be 1239:
P72E1239E

HEX CLIENT CODE NOTES

Note 1: If using the Ness LED keypad for programming, the Hex digits will not be displayed but are still programmed.

Note 2: Hex digit A is not allowed.

Note 3: Entering Hex digits by keypad applies to D8/D16 V4.6 and later or previous versions by using NessComms download software V4.62 or later.

HEX CLIENT CODES

Dialler client codes can now be entered in Hexadecimal. Use the following keys to enter the hex digits B, C, D, E or F.

| <u>HEX DIGIT</u> | <u>KEY ENTRY</u> | <u>DISPLAYED ON LCD DISPLAY</u> |
|------------------|------------------|---------------------------------|
| B | * Key | 11 |
| C | ARM Key | 12 |
| D | MONITOR Key | 13 |
| E | EXCLUDE Key | 14 |
| F | MEMORY key | 15 |

P80E

PROGRAM MODE LEVEL

Installer, Remote by PC.

FACTORY DEFAULT

No telephone numbers.

RELATED OPTIONS

- P89E 1E Enable test calls.
- P83E Test call interval.
- P84E Test call start delay.

TELEPHONE NUMBER 3

TEST CALLS

Phone Number 3 is used to send Test Calls. If it is not programmed then Test Calls are sent using Telephone No 1 & 2.

PROGRAMMING SEQUENCE:

P80E existing telephone number is displayed one digit at a time

[ENTER NEW TELEPHONE No] E new telephone number is displayed one digit at a time

EXAMPLE: To program Telephone No.3 to be 03 2468 1234:

P80E0324681234E

P81E

PROGRAM MODE LEVEL

Installer, Remote by PC.

FACTORY DEFAULT

No telephone numbers.

RELATED OPTIONS

P90E 8E Enable Callback.

TELEPHONE NUMBER 4 – CALLBACK

Phone Number 4 is used to prevent unauthorised up/download.

The panel will dial the callback telephone number to commence a NessComms™ up/download session.

NessComms™ up/download without callback is allowed by turning off option P90E 8E.

PROGRAMMING SEQUENCE:

P81E existing telephone number is displayed

[ENTER NEW TELEPHONE No] E new Telephone No.4 is displayed one digit at a time

P00E

PROGRAM MODE LEVEL

User, Installer, Remote by PC.

FACTORY DEFAULT

No telephone numbers.

NOTES

- If the Follow Me telephone number is disabled, all audible format calls are made on telephone numbers 1 & 2.

RELATED OPTIONS

- P86E 3E Audible DTMF format.
- P86E 4E Audible Pulse format.
- P86E 5E Contact ID + Audible DTMF.
- P86E 6E Contact ID + Audible Pulse.

FOLLOW ME TELEPHONE NUMBER

The Follow Me telephone number is only used in Audible Dialling mode. (If P86E 3E, 4E, 5E or 6E are on).

The Follow Me telephone number can be programmed in User Program Mode. If the Follow Me number is programmed, then the primary & secondary numbers are ignored.

IF P86E 3E or 4E ARE ENABLED (AUDIBLE MONITORING)

If the Follow Me number is programmed, the primary & secondary numbers are ignored.

IF P86E 5E or 6E ARE ENABLED (CONTACT ID + AUDIBLE)

The telephone numbers programmed at P70E & P71E will be used to send the message to the central station. The message is also repeated in audible format to the telephone number (if any) programmed at P00E.

PROGRAMMING SEQUENCE:

P00E existing telephone number is displayed one digit at a time

[ENTER NEW TELEPHONE No] E new telephone number is displayed one digit at a time

PROGRAMMING

| Option No. | Description | ZONES 1-8 (D8 & D16) | | | | | | | | ZONES 9-16 (D16) | | | | | | | |
|------------|------------------------|----------------------|----|----|----|----|----|----|----|------------------|----|----|----|----|----|----|----|
| | | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 |
| P74E | REPORT ZONE ALARMS | ON | ON | ON | ON | ON | ON | ON | ON | ON | ON | ON | ON | ON | ON | ON | ON |
| P76E | REPORT ZONE RESTORALS | ON | ON | ON | ON | ON | ON | ON | ON | ON | ON | ON | ON | ON | ON | ON | ON |
| P78E | MULTIPLE ZONE ALARMS | | | | | | | | | | | | | | | | |
| P79E | ACCOUNT NUMBER 2 ZONES | | | | | | | | | | | | | | | | |

P74E

PROGRAM MODE LEVEL
Installer, Remote by PC.

FACTORY DEFAULT
All zones report Alarms.

NOTES
• 0E will turn all selections OFF.
MEMORY E will turn all selections ON.

REPORT ZONE ALARMS

This option selects which zone inputs will send Alarm reports to the Central Station.

PROGRAMMING SEQUENCE:

P74E [Zone No]E toggles the option ON and OFF
 [Zone No]E OFF: Alarm reporting disabled for that zone
 [Zone No]E ON: Alarm reporting enabled for that zone

P76E

PROGRAM MODE LEVEL
Installer, Remote by PC.

FACTORY DEFAULT
All zones report Restorals.

NOTES
• 0E will turn all selections OFF
MEMORY E will turn all selections ON

REPORT ZONE RESTORALS

This option selects which zone inputs will send Restoral reports to the Central Station. Only zones that have previously sent an Alarm will send a Restoral.

PROGRAMMING SEQUENCE:

P76E [Zone No]E toggles the option ON and OFF
 [Zone No]E OFF: Restoral reporting disabled for that zone
 [Zone No]E ON: Restoral reporting enabled for that zone

RELATED OPTIONS
 P82E 1E Send Restoral immediately.
 P82E 2E Send Restoral after siren time.
 P82E 3E Send Restoral on Disarm & seal.
 P82E 4E Send Restoral on Disarm always.

P78E

PROGRAM MODE LEVEL
Installer, Remote by PC.

FACTORY DEFAULT
No zones report Multiple Alarms.

NOTES
 • Only zones that have previously sent an Alarm will send a Restoral.
 • 0E will turn all selections OFF
MEMORY E will turn all selections ON

REPORT MULTIPLE ZONE ALARMS

Zones selected for Multiple Zone Alarms will report each time the zone alarms and without a restore being sent. The number of reports is a maximum of 15. The number of alarms sent for each Multiple Zone Alarm can be reduced to 3 by using the swinger shutdown option P89E 4E.

Zones not selected report only once, until reset by an opening or a valid code.

PROGRAMMING SEQUENCE:

P78E [Zone No]E toggles the option ON and OFF
 [Zone No]E OFF: Multiple Zone Alarms disabled for that zone
 [Zone No]E ON: Multiple Zone Alarms enabled for that zone

RELATED OPTIONS
P89E 4E Swinger shutdown.

P79E

PROGRAM MODE LEVEL
Installer, Remote by PC.

FACTORY DEFAULT
none

ACCOUNT NO.2 ZONES

Zones selected to be Account No.2 zones will report their Alarms, Restorals and Excludes on Client code 2.

PROGRAMMING SEQUENCE:

P79E [Zone No]E toggles the option ON and OFF

P75E, P92E

REPORT MISCELLANEOUS ALARMS

PROGRAM MODE LEVEL

Installer, Remote by PC.

FACTORY DEFAULT

see table

NOTES

- 0E will turn all selections OFF
- MEMORY E will turn all selections ON

P77E, P93E

REPORT MISCELLANEOUS RESTORALS

PROGRAM MODE LEVEL

Installer, Remote by PC.

FACTORY DEFAULT

see table

| | ALARM DEFAULT | RESTORAL DEFAULT | D8 | | D16 | |
|---------------------|------------------|---------------------|---------|----------|----------|----------|
| | | | ALARM | RESTORAL | ALARM | RESTORAL |
| Duress | | ON | P75E 1E | P77E 1E | P75E 1E | P77E 1E |
| Medical | | ON | P75E 2E | P77E 2E | P75E 2E | P77E 2E |
| KP Panic & KS Panic | ON | ON | P75E 3E | P77E 3E | P75E 3E | P77E 3E |
| Fire | | ON | P75E 4E | P77E 4E | P75E 4E | P77E 4E |
| Panel tamper | ON | ON | P75E 5E | P77E 5E | P75E 5E | P77E 5E |
| External tamper | ON | ON | P75E 6E | P77E 6E | P75E 6E | P77E 6E |
| Keypad Tamper | ON | ON | P75E 7E | P77E 7E | P75E 7E | P77E 7E |
| Exit Installer Mode | | ON | P75E 8E | P77E 8E | P75E 8E | P77E 8E |
| Radio Tamper | ON | ON | P92E 1E | P93E 1E | P75E 9E | P77E 9E |
| Radio Panic | ON | ON | P92E 2E | P93E 2E | P75E 10E | P77E 10E |
| Radio Battery | | ON | P92E 3E | P93E 3E | P75E 11E | P77E 11E |
| Supervision fail | | ON | P92E 4E | P93E 4E | P75E 12E | P77E 12E |
| Panel battery | | ON | P92E 5E | P93E 5E | P75E 13E | P77E 13E |
| Mains fail | | ON | P92E 6E | P93E 6E | P75E 14E | P77E 14E |
| [not used] | | ON | P92E 7E | P93E 7E | P75E 15E | P77E 15E |
| [not used] | | ON | P92E 8E | P93E 8E | P75E 16E | P77E 16E |

REPORT MISCELLANEOUS ALARMS

REPORT MISCELLANEOUS RESTORALS

These options select which Miscellaneous alarms will trigger the dialler to send Alarm reports and Restoral reports to the Central Station.

Alarms (if enabled) are sent on activation. Restorals (if enabled) are sent on Opening. Mains Fail and Low Battery Restorals are sent when the power has been restored.

Note the different program option numbers for the D8 and D16.

PROGRAMMING SEQUENCE:

PxxE

1E-8E or 1E-16E toggles the option ON and OFF

| Option No. | Description | Send immediately | Send after siren time | Send after disarm & seal | Send after disarm always | 5E | 6E | 7E | 8E |
|------------|---------------------------------|------------------|-----------------------|--------------------------|--------------------------|----|----|----|----|
| P82E | ZONE RESTORAL REPORTING OPTIONS | | | | ON | | | | |

P82E 1E-4E

PROGRAM MODE LEVEL

Installer, Remote by PC.

FACTORY DEFAULT

4E, ON: Always send Restoral on Disarm.

RELATED OPTIONS

P76E Report zone restorals.

RESTORAL REPORTING OPTIONS

This option selects when the dialler sends zone Restoral reports. Only one of the following options may be selected.

Restoral reporting options also apply to 24hr zones.

PROGRAMMING SEQUENCE:

P82E 1E-4E toggles the option ON and OFF

1E ON: Send Restoral immediately

2E ON: Send Restoral after siren time

3E ON: Send Restoral on Disarm & seal

4E ON: Send Restoral on Disarm always

PROGRAMMING

| Option No. | Description | Default | Note |
|------------|-----------------------------|---------|-------------|
| P83E | TEST CALL INTERVAL | 84 | x2 = 168hrs |
| P84E | TIME BEFORE FIRST TEST CALL | 6 | x2 = 12hrs |

P83E

PROGRAM MODE LEVEL
Installer, Remote by PC.

FACTORY DEFAULT
84 (=168hrs =7 days).

NOTES

- Enter a value from 1 to 99.

RELATED OPTIONS

P89E 1E Enable Test Calls.
P84E Time Before Next Test Call.

TEST CALL INTERVAL

Test calls to the Central Station can be sent at intervals between 2 and 198 hours in 2 hour increments.

Programmable from 2 to 198 Hours. Enter a value between 1 and 99. (This is automatically multiplied by 2).

Test Calls must be enabled by option P89E 1E.

PROGRAMMING SEQUENCE:

Press P83E (The existing Test Call Interval time will be displayed.)
Press [NEW TIME] E (The new Test Call Interval time will be displayed.)

EXAMPLE: To program daily test calls.

Press P83E12E

P84E

PROGRAM MODE LEVEL
Installer, Remote by PC.

FACTORY DEFAULT
6 (=12hrs).

NOTES

1. Enter a value from 1 to 99.
2. If Test Calls are to start immediately, then the value is set to 0.
3. The Time Before Next Test Call is constantly updated. When viewed, the current value will be displayed (not the initially entered value).

RELATED OPTIONS

P89E 1E, Enable Test Calls.
P83E, Test Call interval.

TIME BEFORE FIRST TEST CALL

This option sets the time before the first Test Call and is used to set the preferred time for Test Calls. Programmable from 2 to 198 Hours. Enter a value between 1 and 99. (This is automatically multiplied by 2).

EXAMPLES:

A/ New Installation: Set the time before the first test call.

E.g., If you are programming the panel at 5pm and you want test calls to be sent at 1am. Enter P84E 4E (4 x 2 =8hrs. Therefore 5pm + 8hrs =1am).

B/ Existing Installation: To reset the time that test calls are sent.

E.g., Our example panel is sending test calls at 1am and you want to change it to 2am. If you are programming the panel at 6pm, enter P84E 4E (4 x 2 =8hrs. Therefore 6pm + 8hrs =2am).

PROGRAMMING SEQUENCE:

Press P84E (The existing Time Before First Test Call will be displayed. See note 3)
Press [NEW TIME] E (The new Time Before First Test Call will be displayed)

P85E 1E-3E

PROGRAM MODE LEVEL
Installer, Remote by PC.

FACTORY DEFAULT
3E ON: DTMF Dialling always.

NOTES

- Only one option is allowed to be ON
- **THE DECADIC (OR PULSE) DIALLING ON THIS DEVICE IS UNSUITABLE FOR USE ON THE TELECOM NETWORK IN NEW ZEALAND.**

| Option No. | Description | 1E | 2E | 3E | 4E | 5E | 6E | 7E | 8E |
|------------|-----------------|-------------|-----------------------|----------------------|----|----|----|----|----|
| P85E | DIALLING METHOD | Auto select | PULSE dialling always | DTMF dialling always | | | | | |
| | | | | ON | | | | | |

DIALLING METHOD

The dialler can be set to dial in PULSE (Decadic) or DTMF dialling or auto select depending on dial tone. Factory default is DTMF dialling.

This option should not be changed for use in Australia, New Zealand or Europe.

PROGRAMMING SEQUENCE:

P85E 1E-3E turns the option ON

1E ON: Auto Select Dialling (PULSE or DTMF)

2E ON: Pulse Dialling always

3E ON: DTMF Dialling always

| | | | Disable Dialler | Contact ID Format | | Audible VOICE format | | Contact ID + Voice | | |
|------------|-------------------|----|-----------------|-------------------|----|----------------------|----|--------------------|----|--|
| Option No. | Description | 1E | 2E | 3E | 4E | 5E | 6E | 7E | 8E | |
| P86E | REPORTING FORMATS | | ON | | | | | | | |

P86E 1E

PROGRAM MODE LEVEL
Installer, Remote by PC.

FACTORY DEFAULT
Off: dialler enabled.

NOTES
This option is useful for temporary disabling of the dialler without affecting other dialler options.

P86E 2E

PROGRAM MODE LEVEL
Installer, Remote by PC.

FACTORY DEFAULT
ON: Contact ID format enabled.

The panel reports alarms to the Central Station using Contact ID dialler format. The message format is fixed as shown in the Contact ID Codes Table.

THE MESSAGE TAKES THE FORM OF:

- SSSS** Account Number
Q Event qualifier
 1 = New Event or Open
 3 = Restore or Close
XYZ Alarm type
GG Group or Area designation
CCC Alarm number

- dd = User ID (1 to 56)
 zz = Zone ID (1 to 16)
 aa = 01 Area 1
 aa = 02 Area 2
 aa = 01 Monitor area
 aa = 00 24 Hr Area
 K = Checksum (0 to Of hex)

DISABLE DIALLER

This option disables the dialler even if telephone numbers and other dialler options are programmed.

Up/download or remote telephone access remain enabled.

PROGRAMMING SEQUENCE:

P86E 1E turns the option ON

ON: Dialler disabled

CONTACT ID FORMAT

This option enables the reporting of alarms to a Central station via telephone numbers 1 & 2 using Contact ID format.

PROGRAMMING SEQUENCE:

P86E 2E turns the option ON

ON: Contact ID format enabled

CONTACT ID REPORTS TABLE

| REPORT NAME | SSSS | Q | XYZ | GG | CCC | SUFFIX |
|--------------------------|---------|---|------------|----|---------|--------|
| Zone 1– Zone 16 Alarm | ssss 18 | q | 130 | aa | 001-016 | k |
| Duress | ssss 18 | 1 | 121 | 01 | 030 | k |
| Keyswitch Panic | ssss 18 | 1 | 120 | 01 | 031 | k |
| Keypad Panic | ssss 18 | 1 | 120 | 01 | 032 | k |
| Radio Key Panic | ssss 18 | 1 | 120 | 01 | 1dd | k |
| Medical Alarm | ssss 18 | 1 | 100 | 01 | 033 | k |
| Fire | ssss 18 | 1 | 110 | 01 | 034 | k |
| Exit Install mode | ssss 18 | 1 | 306 | 01 | 035 | k |
| External Tamper | ssss 18 | q | 137 | 01 | 040 | k |
| Internal Tamper | ssss 18 | q | 137 | 01 | 041 | k |
| Keypad Tamper | ssss 18 | q | 137 | 01 | 042 | k |
| Radio Sensor Supervision | ssss 18 | q | 381 | 01 | 4zz | k |
| Radio Sensor Tamper | ssss 18 | q | 383 | 01 | 2zz | k |
| Radio Sensor Low Battery | ssss 18 | q | 384 | 01 | 3zz | k |
| Mains Fail | ssss 18 | q | 301 | 01 | 050 | k |
| Panel Battery Fail | ssss 18 | q | 309 | 01 | 051 | k |
| Open | ssss 18 | 1 | 402 | aa | 0dd | k |
| Force Open (Cancel) | ssss 18 | 1 | 406 | aa | 0dd | k |
| Close | ssss 18 | 3 | 402 | aa | 0dd | k |
| Test Report | ssss 18 | 1 | 602 | 01 | 063 | k |
| Zone 1-16 Manual Exclude | ssss 18 | q | 573 | aa | 001-016 | k |
| Zone 1-16 Auto Exclude | ssss 18 | q | 380 | aa | 001-016 | k |

Keyswitch arming is identified as User 57. Shortcut arming is identified as User 58.

PROGRAMMING

P86E 4E

PROGRAM MODE LEVEL
Installer, Remote by PC.

FACTORY DEFAULT
OFF.

NOTES
See page 70 for more detail.

AUDIBLE VOICE FORMAT

For Audible Monitoring to any telephone or mobile phone. Zone alarms are sent in Audible VOICE format.

The message is repeated for 45 seconds or until kissed-off by the receiving telephone.

PROGRAMMING SEQUENCE:

P86E 4E turns the option ON

ON: Audible VOICE format enabled

P86E 6E

PROGRAM MODE LEVEL
Installer, Remote by PC.

FACTORY DEFAULT
OFF.

CONTACT ID + AUDIBLE VOICE FORMAT

For simultaneous Central Station and Audible Monitoring.

The alarm message will be sent to the Central Station on the Primary telephone number and then in audible VOICE format to the Follow Me telephone number, (P00E).

PROGRAMMING SEQUENCE:

P86E 6E turns the option ON

ON: Contact ID + Audible VOICE format enabled

| Option No. | Description | 1E | 2E | 3E | 4E | 5E | 6E | 7E | 8E |
|------------|------------------------|----|----|----|----|----|----|----|----|
| P87E | MISC. DIALLING OPTIONS | | ON | | ON | | | | |

P87E 1E

PROGRAM MODE LEVEL
Installer, Remote by PC.

FACTORY DEFAULT
OFF: Split Dial.

RELATED OPTIONS
P87E 4E Number of Dialling attempts.

SPLIT DIAL PRIMARY/SECONDARY PHONE NUMBERS

This option selects the order in which Telephone numbers 1 & 2 are dialled.

PROGRAMMING SEQUENCE:

P87E 1E toggles the option ON and OFF

OFF: **Split Dial**. Dial Telephone No.1 for half of the call attempts. If unsuccessful, dial Telephone No.2 for the last half of call attempts.

ON: **Alternate Dial**. Dial Telephone No.1 on the first attempt. If no answer, dial Telephone No.2. Continue alternating until successful.

P87E 2E

PROGRAM MODE LEVEL
Installer, Remote by PC.

FACTORY DEFAULT
ON: Dial only with dial tone.

CHECK FOR DIAL TONE

The dialler can be programmed to check for a dial tone before dialling. The dialler will still dial out if a dial tone is not detected, but this means several seconds will have elapsed. Allows use on PABXs with non-standard dial tones.

PROGRAMMING SEQUENCE:

P87E 2E toggles the option ON and OFF

OFF: Dial without dial tone

ON: Dial only with dial tone

P87E 4E

PROGRAM MODE LEVEL
Installer, Remote by PC.

FACTORY DEFAULT
ON: 4 dialling attempts.

NOTES

- Sets the total number of dialling attempts. E.g. If 4 dialling attempts is selected, this means 2 attempts per telephone number.

RELATED OPTIONS
P87E 1E Alternate dialling.

NUMBER OF DIALLING ATTEMPTS

Sets the number of dialling attempts when sending reports.

OFF: sets a maximum 10 dial attempts before a 5 minute sleep and 10 more re-tries if unsuccessful.

ON: allows a maximum of 4 dial attempts before a 5 minute sleep and 4 more retries if unsuccessful.

If all attempts fail the dialler waits for the next trigger event. The previously unsuccessful report will be included in the new message.

When sending Test Calls, the time between dialling attempts increases to 60 minutes for the second round of dialling. If a Test Call is unsuccessful after the first round of calls are made, another call is made after 5 minutes. If this call fails then subsequent calls are made every hour (up to the maximum number of calls).

PROGRAMMING SEQUENCE:

P87E 4E toggles the option ON and OFF

OFF: Maximum 10 dialling attempts

ON: Maximum 4 dialling attempts

PROGRAMMING

| Option No. | Description | AREA1 open/close report 1E | AREA2 open/close report 2E | Chirp siren on kiss-off 3E | Flash strobe on kiss-off 4E | Forced opening report 5E | Delay closing report 6E | Manual exclude report 7E | Auto exclude report 8E |
|------------|------------------------------|-------------------------------|-------------------------------|-------------------------------|--------------------------------|-----------------------------|----------------------------|-----------------------------|---------------------------|
| P88E | OPEN/CLOSE REPORTING OPTIONS | | | | | ON | | ON | ON |

P88E 1E

PROGRAM MODE LEVEL

Installer, Remote by PC.

FACTORY DEFAULT

OFF: No AREA1 Open/Close reports.

AREA1 OPEN/CLOSE REPORTS

Enables or disables sending of AREA1 Open/Close reports.

The User ID of the code used is included in the report.

Keyswitch arming is identified as User 57. Shortcut arming is identified as User 58.

PROGRAMMING SEQUENCE:

P88E 1E toggles the option ON and OFF

OFF: No AREA1 Open/Close reports

ON: AREA1 Open/Close reports enabled

P88E 2E

PROGRAM MODE LEVEL

Installer, Remote by PC.

FACTORY DEFAULT

OFF: No AREA2 Open/Close.

AREA2 OPEN/CLOSE REPORTS

Enables or disables sending of AREA2 Open/Close reports.

PROGRAMMING SEQUENCE:

P88E 2E toggles the option ON and OFF

OFF: No AREA2 Open/Close reports

ON: AREA2 Open/Close reports enabled

P88E 3E

PROGRAM MODE LEVEL

Installer, Remote by PC.

FACTORY DEFAULT

OFF: No Siren Chirp on kiss-off.

RELATED OPTIONS

P88E 4E Flash Strobe on kiss-off.

SIREN CHIRP ON KISS-OFF

Selects a 2 Second Siren burst on a successful Closing report. This is used to give audible indication that the dialler has successfully sent the Arming report.

PROGRAMMING SEQUENCE:

P88E 3E toggles the option ON and OFF

OFF: No Siren Chirp on kiss-off

ON: Siren Chirp on kiss-off enabled

P88E 4E

PROGRAM MODE LEVEL

Installer, Remote by PC.

FACTORY DEFAULT

OFF: No Strobe Flash on kiss-off.

RELATED OPTIONS

P88E 3E Siren Chirp on kiss-off.

STROBE FLASH ON KISS-OFF

Selects a 2 Second Strobe on a successful Closing report. This is used to give visual indication that the dialler has successfully sent the Arming report.

PROGRAMMING SEQUENCE:

P88E 4E toggles the option ON and OFF

OFF: No Strobe Flash on kiss-off

ON: Strobe Flash on kiss-off enabled

P88E 5E

PROGRAM MODE LEVEL

Installer, Remote by PC.

FACTORY DEFAULT

ON: Forced opening Reports enabled

NOTES

- This option is used to indicate to the Central Station that an alarm has been reset by a valid user.

Usually used in cases where Open/Close reports are normally selected OFF.

P88E 6E

PROGRAM MODE LEVEL

Installer, Remote by PC.

FACTORY DEFAULT

OFF: Closing Reports sent on Arming.

RELATED OPTIONS

P88E 1E AREA1 Open/Close reports.

P88E 2E AREA2 Open/Close reports.

P88E 7E

PROGRAM MODE LEVEL

Installer, Remote by PC.

FACTORY DEFAULT

ON: Manual Exclude Reports enabled.

RELATED OPTIONS

P88E 8E Auto Exclude Reports.

P88E 8E

PROGRAM MODE LEVEL

Installer, Remote by PC.

FACTORY DEFAULT

ON: Auto Exclude Reports enabled.

RELATED OPTIONS

P88E 7E Manual Exclude Reports.

FORCED OPENING REPORT

If Forced Opening Report is selected ON – when an alarm has been reset by a valid User Code (or Radio Key), the dialler will send an Opening report along with a restoral report for the zone or miscellaneous input which caused the alarm.

PROGRAMMING SEQUENCE:

P88E 5E toggles the option ON and OFF

OFF: No Forced opening Reports

ON: Forced opening Reports enabled

DELAY CLOSING REPORT

If selected ON, Closing reports (if enabled) are sent at the end of Exit Time. Normally, Closing reports are sent immediately on arming.

PROGRAMMING SEQUENCE:

P88E 6E toggles the option ON and OFF

OFF: Closing Reports sent on Arming

ON: Closing Reports sent at end of Exit Time

MANUAL EXCLUDE REPORT

Enables Manual Exclude Reports for zones. Exclude Reports for 24hr zones are sent on exiting EXCLUDE mode.

PROGRAMMING SEQUENCE:

P88E 7E toggles the option ON and OFF

OFF: No Manual Exclude Reports

ON: Manual Exclude Reports enabled

AUTO EXCLUDE REPORT

Enables Auto Exclude Reports for Zones. Zones not sealed on arming will be reported as Auto Excluded..

PROGRAMMING SEQUENCE:

P88E 8E toggles the option ON and OFF

OFF: No Auto Exclude Reports

ON: Auto Exclude Reports enabled

PROGRAMMING

| Option No. | Description | 1E | 2E | 3E | 4E | 5E | 6E | 7E | 8E |
|------------|-------------------------|----|----|----|----|----|----|----|----|
| P89E | MISC. REPORTING OPTIONS | ON | ON | | ON | | | | |

P89E 1E

PROGRAM MODE LEVEL

Installer, Remote by PC.

FACTORY DEFAULT

ON: Test Calls enabled.

RELATED OPTIONS

P83E Test Call Interval.

P84E Time before next Test call.

P87E 4E Number Of Dialling Attempts.

ENABLE TEST CALLS

This option enables the reporting of dialler test calls to the Central station.

PROGRAMMING SEQUENCE:

P89E 1E toggles the option ON and OFF

OFF: No Test Calls

ON: Test Calls enabled

P89E 2E

PROGRAM MODE LEVEL

Installer, Remote by PC.

FACTORY DEFAULT

ON: Mains Fail report is delayed.

MAINS REPORT DELAY

This option allows Mains Fail reports to be delayed by one hour if the mains power has been off continuously for that time. This avoids mains fail reports being sent to the Central Station in the event of brief power failures.

PROGRAMMING SEQUENCE:

P89E 2E toggles the option ON and OFF

OFF: Mains Fail reports immediately

ON: Mains Fail report is delayed by 1 hour

P89E 3E

PROGRAM MODE LEVEL

Installer, Remote by PC.

FACTORY DEFAULT

OFF: No Listen-In.

NOTES

Use METHOD 1 if you already have the panel box open and have a spare horn speaker on hand.

Use METHOD 2 if the box is closed and you need to quickly listen in to the dialler. Keep in mind that the dialler tones will be heard via any horn speaker/s connected to the Siren output.

LISTEN-IN TO DIALLER

This is a diagnostic feature to allow the installer to hear the dialler message and other telephone tones through a horn speaker.

There are 2 methods of listening to the dialler.

METHOD 1: Temporarily connect a horn speaker to the LISTEN pins on the main board. This method required no programming options to be set - the LISTEN pins are always active.

METHOD 2: This method requires option P89E 3E to be turned on. Listen-In is enabled for a minimum of 4 minutes after exiting Program Mode.

During Method 2 Listen-In, the dialler message and other telephone tones can be heard through the Siren output (at low volume) while the dialler is sending reports. The 4 minute period is restarted whenever any key on the keypad is pressed.

To turn Listen-In off, go back into Installer Program mode and toggle the option OFF.

PROGRAMMING SEQUENCE:

P89E 3E toggles the option ON and OFF

OFF: Method 2 Listen-In disabled

ON: Method 2 Listen-In enabled

P89E 4E

PROGRAM MODE LEVEL

Installer, Remote by PC.

FACTORY DEFAULT

ON: Swinger Shutdown enabled.

NOTES

This prevents unnecessary multiple alarms reported to the Central station in cases, for example, where a door is 'swinging' in the wind.

This option only applies to zones enabled to Report Multiple Zone Alarms.

RELATED OPTIONS

P78E Report Multiple Zone Alarms.

P89E 5E

PROGRAM MODE LEVEL

Installer, Remote by PC.

FACTORY DEFAULT

OFF: No Line Fault Monitor.

RELATED OPTIONS

P122E 5E Line Fault to AUX2.

P89E 7E

PROGRAM MODE LEVEL

Installer, Remote by PC.

FACTORY DEFAULT

OFF: Clock uses mains frequency timing.

SWINGER SHUTDOWN

Limits the number of calls made by a zone alarm in any one armed period.

Alarm reports are normally limited to 15 multiple reports per zone.

When Swinger Shutdown is enabled, multiple reports are reduced to 3 multiple reports per zone.

PROGRAMMING SEQUENCE:

P89E 4E toggles the option ON and OFF

OFF: Swinger Shutdown is 15 reports per zone)

ON: Swinger Shutdown is 3 reports per zone)

LINE FAULT MONITOR

When this option is enabled, the telephone line is regularly tested. If the telephone line is not found, the Line light will commence flashing.

PROGRAMMING SEQUENCE:

P89E 5E toggles the option ON and OFF

OFF: No Line Fault Monitor

ON: Line Fault Monitor enabled

INTERNAL TIMING

When set ON, the Test Report Timer uses the panel's onboard crystal oscillator instead of the external mains power supply frequency.

Use this option if the mains frequency is not stable over long periods. (Not necessary in Australia and New Zealand).

PROGRAMMING SEQUENCE:

P89E 7E toggles the option ON and OFF

OFF: Clock uses mains frequency timing

ON: Clock uses internal timing

PROGRAMMING

| Option No. | Description | Remote Access 1E | Enable First Call Mode 2E | Remote Arming 3E | Remote Disarming 4E | Remote AUX control 5E | Remote status reporting 6E | Remote event reporting 7E | Callback Mode 8E |
|------------|-------------------------|---------------------|------------------------------|---------------------|------------------------|--------------------------|-------------------------------|------------------------------|---------------------|
| P90E | UPLOAD/DOWNLOAD OPTIONS | | | | | | | | |

P90E 1E

PROGRAM MODE LEVEL
Installer, Remote by PC.

FACTORY DEFAULT
OFF: No Remote Access.

RELATED OPTIONS
P91E Required Rings.

REMOTE ACCESS

When selected On, this option allows the panel to be remotely upload/downloaded by a remote computer or controlled by a remote telephone.

When the option is Off, the panel will not answer incoming telephone calls, preventing any type of remote access.

PROGRAMMING SEQUENCE:
P90E 1E toggles the option ON and OFF
OFF: No Remote Access
ON: Remote Access enabled

P90E 2E

PROGRAM MODE LEVEL
Installer, Remote by PC.

FACTORY DEFAULT
OFF: Second Call Mode enabled.

NOTES
If Callback is enabled (P90E 8E is on), then First Call mode is disabled.

RELATED OPTIONS
P91E Required Rings.

ENABLE "FIRST CALL" MODE

For remote access the panel can answer incoming telephone calls on either the First or Second Call.

First Call Mode: The panel answers a telephone call after the number of Rings set by P91E. Used if the panel has the telephone line exclusively or distinctive telephone ring signal is being used.

Second Call Mode: The panel answers on the second telephone call. The first telephone call must ring for at least the number of rings set by P91E. The second call to the panel must be made after a wait of between 10 and 50 seconds. Second Call mode is used to stop other equipment such as fax machines from answering the call.

PROGRAMMING SEQUENCE:
P90E 2E toggles the option ON and OFF
OFF: Second Call Mode enabled
ON: First Call Mode enabled

P90E 3E

PROGRAM MODE LEVEL
Installer, Remote by PC.

FACTORY DEFAULT
OFF: No Remote Arming.

NOTES
• Remote Access must also be enabled.

RELATED OPTIONS
P90E 1E Enable Upload/Download.
See page 71 for details on Remote Operation by telephone.

REMOTE ARMING

Allows the remote Arming of the control panel using a standard DTMF telephone (or mobile phone) from anywhere in the world.

PROGRAMMING SEQUENCE:
P90E 3E toggles the option ON and OFF
OFF: No Remote Arming
ON: Remote Arming enabled

P90E 4E

PROGRAM MODE LEVEL

Installer, Remote by PC.

FACTORY DEFAULT

OFF: No Remote Disarming.

P90E 5E

PROGRAM MODE LEVEL

Installer, Remote by PC.

FACTORY DEFAULT

OFF: No Remote AUX control.

P90E 6E

Available in D8x/D16x V5.6 and later.

PROGRAM MODE LEVEL

Installer, Remote by PC.

FACTORY DEFAULT

OFF: No Remote Status Reporting.

P90E 7E

PROGRAM MODE LEVEL

Installer, Remote by PC.

FACTORY DEFAULT

OFF: No Remote Event Reporting.

P90E 8E

PROGRAM MODE LEVEL

Installer, Remote by PC.

FACTORY DEFAULT

OFF: No Callback.

RELATED OPTIONS

P90E 1E Enable Upload/Download.

P81E Telephone Number 4, Callback.

REMOTE DISARMING

Allows the remote Disarming of the control panel using a standard DTMF telephone (or mobile phone) from anywhere in the world.

PROGRAMMING SEQUENCE:

P90E 4E toggles the option ON and OFF

OFF: No Remote Disarming

ON: Remote Disarming enabled

REMOTE AUX CONTROL

Enables the remote turn ON/OFF of the AUX1, 2, 3 and 4 outputs using a standard DTMF telephone (or mobile phone) from anywhere in the world.

PROGRAMMING SEQUENCE:

P90E 5E toggles the option ON and OFF

OFF: No Remote AUX control

ON: Remote AUX control enabled

REMOTE STATUS AND ARMING

Enables Remote Status Reporting and Arming using NESSCOMMS™ software.

This option allows Remote Viewing of the current arming and alarm states and Remote Keypad Operation including arming & disarming.

Requires NessComms™ V5.2 and later.

PROGRAMMING SEQUENCE:

P90E 6E toggles the option ON and OFF

OFF: No Remote Status Reporting

ON: Remote Status Reporting enabled

REMOTE EVENT REPORTING

Enables Remote Event Reporting

PROGRAMMING SEQUENCE:

P90E 7E toggles the option ON and OFF

OFF: No Remote Status Reporting

ON: Remote Status Reporting enabled

CALLBACK MODE

Enables two methods of connecting by computer for remote upload/download.

NO CALLBACK – Allows remote access by computer as long as the panel's Account Number (P72E) is known. The panel answers on the 2nd incoming call.

WITH CALLBACK – The panel will answer the 2nd call, verify the caller, hang up and then make the Callback using Telephone Number 4.

PROGRAMMING SEQUENCE:

P90E 8E toggles the option ON and OFF

OFF: No Callback

ON: Callback Mode enabled

PROGRAMMING

| Option No. | Description | Default | Note |
|------------|--------------------------|---------|---------------|
| P91E | REQUIRED RINGS TO ANSWER | 1 | 1 to 24 rings |

P91E

PROGRAM MODE LEVEL
Installer, Remote by PC.

FACTORY DEFAULT
1

NOTES
The Australian 'double ring' tone is counted as one ring.

RELATED OPTIONS
P90E 1E to 8E (Remote Access options).

REQUIRED RINGS

Sets the number of rings before an incoming call is answered. This is used for remote access of the panel either by NessComms software or user operation by telephone.

Remote Access can work in First Call or Second Call modes, see option P90E 2E. Programmable from 1 to 24 rings. Enter a value between 1 and 24.

PROGRAMMING SEQUENCE:

- P91E** existing Required Rings value is displayed one digit at a time
- [ENTER NEW VALUE] E** new Required Rings value is displayed one digit at a time

| Option No. | Description | ZONES 1-8 (D8 & D16) | | | | | | | | ZONES 9-16 (D16) | | | | | | | |
|------------|--------------------------|----------------------|---|---|---|---|---|---|---|------------------|----|----|----|----|----|----|----|
| | | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 |
| P94E | "NO MEMORY WARNING"ZONES | | | | | | | | | | | | | | | | |

P94E

PROGRAM MODE LEVEL
Installer, Remote by PC.

FACTORY DEFAULT
no zones selected.

NOTES
• **0E** will turn all selections OFF.
MEMORY E will turn all selections ON.

NO MEMORY WARNING ZONES

Select zones that do not flash the Memory indicator on the keypad/s. The alarm still goes into memory and can be seen when reviewing.

PROGRAMMING SEQUENCE:

- P94E 1E-16E** toggles the option ON and OFF
- [Zone No]E OFF: Memory Warning operates normally for that zone
- [Zone No]E ON: Memory Warning is disabled for that zone

SPECIAL FUNCTIONS

SEND DIALLER TEST REPORT

Send a Dialler Test Report to the telephone number programmed at P70E. This test operates only in User program mode.

P6666666E (eight 6's) Triggers dialler and sends test report to Central Station

SIREN TEST

Turn the Siren, Reset and Strobe Outputs On. Pressing P E will stop the Siren Test (and also exits Program Mode).

This test operates in User and Installer program mode.

P7777777E (eight 7's) Triggers Siren, Reset, Strobe

PANEL RESET

This function resets the microprocessor. The effect is the same as powering down and powering up again. Panel Reset operates in User and Installer program mode.

P8888888E (eight 8's) Panel Reset

PANEL SOFTWARE VERSION

This function displays the panel software version when in program mode. Displayed in decimal format by the zone LEDs.

Example, version 5.4 is displayed by flashing 5 followed by 4.

This test operates in User and Installer program mode.

P9999999E (eight 9's) Displays software version

These options allow selective restoring of various factory defaults. For example, you can default (clear) all the User Codes, without affecting any other programmed options.

Option No. Description

| Option No. | Description |
|------------|--|
| P95E | CLEAR RADIO DEVICES |
| P96E | CLEAR MEMORY |
| P97E | CLEAR PANEL OPTIONS (RESTORE FACTORY DEFAULTS) |
| P98E | CLEAR USER CODES |
| P99E | PROGRAM INSTALLER CODE |

P95E

PROGRAM MODE LEVEL

Installer, Remote by PC.

FACTORY DEFAULT

[not applicable]

CLEAR RADIO DEVICES

This option clears all Radio Devices assigned to zones 1–8 or 1–16.

(This option does not clear User Codes).

PROGRAMMING SEQUENCE:

P95E Clears Radio Device Codes

P96E

PROGRAM MODE LEVEL

Installer, Remote by PC.

FACTORY DEFAULT

[not applicable]

CLEAR MEMORY

Enter P96E when in Installer Program mode to clear all events in the Alarm memory display.

PROGRAMMING SEQUENCE:

P96E Clears Alarm Memory display

P97E

PROGRAM MODE LEVEL

Installer, Remote by PC.

FACTORY DEFAULT

[not applicable]

NOTES

CLEAR PANEL OPTIONS

This option restores 'panel' program options to their factory default values.

Defaults the options P00E, P26E–P94E, P99E, P117E–P125E, P130E–P135E, P281E–P287E, P301E, P303E, P304E, P305E, P311–P319E, P321E–P329E, P331–P339E. (This includes all options except User Codes, Radio Codes & Radio Devices).

PROGRAMMING SEQUENCE:

P97E Restores Factory Defaults

P98E

PROGRAM MODE LEVEL

Installer, Remote by PC.

FACTORY DEFAULT

User Code 1: 123

All other codes: [blank]

NOTES

- This option DOES NOT clear the Installer Code.

CLEAR USER CODES

This option clears all User Codes, (this means all Keypad Codes, Radio Keys and Access cards) and restores User Code 1 to the factory setting of 123.

P201E – P256E are defaulted (User Codes 1–56)

PROGRAMMING SEQUENCE:

P98E Clears User Codes

P99E

PROGRAM MODE LEVEL

Installer, Remote by PC.

FACTORY DEFAULT

000000

PROGRAM THE INSTALLER CODE

Programs the installer code. This code can be 3 to 6 digits long. Factory default installer code is 000000.


PROGRAMMING SEQUENCE:

P99E [Enter new code]E [Enter new code again]E

(Unlike User Codes, the installer code is not displayed when programming)

For a complete list of factory default values, see the Programming Options Summary on pages 72–74.

PROGRAMMING

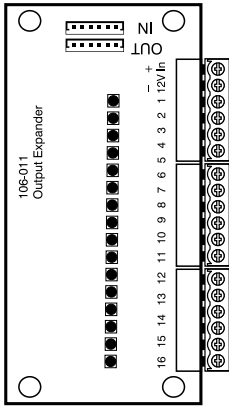

| Option No. | Description | 1E | 2E | 3E | 4E | 5E | 6E | 7E | 8E |
|------------|-------------------------|------------------------|------------------|-------------------|----------------|----|----|----|----|
| P117E | OUTPUT EXPANDER OPTIONS | Enable Output Expander | Alternate Format | Day Zone follower | Output Exclude | | | | |

P117E 1E

PROGRAM MODE LEVEL
Installer, Remote by PC.

FACTORY DEFAULT
OFF: No Output Expander.

- NOTES**
- Up to 2 Output Expander boards can be used per D8 or D16 panel.

ENABLE OUTPUT EXPANDER

Selecting this option enables the optional 106-011 Output Expander. When this option is enabled, the J5 connector on the main board will only drive the Output Expander. All AUX outputs are available on the Output Expander. See the table below for a description of each output.

- PROGRAMMING SEQUENCE:**
P117E 1E toggles the option ON and OFF
 OFF: No Output Expander
 ON: Output Expander enabled

P117E 2E

PROGRAM MODE LEVEL
Installer, Remote by PC.


FACTORY DEFAULT
OFF: No Alternate Format.

- NOTES**
- The 2nd Expander plugs into the 6-way header on the 1st Expander. This 6-way header on the Expander cannot be used for any other purpose.
 - IF ALL 16 ZONES (D16) and the AUX outputs are required then 2 Expanders are needed - in which case select this option so that it best suits the installation wiring.

ALTERNATE EXPANDER FORMAT

Selecting this option changes the alarms on the 1st and 2nd Output Expander. **With the option OFF:** Zone 1 to Zone 16 are on the 1st Expander. The AUX, ARM and other outputs are on the 2nd Expander. Use this option when only Zone outputs are required and only one Expander is used. **With the option ON:** Zones 1 to Zone 8 are on the 1st Expander. The AUX, ARM and other outputs are on the first Expander. Zones 9 to Zone 16 are on the 2nd Expander. Use this option when a variety of outputs are needed using only one Expander.

- PROGRAMMING SEQUENCE:**
P117E 2E toggles the option ON and OFF
 OFF: No Alternate Format
 ON: Alternate Format enabled

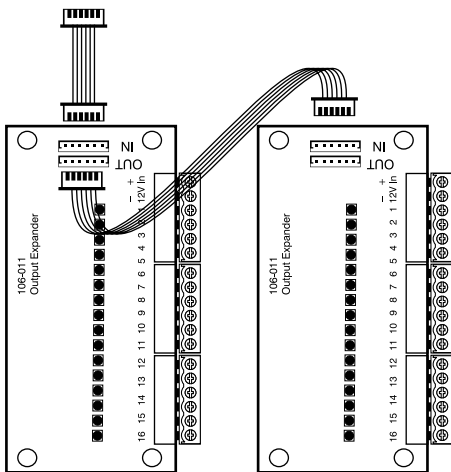

| Alternate format disabled P117E 2E = OFF | | |
|---|---|----------------|
| OUTPUT | EXPANDER 1 (Or if only using one expander) | EXPANDER 2 |
| 1 | Zone 1 | User Code 9 |
| 2 | Zone 2 | User Code 10 |
| 3 | Zone 3 | User Code 11 |
| 4 | Zone 4 | User Code 12 |
| 5 | Zone 5 | User Code 13 |
| 6 | Zone 6 | User Code 14 |
| 7 | Zone 7 | User Code 15 |
| 8 | Zone 8 | Tel. Line Fail |
| 9 | Zone 9 | Aux 1 |
| 10 | Zone 10 | Aux 2 |
| 11 | Zone 11 | Aux 3 |
| 12 | Zone 12 | Aux 4 |
| 13 | Zone 13 | Arm Monitor |
| 14 | Zone 14 | Mains Fail |
| 15 | Zone 15 | Battery Fail |
| 16 | Zone 16 | Ext. Tamper |

| Alternate format enabled P117E 2E = ON | | |
|---|---|----------------|
| OUTPUT | EXPANDER 1 (Or if only using one expander) | EXPANDER 2 |
| 1 | Zone 1 | User Code 9 |
| 2 | Zone 2 | User Code 10 |
| 3 | Zone 3 | User Code 11 |
| 4 | Zone 4 | User Code 12 |
| 5 | Zone 5 | User Code 13 |
| 6 | Zone 6 | User Code 14 |
| 7 | Zone 7 | User Code 15 |
| 8 | Zone 8 | Tel. Line Fail |
| 9 | Aux 1 | Zone 9 |
| 10 | Aux 2 | Zone 10 |
| 11 | Aux 3 | Zone 11 |
| 12 | Aux 4 | Zone 12 |
| 13 | Arm Monitor | Zone 13 |
| 14 | Mains Fail | Zone 14 |
| 15 | Battery Fail | Zone 15 |
| 16 | Ext. Tamper | Zone 16 |

P117E 3E

PROGRAM MODE LEVEL

Installer, Remote by PC.

FACTORY DEFAULT

OFF: No Day Zone Follower.

NOTES

- Day zone outputs are turned off when the D16 is in Monitor or Area modes.

DAY ZONE FOLLOWER

This option allows Day zones to appear on the Zone Outputs.

In Day mode the Zone Output will follow the state of any active Day zone. This occurs independently of the Program Zone selections P118E (Output Expander Zone Follower) and P119E (Output Expander Zone Latch).

PROGRAMMING SEQUENCE:

P117E 3E toggles the option ON and OFF

OFF: No Day Zone Follower

ON: Day Zone Follower enabled

P117E 4E

PROGRAM MODE LEVEL

Installer, Remote by PC.

FACTORY DEFAULT

OFF: No Output Exclude.

OUTPUT EXCLUDE

This allows zones selected for Manual Exclusion (not Auto Exclusion) to also Exclude the Expander Zone outputs. With this option ON, and if a zone has been manually excluded then it will not signal an alarm on the Expander.

PROGRAMMING SEQUENCE:

P117E 4E toggles the option ON and OFF

OFF: No Output Exclude

ON: Output Exclude enabled

| Option No. | Description | ZONES 1-8 (D8 & D16) | | | | | | | | ZONES 9-16 (D16) | | | | | | | |
|------------|-----------------------------|----------------------|---|---|---|---|---|---|---|------------------|----|----|----|----|----|----|----|
| | | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 |
| P118E | OUTPUT EXPANDER ZONES | | | | | | | | | | | | | | | | |
| P119E | OUTPUT EXPANDER ALARM ZONES | | | | | | | | | | | | | | | | |

P118E

PROGRAM MODE LEVEL

Installer, Remote by PC.

FACTORY DEFAULT

All OFF: No Output Expander zones.

NOTES

- Selecting a zone in both P118 & P119 options effectively gives pulsed outputs whenever that zone alarms.

OUTPUT EXPANDER ZONES

This selects the zones that will be output whenever the zone is unsealed. When the zone reseals the output automatically goes off.

Additionally if a zone is also selected in P119 (to zone latch) then an output will only occur whenever a zone is in alarm and is also unsealed. In this case when the zone reseals the output automatically goes off again. A further zone unseal will turn the zone Expander output On again.

PROGRAMMING SEQUENCE:

P118E 1E-16E toggles the options ON and OFF

[Zone No]E OFF: Output Expander disabled for that zone

[Zone No]E ON: Output Expander enabled for that zone

P119E

PROGRAM MODE LEVEL

Installer, Remote by PC.

FACTORY DEFAULT

OFF: No Output Expander zone latch.

OUTPUT EXPANDER ALARM ZONES

This selects the zones that will be output whenever the zone is latched into alarm. The output goes off only when the alarm system is reset.

Additionally if a zone is also selected in P118 (to zone follow) then an output will only occur whenever a zone is in alarm and is also unsealed. (See P118 above).

PROGRAMMING SEQUENCE:

P119E 1E-16E toggles the option ON and OFF

[Zone No]E OFF: Output Expander zone alarm disabled for that zone

[Zone No]E ON: Output Expander zone alarm enabled for that zone

PROGRAMMING

PROGRAM MODE LEVEL
Installer, Remote by PC.

| Option No. | Description | Latched keyswitch input 1E | Monitor Arm chirps 2E | Radio Key AUX arms Monitor 3E | Keyswitch ARM only 4E | Keyswitch DISARM only 5E | Smart Beep 6E | Entry Delay Timer1 x10 7E | Area2 Disarm by Keyswitch Allowed 8E |
|------------|---------------|--------------------------------------|---------------------------------|---|---------------------------------|------------------------------------|-------------------------|-------------------------------------|--|
| P120E | OTHER OPTIONS | | | | | | | | |

PROGRAMMING SEQUENCE:

P120E [1E-6E] Turns options on or off.

P120E 1E

RELATED OPTIONS
P60E 2E, 3E Keyswitch options.

P120E 2E

NOTE. This option enables Radio Key Monitor Arming chirps regardless of the state of P64E 4E (Radio Key siren chirps).

P120E 3E

NOTE
This option enables Radio Key Monitor Arming chirps regardless of the state of P64E 4E (Radio Key siren chirps).

RELATED OPTIONS
P69E 5E Radio key Monitor arm by ON/OFF buttons.

P120E 4E

RELATED OPTIONS
P120E 1E Latched Keyswitch.
P60E 2E, 3E Keyswitch options.

P120E 5E

RELATED OPTIONS
P120E 1E Latched Keyswitch.
P60E 2E, 3E Keyswitch options.

P120E 6E

NOTES

- The zone causing the event is saved and can be identified by viewing MEMORY. Only one of the same consecutive zone warnings is saved, although the MEMORY display will flash each time (unless disabled by P94E option).
- Smart Beeps work in addition to any other outputs mapped to Monitor and Day alarms, as programmed by options P63E 1E-8E.
- Smart Beeps work in conjunction with any other Monitor and Day mode outputs, (as set by options P63E 1E-8E).

P120E 7E

Available in D8x/D16x V5.6 and later.

RELATED OPTIONS
P26E Entry Delay Time1.

P120E 8E

Available in D8x/D16x V5.6 and later.

RELATED OPTIONS
P60E 2E, 3E. P120E 1E, 4E, 5E.

LATCHED KEYSWITCH

This option enables the use of a latched, (2 position on/off), keyswitch. Keyswitch operation must first be enabled using options P60E 2E, 3E, page 24.

NOTE: ENABLING LATCHED KEYSWITCH DISABLES ALL OTHER METHODS OF ARMING AND DISARMING (KEYPAD, RADIO KEY, CARD).

OFF: No Latched Keyswitch. (Factory default). ON: Latched Keyswitch enabled.

MONITOR ARM CHIRPS BY RADIO KEY

This option enables siren chirps when arming and disarming Monitor Mode with a Radio Key.

OFF: No Monitor Arm chirps. (Factory default). ON: Monitor Arm chirps enabled.

RADIO AUX BUTTON ARMS MONITOR MODE

This option enables the AUX button on a Ness RK4 Radio Key to arm Monitor Mode. When this option is enabled, options P122E 3E & 4E will be disabled, (AUX button to Aux2 options. See page 58).

(This option is independent of P69E 5E, Monitor arming by radio key ON/OFF buttons).

OFF: No AUX button Monitor Arm. (Factory default). ON: AUX button Monitor Arm enabled.

KEYSWITCH DISARM ONLY

Converts the use of keyswitch operation using P60E 2E and 3E to only DISARM either from Area or Monitor mode. Keyswitch operation must first be enabled using options P60E 2E, 3E, page 22.

OFF: Keyswitch arms and disarms. (Factory default). ON: Keyswitch disarms only.

KEYSWITCH ARM ONLY

Converts the use of keyswitch operation using P60E 2E and 3E to only ARM either from Area or Monitor mode.

Keyswitch operation must first be enabled using options P60E 2E, 3E, page 24 .

OFF: Keyswitch arms and disarms. (Factory default). ON: Keyswitch arms only.

SMART BEEPS

Smart Beeps are available in Brief Monitor or Brief Day mode to identify zones by keypad beeps.

When a Monitor zone or Day zone is triggered, the zone number is slowly beeped out, followed by 2 seconds of silence. This is repeated 3 times and can be stopped by another beep (such as keypress).

If the zone has entry delay you will hear the Smart Beeps sequence once when the zone is triggered and again at the end of entry delay. If Entry Beeps are disabled (P60E 1E), Smart Beeps will only be heard at the end of entry delay.

Smart Beeps use the keypad/s onboard sonalert, so option P63E 3E and/or 7E must be on to enable the sonalert output for Monitor alarms and Day alarms.

OFF: Smart Beeps disabled. (Factory default). ON: Smart Beeps enabled.

ENTRY DELAY EXTENDER

Increases the Entry Delay Time1 by a factor of 10. Example, if P26E is programmed for 30 sec, it becomes 300 sec. (Entry Delay Time2 is unaffected).

OFF: Normal Entry Delay Time. (Factory default). ON: Entry Delay Multiplied by 10.

AREA2 DISARM BY KEYSWITCH ALLOWED

This option allows the keyswitch (if enabled) to disarm Area2. Note, the keyswitch cannot arm Area2, only disarm. Though it can both arm & disarm Area1.

OFF: Option Disabled. (Factory default). ON: Option Enabled.

AUX1 OUTPUT OPTIONS

Sets the behaviour of the Aux1 output.
Only one option can be selected.

| Option No. | Description | Zone alarms to Aux1 1E | Zone Supervision alarms to Aux1 2E | Radio Key Panic TOGGLES Aux 1 3E | Radio Key Panic PULSES Aux1 4E | 5E | Enable phone control of Aux1 6E | DOTL alerts to Aux1 7E | Reader output pulses Aux1 8E |
|------------|---------------------|----------------------------------|--|--|--|-----------|---|----------------------------------|--|
| P121E | AUX1 OUTPUT OPTIONS | ON | | | | | | | |

PROGRAM MODE LEVEL
Installer, Remote by PC.

PROGRAMMING SEQUENCE:

P121E [1E–8E] Turns an option on. Only one option can be on.

P121E 1E

RELATED OPTIONS
P58E Aux1 zones.

ZONE ALARMS TO AUX1

With this option ON, zones selected in P58E will turn on Aux1 when they go into alarm. The Aux1 output turns off when the panel is disarmed/reset.

- 1E OFF: Zone Alarms do not turn on Aux1.
- 1E ON: Zone Alarms turn on Aux1. (Factory default).

P121E 2E

RELATED OPTIONS
P65E, P66E, P67E Radio Supervision.

ZONE SUPERVISION ALARMS TO AUX1

Setting this option turns the AUX1 output ON when a SUPERVISED RADIO alarm is triggered. The Aux1 output turns off when the panel is disarmed/reset.

- 2E OFF: Zone Supervision Alarms do not turn on Aux1. (Factory default).
- 2E ON: Zone Supervision Alarms turn on Aux1

P121E 3E

NOTES
When this option is enabled, the Radio Key/s Panic button will no longer sound alarms or report to the dialler.

RADIO KEY PANIC TOGGLE

When this option is on, Radio Key/s Panic button will TOGGLE the Aux1 output. The Aux1 output will operate independently of the panel's armed status, ie. disarming does not turn Aux1 off.

- 3E OFF: Radio Key Panic does not Toggle Aux1. (Factory default).
- 3E ON: Radio Key Panic Toggles Aux1.

P121E 4E

NOTES
When this option is enabled, the Radio Key/s Panic button will no longer sound alarms or report to the dialler.

RADIO KEY PANIC PULSE

When this option is on, Radio Key/s Panic button will PULSE the Aux1 output, (on for 2 sec).

- 4E OFF: Radio Key Panic does not Pulse Aux1. (Factory default).
- 4E ON: Radio Key Panic Pulses Aux1.

P121E 6E

RELATED OPTIONS
P90E 5E, Enable remote Aux control.

ENABLE TELEPHONE REMOTE CONTROL OF AUX1

Enables Aux1 output to be controlled by telephone remote control. P90E 5E must also be enabled. After establishing telephone control of the panel, use telephone key "3" to toggle the output on and off.

- 6E OFF: Aux1 cannot be controlled by telephone. (Factory default).
- 6E ON: Aux1 can be controlled by telephone.

P121E 7E

RELATED OPTIONS
P303E DOTL zones.
P304E DOTL timer.

DOOR OPEN TOO LONG (DOTL) ALERTS TO AUX1

This option enables DOTL zones (P303E) to turn on Aux1 when the DOTL Time (P304E) expires.

- 7E OFF: DOTL alert does not turn on Aux1. (Factory default).
- 7E ON: DOTL alert turns on Aux1.

P121E 8E

RELATED OPTIONS
P318E, P328E, P338E, P319E, P329E, P339E.

READER OUTPUT TO AUX1

This option enables an access control reader to pulse Aux1 when a valid access card is presented. Set the reader using P318E, P328E or P338E

- 8E OFF: No reader output to Aux1. (Factory default).
- 8E ON: Reader output to Aux1.

PROGRAMMING

AUX2 OUTPUT OPTIONS
Sets the behaviour of the Aux2 output.
Only one option can be selected.

| Option No. | Description | 1E | 2E | 3E | 4E | 5E | 6E | 7E | 8E |
|------------|---------------------|----|----|----|----|----|----|----|----|
| P122E | AUX2 OUTPUT OPTIONS | ON | | | | | | | |

PROGRAM MODE LEVEL
Installer, Remote by PC.

PROGRAMMING SEQUENCE:

P122E [1E-8E] Turns an option on. Only one option can be on.

P122E 1E

RELATED OPTIONS
P59E Aux2 zones.

ZONE ALARMS TO AUX2

With this option ON, zones selected in P59E will turn on Aux2 when they go into alarm. The Aux2 output turns off when the panel is disarmed/reset.

- 1E OFF: Zone Alarms do not turn on Aux2.
- 1E ON: Zone Alarms turn on Aux2. (Factory default).

P122E 2E

RELATED OPTIONS
P65E, P66E, P67E Radio Supervision.

ZONE SUPERVISION ALARMS TO AUX2

Setting this option turns the AUX2 output ON when a SUPERVISED RADIO alarm is triggered. The Aux2 output turns off when the panel is disarmed/reset.

- 2E OFF: Zone Supervision Alarms do not turn on Aux2. (Factory default).
- 2E ON: Zone Supervision Alarms turn on Aux2.

P122E 3E

RADIO KEY AUX BUTTON TOGGLE

When this option is on, Radio Key/s AUX button will TOGGLE the Aux2 output. The Aux2 output will operate independently of the panel's armed status, ie. disarming does not turn Aux2 off.

- 3E OFF: Zone Supervision Alarms do not turn on Aux2. (Factory default).
- 3E ON: Zone Supervision Alarms turn on Aux2.

P122E 4E

RADIO KEY AUX BUTTON PULSE

When this option is on, Radio Key/s AUX button button will PULSE, (on for 2 sec), the Aux2 output.

- 4E OFF: Radio Key AUX button does not Pulse Aux2. (Factory default).
- 4E ON: Radio Key AUX button Pulses Aux2.

P122E 5E

TELEPHONE LINE FAULT TO AUX2

When this option is enabled, a telephone line fault condition will turn on the Aux2 output. Aux 2 will turn off when the telephone line is restored.

- 5E OFF: No telephone line fault to Aux2. (Factory default).
- 5E ON: Telephone line fault to Aux2.

P122E 6E

RELATED OPTIONS
P90E 5E, Enable remote Aux control.

ENABLE TELEPHONE REMOTE CONTROL OF AUX2

Enables Aux2 output to be controlled by telephone remote control. P90E 5E must also be enabled. After establishing telephone control of the panel, use telephone key "4" to toggle the output on and off.

- 6E OFF: Aux2 cannot be controlled by telephone. (Factory default).
- 6E ON: Aux2 can be controlled by telephone.

P122E 7E

RELATED OPTIONS
P303E DOTL zones.
P304E DOTL timer.

DOOR OPEN TOO LONG (DOTL) ALERTS TO AUX2

This option enables DOTL zones (P303E) to turn on Aux2 when the DOTL Time (P304E) expires.

- 7E OFF: DOTL alert does not turn on Aux2. (Factory default).
- 7E ON: DOTL alert turns on Aux2.

P122E 8E

RELATED OPTIONS
P318E, P328E, P338E, P319E, P329E, P339E

READER OUTPUT TO AUX2

This option enables an access control reader to pulse Aux2 when a valid access card is presented. Set the reader using P318E, P328E or P338E

- 8E OFF: No reader output to Aux2. (Factory default).
- 8E ON: Reader output to Aux2.

AUX3 OUTPUT OPTIONS

Sets the behaviour of the Aux3 output.
Only one option can be selected.

| Option No. | Description | Area1 arm output to Aux3 1E | 2E | 3E | 4E | 5E | Enable phone control of Aux3 6E | Aux3 Pulses 7E | Reader output pulses Aux3 8E |
|------------|---------------------|---------------------------------------|-----------|-----------|-----------|-----------|---|--------------------------|--|
| P123E | AUX3 OUTPUT OPTIONS | ON | | | | | | | |

PROGRAMMING SEQUENCE:

P123E [1E-8E] Turns an option on. Only one option can be on.

PROGRAM MODE LEVEL

Installer, Remote by PC.

P123E 1E

NOTES

This option makes Aux3 act like the Arm1 output on previous versions of D8/D16.

P123E 6E

RELATED OPTIONS

P90E 5E, Enable remote Aux control.

P123E 7E

Available in D8x/D16x V5.6 and later.

RELATED OPTIONS

P90E 5E, Enable Remote Aux Control.
P123E 6E. Enable Remote Control of Aux3.

P123E 8E

RELATED OPTIONS

P318E, P328E, P338E, P319E, P329E, P339E.

AREA1 ARMED OUTPUT TO AUX3

When this option is enabled, Aux3 will turn on and off when Area1 is armed and disarmed.

1E OFF: Area1 armed output does not turn on Aux3.

1E ON: Area1 armed output turns on Aux3. (Factory default).

ENABLE TELEPHONE REMOTE CONTROL OF AUX3

Enables Aux3 output to be controlled by telephone remote control. P90E 5E must also be enabled. After establishing telephone control of the panel, use telephone key "5" to toggle the output on and off.

6E OFF: Aux3 cannot be controlled by telephone. (Factory default).

6E ON: Aux3 can be controlled by telephone.

PULSE AUX3 (TELEPHONE REMOTE CONTROL)

If the Aux3 output is enabled for Remote Control By Telephone (P124E 6E) this option programs Aux3 for either Toggle or Pulse operation. See page 71 for information on Remote Operation By Telephone.

7E OFF: Aux3 Remote Control TOGGLES. Press on, press off. (Factory default).

7E ON: Aux3 Remote Control PULSES. MOMENTARY on for 5 sec.


READER OUTPUT TO AUX3

This option enables an access control reader to pulse Aux3 when a valid access card is presented. Set the reader using P318E, P328E or P338E



8E OFF: No reader output to Aux3. (Factory default).

8E ON: Reader output to Aux3.

AUX3 & AUX4 CONNECTION EXAMPLES

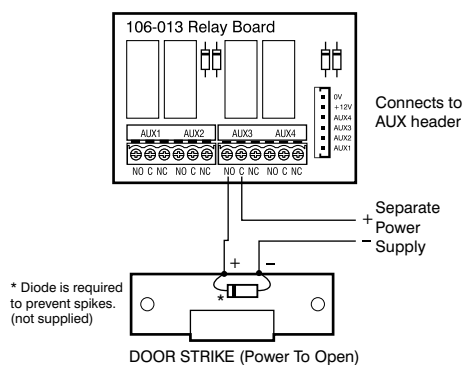

Recommended wiring of an electric door strike using the Ness 106-013 Relay Board and separate power supply.

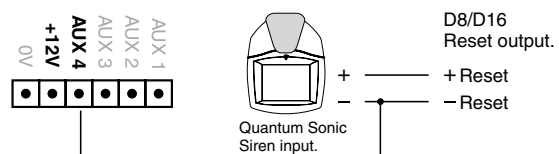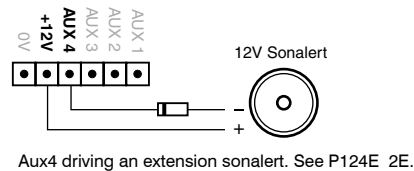

Aux4 driving the Quantum Sonic onboard siren as an extension sonalert.

PROGRAMMING

| AUX4 OUTPUT OPTIONS | | Area2 arm output to Aux4 | Extension sonalert | | | | Enable phone control of Aux4 | Aux4 Pulses | Reader output pulses Aux4 |
|---------------------|---------------------|--------------------------|--------------------|----|----|----|------------------------------|-------------|---------------------------|
| Option No. | Description | 1E | 2E | 3E | 4E | 5E | 6E | 7E | 8E |
| P124E | AUX4 OUTPUT OPTIONS | ON | | | | | | | |

PROGRAM MODE LEVEL
Installer, Remote by PC

P124E 1E

NOTES
This option makes Aux4 act like the Arm2 output on previous versions of D8/D16.

P124E 2E

NOTES
The extension beeper can either be a standard 12V sonalert or wire directly to the Ness Quantum Sonic as shown. Keypad beeps will be heard at low volume from the Quantum Sonic's onboard siren. (Normal siren sound is unaffected).

P124E 5E

NOTES
Available in D8x/D16x V5.5 and later.
P87E 4E should be OFF to enable 10 dialling attempts. This will allow the dialler to communicate via the alternative pathway on the 5th dialling attempt. (Assuming AUX4 has already triggered the backup communications device).

P124E 6E

RELATED OPTIONS
P90E 5E, Enable remote Aux control.
P124E 7, Telephone Remote Control Pulse Aux4

P124E 7E

Available in D8x/D16x V5.6 and later.
RELATED OPTIONS
P90E 5E, Enable Remote Aux Control.
P124E 6E. Enable Remote Control of Aux4.

P124E 8E

RELATED OPTIONS
P318E, P328E, P338E, P319E, P329E, P339E.

AREA2 ARMED OUTPUT TO AUX4

When this option is enabled, Aux4 will turn on and off when Area2 is armed and disarmed.

- 1E OFF: Area2 armed output does not turn on Aux4.
- 1E ON: Area2 armed output turns on Aux4. (Factory default).

ENABLE EXTENSION SONALERT

Enables the Aux4 output to duplicate all keypad beeps including keypress beeps. This is useful in cases where, for example, entry beeps or other keypad beeps need to be heard in more than one location on the premises. (Adding an additional keypad would achieve the same effect).

- 2E OFF: Extension sonalert disabled. (Factory default).
- 2E ON: Extension sonalert enabled.

FAIL TO COMMUNICATE OUTPUT

When this option is enabled AUX4 will turn on at the start of the fourth dialout attempt. This can be used as Fail To Communicate output to trigger backup communications devices such as GSM. The AUX4 output is automatically turned off on the next successful communication attempt or when the panel is next disarmed.

- 5E OFF: Aux4 is not a FAIL TO COMMUNICATE output. (Factory default).
- 5E ON: Aux4 is a FAIL TO COMMUNICATE output.

ENABLE TELEPHONE REMOTE CONTROL OF AUX4

Enables Aux4 output to be controlled by telephone remote control. P90E 5E must also be enabled. See page 71 for information on Remote Operation By Telephone.

- 6E OFF: Aux4 cannot be controlled by telephone. (Factory default).
- 6E ON: Aux4 can be controlled by telephone.

PULSE AUX4 (TELEPHONE REMOTE CONTROL)

If the Aux4 output is enabled for Remote Control By Telephone (P124E 6E) this option programs Aux4 for either Toggle or Pulse operation. See page 71 for information on Remote Operation By Telephone.

- 7E OFF: Aux4 Remote Control TOGGLES. Press on, press off. (Factory default).
- 7E ON: Aux4 Remote Control PULSES. MOMENTARY on for 5 sec.

READER OUTPUT TO AUX4

This option enables an access control reader to pulse Aux4 when a valid access card is presented. Set the reader using P318E, P328E or P338E

- 8E OFF: No reader output to Aux4. (Factory default).
- 8E ON: Reader output to Aux4.

| Option No. | Description | ZONES 1-8 (D8 & D16) | | | | | | | | ZONES 9-16 (D16) | | | | | | | |
|------------|------------------------|----------------------|----|----|----|----|----|----|----|------------------|----|----|----|----|----|----|----|
| | | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 |
| P125E | ENABLE HARDWIRED ZONES | ON | ON | ON | ON | ON | ON | ON | ON | ON | ON | ON | ON | ON | ON | ON | ON |

P125E

PROGRAM MODE LEVEL
Installer, Remote by PC.

FACTORY DEFAULT
All on.

NOTES
• THIS OPTION APPLIES ONLY TO WIRED ZONES AND HAS NO EFFECT ON RADIO ZONES.

ENABLE HARDWIRED ZONES

This option allows hardwired zone inputs to be enabled or disabled. Disabled zones are ignored and do not need to be terminated with end of line resistors. This option has no effect on radio zones.

PROGRAMMING SEQUENCE:

P125E 1E-16E toggles the options ON and OFF

- [Zone No]E OFF: Output Expander disabled for that zone
- [Zone No]E ON: Output Expander enabled for that zone

RADIO DEVICES OPERATION

ALARM: Any Ness radio device can operate on any zone. Hardwired zones continue to operate in parallel.

Radio Keys can also operate on radio zones for special purposes, but they should normally be used as Radio Codes.

Keyswitch input: A Radio Device programmed to Zone 8 will still work as an alarm even if the Zone 8 input operation has been changed to Keyswitch operation. The P60E 2E and 3E options only affect the Zone 8 terminal inputs.

VIBRATION: Radio device zone signals IGNORE the P30E–P38E vibration sensor settings.

TAMPER REPORT: Radio Device Tamper operation depends on the Armed State of the control panel.

RADIO TAMPER: causes the keypad to continuously beep and also to flash the RADIO, TAMPER and the ZONE (identifying the detector) lights. Pressing any key on the keypad or sending a TAMPER RESTORE will clear this warning.


LOW BATTERY REPORT: A low battery gives 10 beeps and flashes the RADIO & the BATTERY light. The ZONE light identifying the radio device is also ON. The flashing lights stop when any key on the keypad is pressed or a detector code with no low battery is received. Low Battery generates HISTORY and DIALLER reports ONCE only (until the low battery is fixed and a restore report is received).

Supervision: If a zone has the P65E option ON and a radio code has been programmed for that zone, then the supervision is active. This means that the radio detector does not need to have its SUPER enabled (via header link) for the SUPERVISED timeout to occur. (Useful as an inactivity alarm). A zone supervision failure always flashes the identifying ZONE light and the RADIO light.

See pages 31-33 for more information about Zone Supervision.

NOTES

- Signal strength of Radio Keys can be tested in USER PROGRAM Mode or INSTALLER PROGRAM Mode.
- Signal strength of all other Radio Devices is tested in INSTALLER PROGRAM Mode.
- PRESS 3E to test the signal strength of the selected transmitter ONLY. (Other devices will be ignored).
- PRESS 4E to test the signal strength of ANY Ness transmitter (including unprogrammed devices).

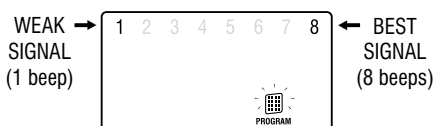

RADIO EVENTS TABLE

NESS RADIO DEVICES Radio Events Table




| SIGNAL TYPE | RKP RADIO KEYPAD 100-001 | RK1 RADIO KEY PENDANT 100-663 | RK3 RADIO KEY 3 BUTTON 100-664 | RK4 RADIO KEY 4 BUTTON 100-667 | R12 RADIO PIR R15 RADIO PIR 100-691/100-663 | RR1/RR2 RADIO REED SWITCH 100-662/100-527 | RPB RADIO EMERG BUTTON 100-283 | RSM RADIO SMOKE DETECTOR 106-040 |
|--------------|-----------------------------|----------------------------------|-----------------------------------|-----------------------------------|---|--|-----------------------------------|-------------------------------------|
| ARM / DISARM | 15 User IDs | | ON/OFF buttons | ON/OFF buttons | | | | |
| ALARM | | | | | yes | yes | | yes |
| RESTORAL | | | | | | yes | | |
| PANIC | * [star buttons] | PANIC button | PANIC button | PANIC button | | | PANIC button | |
| AUX | yes | | | yes | | | | |
| LOW BATT | yes | yes | yes | yes | yes | yes | yes | yes |
| TAMPER | | | | | yes (100-691) | yes | | |
| SUPERVISION | yes | | | | yes | yes | yes | |

NESS RADIO INTERFACE

The Ness Radio Interface (Part No. 100–200) is the optional serial radio receiver required to enable all radio functions. Connection to the control panel is via a 4 wire loom and plug supplied with the Ness Radio Interface.

NESS D8X/D16 CONTROL PANEL

NESS RADIO INTERFACE Part No. 100-200

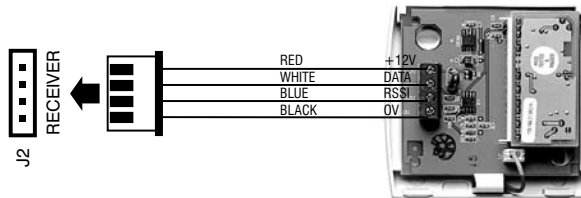

NOTES

- The Ness Radio Interface should be installed outside the control panel to prevent interference from the control panel's electronics. If the Radio Interface must be installed inside a metal enclosure, the antenna wire should protrude outside the enclosure.
- In cases where radio reception needs to be improved, the Radio Interface can be installed up to 50 metres away from the control panel. Use 14/0.20 SHIELDED cable or equivalent. The shield can either be connected to the EARTH connection or left unconnected. Leave the shield unconnected at the receiver end.
- For best performance, the antenna wire should be kept straight and not coiled, shortened or extended. An optional external antenna is available (100-046) for use in areas where the radio signal is marginal.

RADIO SIGNAL STRENGTH TEST

The Radio Signal Strength Test can be used to test the radio signal from any Ness radio device. The strength of the radio signal received is displayed on the zone lights 1 to 8 and beeped by the keypad.

The higher the number displayed (and beeped) the stronger the signal received.

TEST SEQUENCE:

- 1 Enter the program option for the radio device to be tested
For Radio Keys: options P201E–P256E. For Radio Devices, options P101E–P116E.
- 2 Press 3E
- 3 Trigger the radio device
 - One of zone lights 1 to 8 will turn ON to indicate the signal strength from the transmitter.
 - The Signal Strength display remains on until another command is entered.
 - To clear the display and re-test the transmitter, simply press 3E again (or 4E to test any other transmitter).

P101E – P116E

PROGRAM MODE LEVEL

Installer.

FACTORY DEFAULT

No Radio Devices programmed.

NOTES

- Radio Device programming is done by 'learning' the code by radio.
- Radio Devices codes can only be deleted by keypad.
- Some Ness Radio Devices send separate Alarm and Restore signals.
- For special purposes, radio zones can be also programmed to accept radio keys. In this case the zone can not also be programmed to accept a radio device.
- Late model Ness Radio PIRs (100–663) and Radio Reed Switches (100–662) send Supervision signals.


SUPERVISION RELATED OPTIONS

P65E Supervised Radio Zones.


P66E Radio Supervision Alerts.

P67E Radio Supervision Time.


P75E 12E Radio Supervision Fail Report.

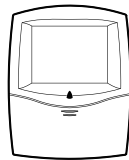


100–691
Ness R12 Radio PIR



100–663
Ness R15 Radio PIR

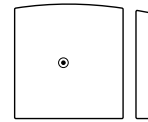

100–527
Ness Universal
Transmitter



100–662
Ness Radio
Reed Switch

RADIO DEVICE PROGRAMMING

Each of the zones of the D8 or D16 can be a radio zone. Once programmed, zones can accept both radio devices and normal zone inputs simultaneously.

The optional 100–200 Ness Radio Interface is required for radio devices to operate.

A radio device is any type of Ness transmitter including Radio PIR, Radio Reed Switches, Radio Smoke Detector.

PROGRAMMING RADIO DEVICES

Up to 8 or 16 radio devices can be assigned to the D8 and D16, (one per zone).

PROGRAMMING SEQUENCE – NO RESTORALS

Suitable for 100–663 R15 Radio PIR, 100–691 R12 Radio PIR, 100–665 Radio Pendant, 100–203 Radio Smoke Detector.

- Select a zone using P101E – P116E** (options P109E–P116E apply to D16 only).
The ARMED light will be ON if a Radio Device is already programmed to the zone. Press 0E to delete.
- Press 1E**
The READY light will turn ON to indicate that the zone is ready to accept the Radio Device.
- Trigger the Radio Device**
 - If the Radio Device is accepted, the READY light will turn off, the ARMED light will turn on and 3 beeps will sound.
 - If the READY light stays on and a warning beep sounds, the Radio Device is already assigned to another zone and must be cleared from that zone first.
 - If SUPERVISED SIGNALS have also been successfully recognised, the TAMPER light will turn ON.

EXAMPLE: To program a Radio PIR on zone 1:

P101E 1E Trigger the Radio PIR (or simply connect the battery)

PROGRAMMING SEQUENCE – WITH RESTORALS

Suitable for 100–662 **Radio Reed Switch**.

- Alarm the reed switch, ie., move the magnet away from the switch**
Leave the reed switch in the alarm condition and wait until radio transmission has stopped.
- Select a zone using P101E – P116E**
The ARMED light will be ON if a Radio Device is already programmed to the zone. Press 0E to delete.
- Press 1E**
The READY light will turn ON to indicate that the zone is ready to accept the Radio Device.
- Restore the reed switch (place the magnet next to the switch)**
 - If the Radio Device is accepted, the READY light will turn off, the ARMED light will turn on and 3 beeps will sound.
 - The MEMORY light will turn on to indicate that this device sends Restorals.
 - If the READY light stays on and a warning beep sounds, the Radio Device is already assigned to another zone and must be cleared from that zone first.
 - If SUPERVISED SIGNALS have also been successfully recognised, the TAMPER light will turn ON.

EXAMPLE: To program a Radio Reed Switch with Restorals on zone 2:

Alarm the reed switch **P102E 1E** Restore the reed switch

DELETING A RADIO DEVICE:

- Use P101E to P116E to select the zone**
- Press 0E to clear the device (3 beeps will sound)**



The Ness R12 and R15 Radio PIRs have a TEST link which disables the re-transmit timer, allowing the detector to be walk tested without waiting for the 4 minute re-transmit timer to expire. If the TEST link is left on, the PIR will automatically revert to normal mode after 30 minutes.

TEST mode can be re-started by briefly removing then replacing the battery.

RADIO DEVICES - OPTION TABLE

| | | |
|----------|---------|-------|
| D8 & D16 | Zone 1 | P101E |
| | Zone 2 | P102E |
| | Zone 3 | P103E |
| | Zone 4 | P104E |
| | Zone 5 | P105E |
| | Zone 6 | P106E |
| | Zone 7 | P107E |
| | Zone 8 | P108E |
| D16 | Zone 9 | P109E |
| | Zone 10 | P110E |
| | Zone 11 | P111E |
| | Zone 12 | P112E |
| | Zone 13 | P113E |
| | Zone 14 | P114E |
| | Zone 15 | P115E |
| | Zone 16 | P116E |



TIP: To prevent conflicting radio signals when programming Radio Devices, disable each device once you have finished programming it. (Remove the battery or open the RADIO link).

Remember to enable all the devices when programming is completed.

**USER CODE
OPTIONS TABLE**

EXTRA
OPTIONS
MODE
(Exclude Light
is on).

| USER CODE | OPTION NO. | 5E RADIO CODE |
|------------|------------|---------------|
| 1 (Master) | P201E | |
| 2 | P202E | |
| 3 | P203E | |
| 4 | P204E | |
| 5 | P205E | |
| 6 | P206E | |
| 7 | P207E | |
| 8 | P208E | |
| 9 | P209E | |
| 10 | P210E | |
| 11 | P211E | |
| 12 | P212E | |
| 13 | P213E | |
| 14 | P214E | |
| 15 | P215E | |
| 16 | P216E | |
| 17 | P217E | |
| 18 | P218E | |
| 19 | P219E | |
| 20 | P220E | |
| 21 | P221E | |
| 22 | P222E | |
| 23 | P223E | |
| 24 | P224E | |
| 25 | P225E | |
| 26 | P226E | |
| 27 | P227E | |
| 28 | P228E | |
| 29 | P229E | |
| 30 | P230E | |
| 31 | P231E | |
| 32 | P232E | |
| 33 | P233E | |
| 34 | P234E | |
| 35 | P235E | |
| 36 | P236E | |
| 37 | P237E | |
| 38 | P238E | |
| 39 | P239E | |
| 40 | P240E | |
| 41 | P241E | |
| 42 | P242E | |
| 43 | P243E | |
| 44 | P244E | |
| 45 | P245E | |
| 46 | P246E | |
| 47 | P247E | |
| 48 | P248E | |
| 49 | P249E | |
| 50 | P250E | |
| 51 | P251E | |
| 52 | P252E | |
| 53 | P253E | |
| 54 | P254E | |
| 55 | P255E | |
| 56 | P256E | |



100-664
Ness RK3
Radio Key



100-067
Ness RK4
Radio Key



100-001
Ness RKP
Radio Keypad

RADIO CODES

Each of the 56 User Codes, except for the Master Code, can be programmed to be Radio Codes. This allows up to 55 Ness Radio Keys to be used for Arming and Disarming of the panel. The Ness RKP Radio Keypad can also be used with the D8/D16, (see the RKP installer manual). The optional 100-200 Ness Radio Interface is required for radio operation.

PROGRAMMING RADIO KEYS

Use the Extra Options programming mode to enable selected user codes as Radio Codes. When a user code is enabled as a Radio Code, its Keypad Code, (if any), is automatically deleted.

PROGRAMMING SEQUENCE:

- ❶ In Installer Program Mode, enter the option number for the user code which will become a radio code. (Example, enter P256E for user code 56).
- ❷ Press EXCLUDE E to enter Extra Options mode. (The Exclude light is on).
- ❸ Press 5E to enable that user code as a Radio Code. (Light 5 is on).
- ❹ Press EXCLUDE E to exit Extra Options mode. (The Exclude light is off).
- ❺ Press 1E
The READY light will turn ON to indicate that the User Code is ready to accept the Radio Key. If a code is already programmed the READY light will not turn on and a warning beep will sound. To clear the code, press 0E, then go back to step 5. (0E clears any existing codes).
- ❻ Press the OFF button on the Radio Key to be programmed
If the Radio Key is accepted, the READY light will turn off and 3 beeps will sound. If the READY light stays on and a warning beep sounds, the Radio Key is already assigned to another User Code and must be cleared from that User Code first.

EXAMPLE: To enable User Code 56 as a Radio Code and program a Radio Key.

In Installer Program Mode.
Press **P256E EXCLUDE E 5E EXCLUDE E 1E** then press the OFF button on the Radio Key.

P201E – P256E

PROGRAM MODE LEVEL: Installer.

FACTORY DEFAULT: No Radio Codes, all code are keypad codes.

NOTES

- User Code 1 (Master Code) is always a Keypad Code.
- Radio Codes can be deleted by keypad in the case of a lost Radio Key.
- Radio Keys are assigned to User Codes, so that Open/Close reports are identified by user number when the control panel is base station monitored. (If Open/Close reports are enabled)

RELATED OPTIONS

P101E-P116E Programming Radio Devices.

TO DELETE A RADIO CODE:

Any Radio Code can be deleted if necessary, (lost radio key or if programming a radio key over an old one). And a Radio Code is automatically deleted when the user code type is changed to keypad code or reader code.

EXAMPLE: To delete Radio Code 56.

In Installer Program Mode: Press **P256E 0E**

PROGRAMMING

| Option No. | Description | Default | Note |
|------------|--|---------|----------------------------|
| P130E | REAL TIME CLOCK SET MINUTES | 00 | 00–59 minutes |
| P131E | REAL TIME CLOCK SET HOURS | 00 | 00–23 hours (00=midnight) |
| P132E | REAL TIME CLOCK SET DAY | 01 | 01–31 days |
| P133E | REAL TIME CLOCK SET MONTH | 01 | 01–12 months |
| P134E | REAL TIME CLOCK SET YEAR | 04 | 00–63 (2000–2063) |
| P135E | REAL TIME CLOCK SET DAY OF WEEK | 1 | 1–7 (1=Sunday, 7=Saturday) |

P130E – P135E

PROGRAM MODE LEVEL
User, Installer, Remote by PC.

NOTES
These options are dynamically updated. When the program option is entered, the keypad display will show the current value.

REAL TIME CLOCK PROGRAMMING

P130E Real Time Clock MINUTES. Enter a value between 00 and 59. Default 00 minutes.

P131E Real Time Clock HOURS. Enter a value between 00 and 23. Default 00 hours.

P132E Real Time Clock DAY OF THE MONTH. Enter a value between 01 and 31. Default 01, (1st day of the month).
Ensure that the setting does not exceed the days in the current month. The panel does not cross check this setting.

P133E Real Time Clock MONTH. Enter a value between 01 and 12. Default 01, (January).

P134E Real Time Clock YEAR. Enter a value between 00 and 63. (2000–2063). Default 04, (2004).

P135E Real Time Clock DAY OF THE WEEK. Enter a value between 1 and 7. (1=Sunday). Default 1, (Sunday).

PROGRAMMING SEQUENCE:

P130E–P135 existing value is displayed one digit at a time.

[ENTER NEW VALUE] E new value is displayed one digit at a time.

| Option No. | Description | 1E | 2E | 3E | 4E | 5E | 6E | 7E | 8E |
|------------|-----------------------|----|----|----|----|----|----|----|----|
| P199E | SERIAL OUTPUT OPTIONS | | | | | | | | |

P199E

Available in D8x/D16x V5.6 and later.

PROGRAM MODE LEVEL
Installer, Remote by PC.

FACTORY DEFAULT
Options 1E-5E OFF - Serial data options disabled.

NOTES
The RS232 Serial data is output at 9600 baud, 8 data bits, no parity, 1 stop bit.

SERIAL OUTPUT OPTIONS

D8x and D16x V5.6 and later have the option for two way serial data communications via the onboard RS232 SERIAL port. Alarm and system messages can be sent and keypad/status request data can be received. This allows high level interfacing with various external devices/controllers/dataloggers and other.

Messages are in ASCII format. Due to space constraints, the full protocol is not printed in this document but is available on request.

PROGRAMMING SEQUENCE:

P199E 1E–5E toggles the option ON and OFF

- 1E ON: Send Address. The address is the last digit of Acc No.2 (P73E).
- 2E ON: Send Time Stamp.
- 3E ON: Send Alarms.
- 4E ON: Send Warnings.
- 5E ON: Send Access Events.

P300E

PROGRAM MODE LEVEL
Installer, Remote by PC.

Option No. Description

| | |
|-------|------------------------------------|
| P300E | DEFAULT ALL ACCESS CONTROL OPTIONS |
|-------|------------------------------------|



DEFAULT ALL ACCESS CONTROL OPTIONS

Enter P300E in Installer program mode to return all access control programs to factory default values.



i If connecting multiple readers, the option to enable multiple readers (P301E 1E) should be turned on *before* programming any access cards. (Enabling P301E 1E erases existing card programming).

i If P301E 3E is enabled, a momentary push button can be wired to zone 8 as shown. For example, this option allows the reader output to operate a door lock during the day by presenting your card. Then at the end of the day press the push button within 5 seconds of presenting the card and the panel will arm.

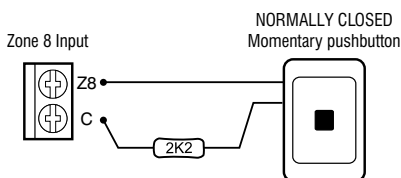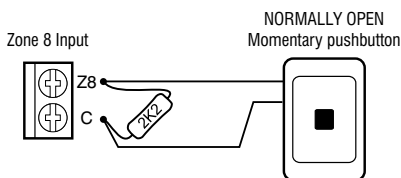

PROGRAMMING ACCESS CARDS

If the panel has 1, 2 or 3 Weigand proximity readers connected up to 55 of the panel's user codes can be programmed as Reader Codes. This allows arming/disarming by access card and operation of AUX outputs to open electric door strikes.

Use the Extra Options programming mode to enable selected user codes to Readers 1, 2 or 3. When a user code is enabled as a Reader Code, its Keypad Code, (if any), is automatically deleted. A user code enabled as a Reader Code cannot also be a Keypad Code or Radio Code.

PROGRAMMING SEQUENCE:

- ➊ In Installer Program Mode, enter the option number for the user code to be programmed. (P202E–P256E).
- ➋ Press EXCLUDE E to enter Extra Options mode. (Exclude light turns on).
- ➌ Press 6E, 7E or 8E to assign the user code to Reader 1, 2 or 3. (Keypad light 6, 7 or 8 will turn on).
- ➍ Press EXCLUDE E to exit Extra Options mode. (Exclude light turns off).
- ➎ Press 1E
The keypad READY light will turn ON to indicate that the user code is ready to accept an access card.
If a code is already programmed the READY light will not turn on and a warning beep will sound. To clear the code, press 0E, then go back to step 5. (0E clears any existing codes).
- ➏ Present a valid access card to the reader.
If the access card is of the correct type, the reader's orange light will turn on.
If the access card is accepted, the keypad READY light will turn off and 3 beeps will sound.
If the READY light stays on and a warning beep sounds, the access card is already assigned to another user code and must be cleared from that user code first.

Once a card is programmed to a user code it can be used to:

ARM THE PANEL.

- To allow arming with a double read, enable option P301E 2E.
- To allow arming with a single read and pushbutton, enable option P301E 3E. (Both methods can be enabled at once).

DISARM THE PANEL.

- To allow disarming, (single read), enable option P301E 4E. (This option can be enabled if necessary. A user may be allowed to arm by access card but not disarm, or vice-versa).

OPERATE AUX OUTPUT/S.

FOR EXAMPLE TO OPERATE DOORSTRIKE/S

To allow the operation of panel AUX outputs by access card, the reader to which the card is assigned must be programmed to operate one of the four AUX outputs.

- First, enable one or more AUX outputs to be a Reader output, P121E 8E, P122E 8E, P123E 8E and P124E 8E.
- If using more than one 101-014 Ultraprox Reader, enable P301E 1E to Use Reader Addresses.
- Next, assign which reader will trigger which AUX output. P318E - P338E

| Option No. | Description | Use Reader addresses | Arm with double read | Arm with single read & pushbutton | Disarm |
|------------|------------------------|----------------------|----------------------|-----------------------------------|--------|
| | | 1E | 2E | 3E | 4E |
| P301E | ACCESS CONTROL OPTIONS | | | | ON |

P301E 1E

PROGRAM MODE LEVEL
Installer, Remote by PC.

FACTORY DEFAULT
OFF (Use one reader).

NOTES

When using multiple readers, this option must be enabled before programming any access cards, (to avoid losing card programming when the option is enabled).

P301E 2E

PROGRAM MODE LEVEL
Installer, Remote by PC.

FACTORY DEFAULT
OFF.

P301E 3E

PROGRAM MODE LEVEL
Installer, Remote by PC.

FACTORY DEFAULT
OFF.

NOTES

- When this option is enabled, zone 8 is automatically disabled as an alarm zone.

P301E 4E

PROGRAM MODE LEVEL
Installer, Remote by PC.

FACTORY DEFAULT
ON.

P301E 5E-7E

PROGRAM MODE LEVEL
Installer, Remote by PC.

FACTORY DEFAULT
OFF.

NOTES

- When one of these options is enabled, that zone is automatically disabled as an alarm zone.
- The zone must reseal before another Request To Exit can occur. i.e, If the zone is left unsealed, the door will not be left unlocked.

RELATED OPTIONS

P37E, P38E Long Response Zones
P318E, P328E, P338E, P121E-P124E
Programming of Readers to Aux outputs.

USE READER ADDRESSES

If ON then all readers connected to the D8x/D16x must have set addresses of 1, 2 or 3. The data is then sent in an extended format that includes the reader address. (Use up to three Ness prox readers). The reader's address is determined the connection of the violet wire. See the wiring diagram on page 69).

If this option is off, one standard Weigand 26bit reader can be used. The reader's actions are determined by the P318E, P319E Reader 1 options.

PROGRAMMING SEQUENCE:

P301E 1E toggles the option ON and OFF

OFF: Do not use Reader addresses **ON:** Use Reader addresses

ARM WITH DOUBLE READ

When this option is enabled the panel will arm if *the same* valid access card is presented to a reader twice within 5 seconds.

PROGRAMMING SEQUENCE:

P301E 2E toggles the option ON and OFF

OFF: Do not Arm With Double Read **ON:** Arm With Double Read

ARM WITH SINGLE READ AND PUSHBUTTON

When this option is enabled the panel will arm if a valid access card is presented to a reader once and zone 8 is unsealed momentarily within 5 seconds.

This option can be used to prevent accidental arming or disarming by access card.

PROGRAMMING SEQUENCE:

P301E 3E toggles the option ON and OFF

OFF: Do not Arm With Single Read and Pushbutton **ON:** Arm With Single Read and Pushbutton

DISARM WITH ACCESS CARD

When this option is enabled a valid access card will disarm the panel. (It will perform the same function as a keypad code + E or a radio key off button).

PROGRAMMING SEQUENCE:

P301E 4E toggles the option ON and OFF

OFF: Do not Disarm with access card **ON:** Disarm with access card

REQUEST TO EXIT (REX) INPUTS

These options convert zones 5, 6 and 7 into Request To Exit (REX) inputs for access control, allowing for push button door exit. Connect a N/C or N/O pushbutton to either open circuit or short circuit the zone resistor.

The REX zones can also be programmed as Long Response Zones (P37E, P38E) to prevent accidental door opening, the REX button must be pressed and held for 1sec or 3sec, as programmed.

P301E 5E enables Zone 5 to trigger the AUX outputs assigned to Reader1.

P301E 6E enables Zone 6 to trigger the AUX outputs assigned to Reader2.

P301E 7E enables Zone 7 to trigger the AUX outputs assigned to Reader3.

PROGRAMMING SEQUENCE:

P301E 5E, 6E or 7E toggles the option ON and OFF

OFF: The zone is a normal alarm zone

ON: The zone is a REX input

P301E 8E

THIS OPTION IS AVAILABLE IN D8X/D16X V5.3 AND LATER

PROGRAM MODE LEVEL
Installer, Remote by PC.

FACTORY DEFAULT
ON

STROBE FLASH ON ARM/DISARM BY READER

This option enables strobe flash when arming and disarming by Reader. (D8x/D16x versions prior to V5.4 had strobe flash permanently enabled).

PROGRAMMING SEQUENCE:

P301E 8E toggles the option ON and OFF

OFF: Strobe flash disabled **ON:** Strobe flash enabled

| Option No. | Description | ZONES 1-8 (D8 & D16) | | | | | | | | ZONES 9-16 (D16) | | | | | | | |
|------------|-------------|----------------------|---|---|---|---|---|---|---|------------------|----|----|----|----|----|----|----|
| | | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 |
| P303E | DOTL ZONES | | | | | | | | | | | | | | | | |

P303E

PROGRAM MODE LEVEL
Installer, Remote by PC.

FACTORY DEFAULT
All OFF: No DOTL zones.

NOTES

Zones can be assigned as DOTL zones in addition to normal alarm functions. Therefore, DOTL zones can operate as alarm zones when armed and DOTL zones when disarmed. (Day Zone programming still applies).

DOOR OPEN TOO LONG (DOTL) ZONES

This selects the zones that will generate a DOTL alert if the zone is unsealed for longer than the time set by P304E.

The types of alerts are set by P121E 7E, P122E 7E and P305E.

PROGRAMMING SEQUENCE:

P303E 1E-16E toggles the options ON and OFF

OFF: DOTL is disabled for that zone

ON: DOTL is enabled for that zone

| Option No. | Description | Default | Note |
|------------|-------------|---------|---------------|
| P304E | DOTL TIME | 20 | 01-99 seconds |

P304E

PROGRAM MODE LEVEL
Installer, Remote by PC.

FACTORY DEFAULT
20 seconds.

DOTL TIME

Sets the delay time in seconds before a DOTL zone generates a DOTL alert. Enter a value between 01 and 99.

PROGRAMMING SEQUENCE:

P304E existing DOTL time is displayed one digit at a time

[ENTER NEW VALUE] E new value is displayed one digit at a time

| Option No. | Description | DOTL output LATCHES | DOTL outputs to Output Expander | | | DOTL outputs flashes on keypad | | | |
|------------|-------------|---------------------|---------------------------------|----|----|--------------------------------|----|----|----|
| | | 1E | 2E | 3E | 4E | 5E | 6E | 7E | 8E |
| P305E | DOTL ALERTS | | | | | | | | |

PROGRAM MODE LEVEL
Installer, Remote by PC.

PROGRAMMING SEQUENCE:

P305E [1E-8E] toggles the options ON and OFF

P305E 1E

RELATED OPTIONS
P121E 7E DOTL Alerts to Aux1.
P122E 7E DOTL Alerts to Aux2.

DOTL OUTPUT LATCHES

With this option on, DOTL alerts will either follow the sealed/unsealed state of DOTL zones or latch the Aux output/s which have been programmed for DOTL alerts.

1E OFF: DOTL Outputs follow the state of DOTL zones set by P303E. (Factory default).

1E ON: DOTL Outputs latch on until reset by disarming the panel.

P305E 2E

RELATED OPTIONS
P117E 1E Enable Output Expander.

DOTL ALERTS TO OUTPUT EXPANDER

With this option on, DOTL alerts will be sent to the optional Output Expander on the same output number as the DOTL zone number. P305E 1E settings apply.

2E OFF: No DOTL Alerts to the Output Expander. (Factory default).

2E ON: DOTL Alerts sent to the Output Expander.

P305E 5E

DOTL ALERTS TO KEYPAD

With this option on, DOTL alerts will SLOWLY Flash the corresponding zone light on the keypad. P305E 1E settings apply.

5E OFF: No DOTL Alerts to the Keypad. (Factory default).

5E ON: DOTL Alerts slow flash zone lights on the Keypad..

| Option No. | Description | 1E | 2E | 3E | 4E |
|------------|-------------------------|------------------|------------------|------------------|------------------|
| P318E | READER 1 TO AUX OUTPUTS | READER 1 to Aux1 | READER 1 to Aux2 | READER 1 to Aux3 | READER 1 to Aux4 |

| Option No. | Description | 1E | 2E | 3E | 4E |
|------------|-------------------------|------------------|------------------|------------------|------------------|
| P328E | READER 2 TO AUX OUTPUTS | READER 2 to Aux1 | READER 2 to Aux2 | READER 2 to Aux3 | READER 2 to Aux4 |

| Option No. | Description | 1E | 2E | 3E | 4E |
|------------|-------------------------|------------------|------------------|------------------|------------------|
| P338E | READER 3 TO AUX OUTPUTS | READER 3 to Aux1 | READER 3 to Aux2 | READER 3 to Aux3 | READER 3 to Aux4 |

| Option No. | Description | Default | Note |
|------------|----------------------|---------|-----------|
| P319E | READER 1 OUTPUT TIME | 5 | 01-24 sec |
| P329E | READER 2 OUTPUT TIME | 5 | 01-24 sec |
| P339E | READER 3 OUTPUT TIME | 5 | 01-24 sec |

PROGRAMMING SEQUENCE:

P338E [1E-4E] toggles the options ON and OFF.

PROGRAM MODE LEVEL

Installer, Remote by PC.

READERS 1-3 to AUX OUTPUTS 1-4

These options give the flexibility of assigning any access reader to any Aux output for operating door strikes, magnetic locks, etc. Readers can be assigned to multiple outputs. Always use an external relay board (100-719) on each Aux output if connecting devices which draw more than 100mA.

P318E 1E-4E

RELATED OPTIONS

P121E 8E, P122E 8E, P123E 8E, P124E 8E, P319E, P329E, P339E.

P318E [1E-4E] Toggles the options.

- 1E ON: Reader 1 output to **Aux1** (P121E 8E must also be on).
- 2E ON: Reader 1 output to **Aux2** (P122E 8E must also be on).
- 3E ON: Reader 1 output to **Aux3** (P123E 8E must also be on).
- 4E ON: Reader 1 output to **Aux4** (P124E 8E must also be on).

P328E 1E-4E

RELATED OPTIONS

P121E 8E, P122E 8E, P123E 8E, P124E 8E, P319E, P329E, P339E.

P328E [1E-4E] Toggles the options.

- 1E ON: Reader 2 output to **Aux1** (P121E 8E must also be on).
- 2E ON: Reader 2 output to **Aux2** (P122E 8E must also be on).
- 3E ON: Reader 2 output to **Aux3** (P123E 8E must also be on).
- 4E ON: Reader 2 output to **Aux4** (P124E 8E must also be on).

P338E 1E-4E

RELATED OPTIONS

P121E 8E, P122E 8E, P123E 8E, P124E 8E, P319E, P329E, P339E.

P338E [1E-4E] Toggles the options.

- 1E ON: Reader 3 output to **Aux1** (P121E 8E must also be on).
- 2E ON: Reader 3 output to **Aux2** (P122E 8E must also be on).
- 3E ON: Reader 3 output to **Aux3** (P123E 8E must also be on).
- 4E ON: Reader 3 output to **Aux4** (P124E 8E must also be on).

P319E, P329E, P339E

PROGRAM MODE LEVEL

Installer, Remote by PC.

RELATED OPTIONS

P318E, P328E, P338E.

READERS 1-3 OUTPUT TIME

This sets the time that the outputs selected by P318E, P328E and P338E are ON. Range 1-24 seconds.

PROGRAMMING SEQUENCE:

P319E, P329E or **P339E** existing Reader Output Time is displayed one digit at a time
[ENTER NEW VALUE] E new value is displayed one digit at a time


WIRING A SINGLE READER

P301E 1E is OFF (Reader addresses not used)

Connect only 1 reader.

In this mode the panel is compatible with the 101-091 Ness IDTeck Fingerprint Reader or the 101-014 Ness Ultraprox Weigand Reader.

i For longer cable runs use twisted 3 pair shielded cable with only one end of the shield connected to ground.
For cable runs exceeding 75m use the Ness Weigand data repeater.

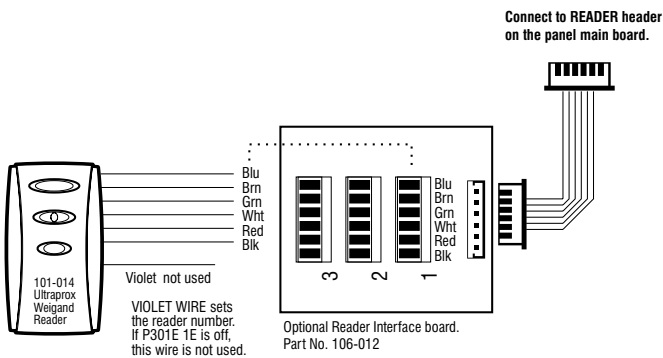


WIRING MULTIPLE READERS

P301E 1E is ON (Use Reader addresses)

When multiple readers are used, the panel needs to identify the individual readers.

The 101-014 Ness Ultraprox Weigand Readers can be addressed as Reader 1, 2 or 3 by connecting the Violet wire to an appropriate terminal.

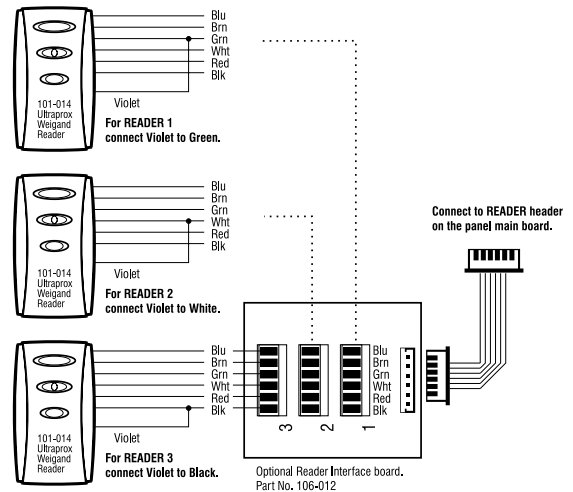

If using multiple Weigand readers, they must be either ALL addressable or ALL non-addressable.

That is, use either three Ness 101-014 addressable Weigand readers or three generic Weigand readers.

REQUEST TO EXIT (REX) USING A KEYPAD CODE

Codes selected for Code Only Arming can be used as REX codes for access control functions. That is, the code can operate an output instead of arming/disarming the panel.

There are two conditions needed to make the code operate as a REX code - It is assigned to CODE ONLY ARM and it is not assigned to either Area 1 or Area 2.

The first digit of the user code determines which AUX output is operated by the REX code. That is, a REX code in the format 1xxx operates AUX1, 2xxx operates AUX2 and 3xxx operates AUX3.

Notes:

1. Reader 1 can also use codes starting with 4-9 if only one exit point is used.
2. Set P318E, P328E, P338E options to select appropriate AUX outputs.
3. Set corresponding P121E, P122E, P123E, P124E options to 8E.


Setup Example:

- User Codes 1555, 2555, 3555 are programmed to be Code Only Arm and are not assigned to Area 1 or Area 2.
- P318E 1E, P328 2E, P338 3E are programmed to set reader output to selected Aux output.
- P121E 8E, P122E 8E, P123E 8E are programmed to set AUX outputs to reader.

Operation Example:

- Code 1555 activates door associated with AUX1 (READER 1).
- Code 2555 activates door associated with AUX2 (READER 2).
- Code 3555 activates door associated with AUX3 (READER 3).

CENTRAL STATION MONITORING

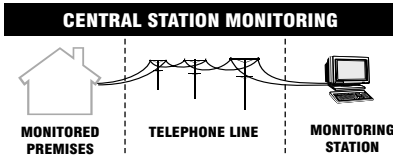


The Ness D8x and D16x control panels have an on-board digital dialler which can send detailed alarm messages to a central monitoring station.

The digital messages can include information about the zone/s which caused the alarm, tamper alarms, low battery or mains failure reports, and it can also (by user number) identify the users who arm and disarm the system.

Central station monitoring is highly recommended and is the most effective method of monitoring your alarm system.

Installers are welcome to contact Ness for further information about monitoring.

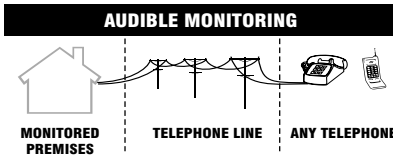

AUDIBLE VOICE MONITORING

While Central Station Monitoring is recommended, the panel can also send audible voice alarm reports to any DTMF capable telephone. The types of alarms sent are listed in the Reporting Format Table.

The basic audible message consists of the warning words ALARM, ALARM, ALARM followed by the alarm message sent as a series of beeps:

N [pause] **A** [pause] **B** [pause]

N = The first digit of the Account Number, P72E.

(**N** can be the digits 1–9. If P72E starts with 0, **N** is not sent).

A = First digit of the Alarm identifier (See Reporting Format Table).

B = Second digit of the Alarm identifier (See Reporting Format Table).

AUDIBLE MONITORING REPORTING FORMAT TABLE

| DIGIT A | DIGIT B | ALARM |
|---------|---------|----------------------------------|
| 1 | - | Zone 1 |
| 2 | - | Zone 2 |
| 3 | - | Zone 3 |
| 4 | - | Zone 4 |
| 5 | - | Zone 5 |
| 6 | - | Zone 6 |
| 7 | - | Zone 7 |
| 8 | - | Zone 8 |
| 9 | - | Zone 9 |
| 1 | 0 | Zone 10 |
| 1 | 1 | Zone 11 |
| 1 | 2 | Zone 12 |
| 1 | 3 | Zone 13 |
| 1 | 4 | Zone 14 |
| 1 | 5 | Zone 15 |
| 1 | 6 | Zone 16 |
| 2 | 1 | Duress |
| 2 | 2 | Keyswitch Tamper/Panic |
| 2 | 3 | Keypad Panic |
| 2 | 4 | Radio Panic |
| 2 | 5 | Medical alarm |
| 2 | 6 | Fire alarm |
| 2 | 7 | Exit from installer program mode |
| 3 | 1 | External Tamper |
| 3 | 2 | Internal Panel Tamper |
| 3 | 3 | Keypad Tamper |
| 3 | 4 | Radio Tamper |
| 3 | 5 | Mains Fail |
| 3 | 6 | Panel Battery Fail |
| 4 | 1 | RADIO Battery Fail |
| 4 | 2 | RADIO Supervision Fail |

MESSAGE EXAMPLE

If the Account Number is 1234 and zone 5 alarm is reported then 1 & 5 are beeped out:
ALARM, ALARM, ALARM, 1 Beep, 5 Beeps

REPORTING SEQUENCE

When triggered by an alarm event (or events) the panel will:

1. Call the Primary Telephone Number (P70E).
2. The warning words ALARM, ALARM, ALARM are repeated.
3. Commence the audible message.
4. Repeat the audible message 4 times if not acknowledged by pressing the **3** key after the beeps.
5. After the Acknowledge, the next message is sent - until all are acknowledged.
6. If the alarm is not acknowledged, then the panel will hang up and redial the Primary and Secondary phone numbers up to the maximum number of dial attempts.
7. If the alarm is not acknowledged after all dial attempts then the keypad LINE light will flash continuously until the panel is next armed.

ACKNOWLEDGING THE ALARM MESSAGE

The person receiving the call can then acknowledge the alarm by pressing the **3** key on their telephone. Press the **3** key for 2 seconds after the alarm beeps.

If the alarm is not acknowledged, the keypad's LINE light will flash continuously until the panel is next armed.


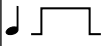

ALARM EVENTS SENT

The Reporting Format Table identifies the alarm events which can be programmed to be sent in Audible Format.

Open/Close reports, Restorals and Exclusions (Isolates) are NOT sent in Audible Format, even if selected on.

OPERATING THE PANEL BY TELEPHONE

AUDIBLE FEEDBACK

| | |
|---|---|
|  3 beeps | <ul style="list-style-type: none"> The User Code is valid Successful Arming or Disarming An Auxiliary output has been turned ON. |
|  1 long beep | <ul style="list-style-type: none"> Panel is already Armed Invalid code. Try again. |
|  1 short beep | <ul style="list-style-type: none"> An Auxiliary output has been turned OFF. |

SUMMARY OF TELEPHONE COMMANDS

| | |
|------------|-------------------------------|
| 0 | Prepare to receive commands |
| 1 # | Arm Areas |
| 2 # | Disarm Areas |
| 3 # | Toggle Aux 1 Output ON or OFF |
| 4 # | Toggle Aux 2 Output ON or OFF |
| 5 # | Toggle or Pulse Aux 3 Output* |
| 6 # | Toggle or Pulse Aux 4 Output* |
| * # | Finished – hang up |

* Toggle or Pulse operation is set by options P123E 7E & P124E 7E.

The D8x/D16x will allow a user to call in to the panel, using a standard DTMF telephone, and remotely Arm or Disarm all areas and also turn on or off Aux outputs 1, 2, 3 or 4.

To maintain panel security, remote operations can only be activated after entering a valid user code.

To operate the panel by telephone, you need a DTMF capable telephone, a valid user code and you must know the telephone number of the line to which the panel is connected.

The panel must be enabled for Remote Telephone Operation. See P90E options.

NOTES

- If the panel does not receive commands for periods longer than 10 seconds it will assume that the call is finished and it will hang up.

- If an alarm occurs which requires the panel to dial out while attempting remote control, the Panel will treat the alarm as a priority, give a constant tone as a warning and then hang up.

- When all remote control commands are finished press *** #** to force the panel to hang up.

SEQUENCE OF OPERATION.

- Phone the panel telephone number and listen for the required number of rings (ring ring...ring ring) and then hang up.
- Wait 10 seconds and then call the number again within 50 seconds.
- The panel will answer the second call immediately, sound a beep for 2 seconds then, after a pause, it will sound a lower frequency tone. The panel is now ready to receive telephone commands.
- Press the **3** button on the telephone. This tells the panel that telephone commands will follow. The panel will respond with either 3 beeps if all OK (One long beep means try again).
- Now enter a valid User Code (that is normally used for Arming or Disarming the panel) followed by the **#** button.
The panel will respond with 3 beeps if it recognises the code or 1 long beep to signal the code was invalid and to try again.
- Enter the required command. See: Summary Of Telephone Commands.
- Press *** #** to finish. This tells the panel to hang up. Also hang up your telephone.



**USER CODE
OPTIONS TABLE**

EXCLUDE+E toggles Extra Options mode.
(Installer Program mode only)

PAGE 14, 15

Pge 63

Page 65

| USER CODE | OPTION NO. U | KEYPAD PIN | 1E | 2E | 3E | 4E | 5E | 6E | 7E | 8E |
|------------|---------------------|------------|-------------|-------------|----------|----------------------------|------------|---------------|---------------|---------------|
| | | | AREA 1 Code | AREA 2 Code | ARM ONLY | *CODE ONLY* ARM (REX CODE) | RADIO Code | Reader Code 1 | Reader Code 2 | Reader Code 3 |
| 1 (Master) | P201E | 123 | ON | ON | | | | | | |
| 2 | P202E | | ON | | | | | | | |
| 3 | P203E | | ON | | | | | | | |
| 4 | P204E | | ON | | | | | | | |
| 5 | P205E | | ON | | | | | | | |
| 6 | P206E | | ON | | | | | | | |
| 7 | P207E | | ON | | | | | | | |
| 8 | P208E | | ON | | | | | | | |
| 9 | P209E | | ON | | | | | | | |
| 10 | P210E | | ON | | | | | | | |
| 11 | P211E | | ON | | | | | | | |
| 12 | P212E | | ON | | | | | | | |
| 13 | P213E | | ON | | | | | | | |
| 14 | P214E | | ON | | | | | | | |
| 15 | P215E | | ON | | | | | | | |
| 16 | P216E | | ON | | | | | | | |
| 17 | P217E | | ON | | | | | | | |
| 18 | P218E | | ON | | | | | | | |
| 19 | P219E | | ON | | | | | | | |
| 20 | P220E | | ON | | | | | | | |
| 21 | P221E | | ON | | | | | | | |
| 22 | P222E | | ON | | | | | | | |
| 23 | P223E | | ON | | | | | | | |
| 24 | P224E | | ON | | | | | | | |
| 25 | P225E | | ON | | | | | | | |
| 26 | P226E | | ON | | | | | | | |
| 27 | P227E | | ON | | | | | | | |
| 28 | P228E | | ON | | | | | | | |
| 29 | P229E | | ON | | | | | | | |
| 30 | P230E | | ON | | | | | | | |
| 31 | P231E | | ON | | | | | | | |
| 32 | P232E | | ON | | | | | | | |
| 33 | P233E | | ON | | | | | | | |
| 34 | P234E | | ON | | | | | | | |
| 35 | P235E | | ON | | | | | | | |
| 36 | P236E | | ON | | | | | | | |
| 37 | P237E | | ON | | | | | | | |
| 38 | P238E | | ON | | | | | | | |
| 39 | P239E | | ON | | | | | | | |
| 40 | P240E | | ON | | | | | | | |
| 41 | P241E | | ON | | | | | | | |
| 42 | P242E | | ON | | | | | | | |
| 43 | P243E | | ON | | | | | | | |
| 44 | P244E | | ON | | | | | | | |
| 45 | P245E | | ON | | | | | | | |
| 46 | P246E | | ON | | | | | | | |
| 47 | P247E | | ON | | | | | | | |
| 48 | P248E | | ON | | | | | | | |
| 49 | P249E | | ON | | | | | | | |
| 50 | P250E | | ON | | | | | | | |
| 51 | P251E | | ON | | | | | | | |
| 52 | P252E | | ON | | | | | | | |
| 53 | P253E | | ON | | | | | | | |
| 54 | P254E | | ON | | | | | | | |
| 55 | P255E | | ON | | | | | | | |
| 56 | P256E | | ON | | | | | | | |

| OPTION | DESCRIPTION | DEFAULT | PAGE |
|---------------|-----------------------------|---------|------|
| P00E U | Follow Me Telephone Number. | none | 39 |

| | | | |
|---------------|--------------------|----------|----|
| P26E U | ENTRY DELAY Time 1 | 20 sec | 16 |
| P27E U | Entry Delay Time 2 | 6=60 sec | |
| P28E U | EXIT DELAY Time | 60 sec | |
| P29E | SIREN RESET Time | 5 min | |

| | | | |
|----------|---------------------------------|-----------|----|
| P30E | Normal Zone Sensitivity | all zones | 17 |
| P31E-36E | Vibration Sensitivity, High-Low | none | |
| P37E | Long Response Zones - 1 second | none | |
| P38E | Long Response Zones - 3 seconds | none | |

| | | | |
|------|------------------------------|-----------|----|
| P39E | Double Trigger zones | none | 18 |
| P40E | Instant zones | zones 3+ | |
| P41E | ENTRY DELAY 1 zones | Zone 1 | |
| P42E | HANDOVER zones | Zone 2 | 19 |
| P43E | Entry Delay 2 zones | none | |
| P44E | Lockout zones (RESET output) | All zones | 19 |
| P45E | AREA 1 zones | All zones | |
| P46E | AREA 2 zones | none | |

| | | | |
|---|--------------------|------|----|
| P51E | MONITOR MODE zones | none | 21 |
| * See page 20 for information on Area operation, Monitor mode & Temporary Day Zones | | | 20 |

| | | | |
|------|-----------------------|-----------|----|
| P52E | 24hr zones | none | 21 |
| P53E | Day Mode zones | none | |
| P54E | RESET output zones | All zones | 22 |
| P55E | STROBE zones | All zones | |
| P56E | Keypad Sonalert zones | All zones | |
| P57E | SIREN zones | All zones | 23 |
| P58E | Aux1 zones | none | |
| P59E | Aux2 zones | none | |

| | | | | |
|------|----|----------------------------|-----|--------|
| P60E | 1E | Entry Beeps | ON | 24, 25 |
| | 2E | Keyswitch Monitor/Disarm | OFF | |
| | 3E | Keyswitch Arm/Disarm | OFF | |
| | 4E | Tamper Siren lockout | ON | |
| | 5E | Duress to RESET output | OFF | |
| | 6E | Auto Exclude zones | ON | |
| | 7E | Auto keypad display off | OFF | |
| | 8E | Delayed Aux3, Aux4 outputs | OFF | |

| | | | | |
|------|----|-------------------------------|----|----|
| P61E | 1E | Tamper to RESET output | ON | 26 |
| | 2E | Tamper to STROBE output | ON | |
| | 3E | Tamper to Keypad Sonalert | ON | |
| | 4E | Tamper to SIREN output | ON | |
| | 5E | Keypad Panic to RESET output | ON | |
| | 6E | Keypad Panic to STROBE output | ON | |
| | 7E | Keypad Panic to Sonalert | ON | |
| | 8E | Keypad Panic to SIREN output | ON | |



Options marked "u" can be programmed in User Program Mode



All options can be programmed in Installer Program Mode



| OPTION | DESCRIPTION | DEFAULT | PAGE |
|-------------|-----------------------|---|--------|
| P62E | 1E | Shortcut Memory display | 27 |
| | 2E | Shortcut Zone Exclude | |
| | 3E | Shortcut Monitor Mode | |
| | 4E | Shortcut Keypad Panic | |
| | 5E | Shortcut Area1 Arming | |
| | 6E | Shortcut Area2 Arming | |
| | 7E | Brief warning on Auto Exclude | |
| | 8E | Exit Time x10 | |
| P63E | 1E | Monitor alarms to RESET output | 28 |
| | 2E | Monitor alarms to STROBE | |
| | 3E | Monitor alarms to SONALERT | |
| | 4E | Monitor alarms to SIREN | |
| | 5E | Day Mode to RESET output | |
| | 6E | Day Mode to STROBE | |
| | 7E | Day Mode to keypad SONALERT | |
| | 8E | Day Mode to SIREN | |
| P64E | 1E | Brief Monitor Alarm | 29, 30 |
| | 2E | Brief Day Alarm | |
| | 3E | Monitor zones Entry Delay2 | |
| | 4E | Radio Key SIREN CHIRPS | |
| | 5E | 50Hz Mains Frequency | |
| | 6E | Double Key Keypad Panic | |
| | 7E | Keypad Fire Alarm | |
| | 8E | Keypad Medical Alarm | |
| P65E | Supervised zones | NONE | 31 |
| P66E | 1E | Zone Supervision alarm to RESET o/p | 32, 33 |
| | 2E | Zone Supervision alarm to STROBE | |
| | 3E | Zone Supervision alarm to SONALERT | |
| | 4E | Zone Supervision alarm to SIREN | |
| | 5E | Enable WIRED ZONE supervision | |
| | 6E | [not used] | |
| | 7E | Zone Supervision speedup x 6 | |
| | 8E | Zone Supervision speedup x10 | |
| P67E | Zone Supervision Time | 24 (hours) | 31 |
| P68E | 1E | Enable Zone Split (D16x only) | 34 |
| | 2E | 3k3 Zone Resistors | |
| | 3E | Long Radio Message | |
| | 4E | [not used] | |
| | 5E | Radio Arming "unsealed" warning | |
| | 6E | 24hr Zone Fire Siren sound | |
| | 7E | [not used] | |
| | 8E | Quiet chirps on radio Arm/Disarm | |
| P69E | 1E | ARM1 output pulses | 36, 37 |
| | 2E | ARM2 output pulses | |
| | 3E | Quiet Monitor Siren | |
| | 4E | 6 beeps on Arming | |
| | 5E | Monitor arm by radio key ON/OFF buttons | |
| | 6E | Disable Mains Fail Alarm | |
| | 7E | [not used] | |
| | 8E | [not used] | |

| OPTION | DESCRIPTION | DEFAULT | PAGE |
|--------------------------------------|------------------------------------|--------------------------------------|--------|
| P70E | TELEPHONE NO.1 Primary | NONE | 38 |
| P71E | Telephone No.2 Secondary | NONE | |
| P72E | ACCOUNT NO. 1 | 0000 | |
| P73E | Account No. 2 | 0000 | 40 |
| P74E | REPORT ZONE ALARMS | All zones | |
| P75E | 1E | Report DURESS alarms | 41 |
| | 2E | Report MEDICAL alarms | |
| | 3E | Report keypad & Keyswitch PANIC | |
| | 4E | Report FIRE alarms | |
| | 5E | Report PANEL TAMPER alarms | |
| | 6E | Report EXTERNAL TAMPER alarms | |
| | 7E | Report KEYPAD TAMPER alarms | |
| | 8E | Report EXIT FROM INSTALLER mode | |
| D8, P92E 1E D16, P75E 9E | Report RADIO TAMPER | ON | 41 |
| D8, P92E 2E D16, P75E 10E | Report RADIO PANIC by User ID | ON | |
| D8, P92E 3E D16, P75E 11E | Report RADIO LOW BATTERY by device | OFF | |
| D8, P92E 4E D16, P75E 12E | Report ZONE SUPERVISION FAIL | OFF | |
| D8, P92E 5E D16, P75E 13E | Report PANEL LOW BATTERY | ON | |
| D8, P92E 6E D16, P75E 14E | Report MAINS FAIL | ON | |
| P76E | Report Zone Restorals | All on | 40 |
| P77E | Report Misc. Restorals | All on | 41 |
| P78E | Report Multiple Zone alarms | NONE | 40 |
| P79E | Account No.2 zones | NONE | 40 |
| P80E | Tel No. 3 for Test Calls | NONE | 39 |
| P81E | Tel No.4 Callback | NONE | |
| P82E | 1E | Send RESTORAL report immediately | 41 |
| | 2E | Send RESTORAL after siren time | |
| | 3E | Send RESTORAL after Disarm & seal | |
| | 4E | Send RESTORAL after Disarm always | |
| P83E | TEST CALL Interval | 84 (168hrs) | 42 |
| P84E | Time before FIRST TEST CALL | 6 (12hrs) | |
| P85E | 1E | Auto Dialling, Pulse & DTMF | 42 |
| | 2E | Pulse Dialling (Decadic) always | |
| | 3E | DTMF Dialling always | |
| P86E | 1E | Disable Dialler | 43, 44 |
| | 2E | CONTACT ID FORMAT | |
| | 3E | [not used] | |
| | 4E | Audible VOICE Format | |
| | 5E | [not used] | |
| | 6E | Contact ID + VOICE Format | |
| P87E | 1E | Split dial Primary/Secondary numbers | 45 |
| | 2E | Check for Dial Tone | |
| | 3E | [not used] | |
| | 4E | 4 Dialling attempts | |
| P88E | 1E | Send AREA 1 OPEN/CLOSE REPORTS | 46, 47 |
| | 2E | Send AREA 2 Open/Close reports | |
| | 3E | Siren Chirp on Kiss-off | |
| | 4E | Flash Strobe on Kiss-off | |
| | 5E | Forced Opening report | |
| | 6E | Delayed Closing Reports | |
| | 7E | Manual Exclude Reports | |
| | 8E | Auto Exclude Reports | |



| OPTION | DESCRIPTION | DEFAULT | PAGE | |
|-------------|---------------------------------------|--------------------------------|----------------------|--------|
| P89E | 1E | ENABLE TEST CALLS | ON | 48, 49 |
| | 2E | Mains Report Delay (1 hour) | ON | |
| | 3E | Listen-In to Dialler | OFF | |
| | 4E | Swinger shutdown | ON | |
| | 5E | Line Fault Monitor | OFF | |
| | 7E | Use Internal Timing | OFF | |
| | P90E | 1E | Enable Remote Access | |
| 2E | | Enable First Call Mode | OFF | |
| 3E | | Enable Remote Arming | OFF | |
| 4E | | Enable Remote Disarming | OFF | |
| 5E | | Enable Remote AUX control | OFF | |
| 6E | | Enable Remote Status reporting | OFF | |
| 7E | | Enable Remote Event Report | OFF | |
| 8E | | Enable Callback Mode | OFF | |
| P91E | Required rings to answer | 1 | 52 | |
| P92E | Report Misc. Alarms 9-14 (D8 only) | 1, 2 on | 41 | |
| P93E | Report Misc. Restorals 9-14 (D8 only) | All on | | |
| P94E | "No Memory Warning" zones | none | 52 | |

| | | | | |
|--------------------|--|--|--|--------|
| P95E | CLEAR RADIO DEVICES | | 53 | |
| P96E | CLEAR MEMORY | | | |
| P97E | CLEAR PANEL OPTIONS (restore Factory Defaults) | | | |
| P98E | CLEAR User codes, Radio Keys, Access Cards | | | |
| P99E | Program the INSTALLER CODE | 000000 | 53 | |
| P101E-P116E | PROGRAM RADIO DEVICES 1-8 or 1-16 | none | 62 | |
| P117E | 1E | Enable Output Expander | OFF | 54, 55 |
| | 2E | Alternate Expander Format | OFF | |
| | 3E | Day Zone Follower | OFF | |
| | 4E | Output Exclude | OFF | |
| P118E | Output Expander zones | none | | |
| P119E | Output Expander alarm zones | none | | |
| P120E | 1E | Latched keyswitch input | OFF | 56 |
| | 2E | Monitor arm chirps by radio key | OFF | |
| | 3E | Radio Key AUX arms Monitor mode | OFF | |
| | 4E | Keyswitch DISARM ONLY | OFF | |
| | 5E | Keyswitch ARM ONLY | OFF | |
| | 6E | Smart Beeps (Brief Monitor & Day modes) | OFF | |
| | 7E | Entry Delay Extender | OFF | |
| | 8E | Area2 Disarm by Keyswitch Allowed | OFF | |
| P121E | 1E | Zone alarms to AUX1 (P58E selects zones) | ON | 57 |
| | 2E | Zone Supervision alarms to AUX1 | OFF | |
| | 3E | Radio key Panic TOGGLE | OFF | |
| | 4E | Radio key Panic PULSE | OFF | |
| | 6E | Enable telephone remote control of AUX1 | OFF | |
| | 7E | Door Open Too Long (DOTL) alarm to AUX1 | OFF | |
| | 8E | Reader [x] output pulses AUX1 | OFF | |
| | P122E | 1E | Zone alarms to AUX2 (P59E selects zones) | |
| 2E | | Zone Supervision alarms to AUX2 | OFF | |
| 3E | | Radio key Aux Button TOGGLE | OFF | |
| 4E | | Radio key Aux Button PULSE | OFF | |
| 5E | | Telephone Line fault to AUX2 | OFF | |
| 6E | | Enable phone remote control of AUX2 | OFF | |
| 7E | | Door Open Too Long (DOTL) alarm to AUX2 | OFF | |
| 8E | | Reader [x] output pulses AUX2 | OFF | |

| OPTION | DESCRIPTION | DEFAULT | PAGE | |
|--------------|---------------------------------|---|------|--------|
| P123E | 1E | Area 1 armed output to AUX3 | ON | 59 |
| | 6E | Enable telephone remote control of AUX3 | OFF | |
| | 7E | Pulse Aux3 (Phone Remote Control) | OFF | |
| | 8E | Reader [x] output pulses AUX3 | OFF | |
| P124E | 1E | Area 2 armed output to AUX4 | ON | 59, 60 |
| | 2E | Enable Extension Sonalert | | |
| | 5E | Enable AUX4 as Fail To Communicate o/p | OFF | |
| | 6E | Enable telephone remote control of AUX4 | OFF | |
| | 7E | Pulse Aux4 (Phone Remote Control) | OFF | |
| 8E | Reader [x] output pulses AUX4 | OFF | | |
| P125E | Enable hardwired zones | All on | 60 | |
| P130E | Real Time Clock set MINUTES | 00 | 64 | |
| P131E | Real Time Clock set HOURS | 00 | | |
| P132E | Real Time Clock set DAY | 01 | | |
| P133E | Real Time Clock set MONTH | 01 | | |
| P134E | Real Time Clock set YEAR | 04 | | |
| P135E | Real Time Clock set DAY OF WEEK | 1 | | |
| P199E | Serial Output Options 1E-5E | All off | | 64 |



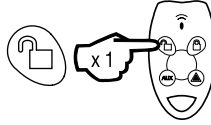




ACCESS CONTROL OPTIONS

| | | | | |
|--------------|------------------------------------|--------------------------------------|-----|----|
| P300E | DEFAULT ALL ACCESS CONTROL OPTIONS | | 65 | |
| P301E | 1E | Use reader addresses | OFF | 66 |
| | 2E | Arm with double read | OFF | |
| | 3E | Arm with single read and pushbutton | OFF | |
| | 4E | Disarm with access card | ON | |
| | 5E | REX Input 1 (Zone 5 input) | OFF | |
| | 6E | REX Input 2 (Zone 6 input) | OFF | |
| | 7E | REX Input 3 (Zone 7 input) | OFF | |
| | 8E | Strobe Flash on Arm/Disarm by Reader | ON | |
| P303E | DOTL zones | none | 67 | |
| P304E | DOTL time | 20 sec | | |
| P305E | 1E | DOTL output LATCHES | OFF | |
| | 2E | DOTL outputs to Output Expander | OFF | |
| | 3E | [not used] | | |
| | 4E | [not used] | | |
| | 5E | DOTL zone flashes on keypad | OFF | |

AUX OUTPUTS

| | | | | |
|--------------|-------------------------------|---------------------------|-----|----|
| P318E | 1E | Ultraprox Reader1 to AUX1 | OFF | 68 |
| | 2E | Ultraprox Reader1 to AUX2 | OFF | |
| | 3E | Ultraprox Reader1 to AUX3 | OFF | |
| | 4E | Ultraprox Reader1 to AUX4 | OFF | |
| P319E | Ultraprox Reader1 output TIME | 5 sec | | |
| P328E | 1E | Ultraprox Reader2 to AUX1 | OFF | |
| | 2E | Ultraprox Reader2 to AUX2 | OFF | |
| | 3E | Ultraprox Reader2 to AUX3 | OFF | |
| | 4E | Ultraprox Reader2 to AUX4 | OFF | |
| P329E | Ultraprox Reader2 output TIME | 5 sec | | |
| P338E | 1E | Ultraprox Reader3 to AUX1 | OFF | |
| | 2E | Ultraprox Reader3 to AUX2 | OFF | |
| | 3E | Ultraprox Reader3 to AUX3 | OFF | |
| | 4E | Ultraprox Reader3 to AUX4 | OFF | |
| P339E | Ultraprox Reader3 output TIME | 5 sec | | |

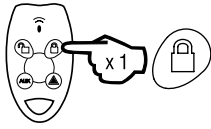OPERATION SUMMARY
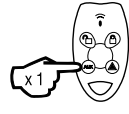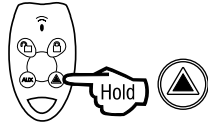
| OPERATION | by KEYPAD | by RADIO KEY | by ACCESS CARD or FOB |
|--|--|--|---|
| to ARM The panel must initially be disarmed. | Press ARM + E (If the ARMING SHORTCUT is enabled, P62E 5E) or press ARM + [USER CODE] + E or press [USER CODE] + E (If CODE ONLY ARMING has been enabled for that user code. Extra Option 4E) |  Press the ON button once. |  Present a Card or Fob twice. (if P301E 2E is on). Or, present a Card or Fob once + press button. (if P301E 3E is on). |
| to DISARM To disarm and/or reset alarms. | Press [USER CODE] + E |  Press the OFF button once.* |  Present a Card or Fob once. (if P301E 4E is on). |
| to arm MONITOR MODE The panel must initially be disarmed. See page 20 for more information on arming Monitor Mode. | Press MONITOR + E (If the MONITOR SHORTCUT is enabled, P62E 3E) or press MONITOR + [USER CODE] + E | ... Or ...  Press either the OFF button or the ON button twice within 4 seconds. (P69E 5E must be on).  Or press the AUX button once. (If P120E 3E is on). RK4 radio key only. | N/A |
| PANIC alarm | Press * * star keys together or press * + [USER CODE] + E or press * + E (If KEYPAD PANIC SHORTCUT is enabled, P62E 4E) |  Press and hold the PANIC button for at least 4 sec. | N/A |
| KEYPAD DURESS Keypad Duress allows the user to send a silent duress report while disarming, (if the system is being monitored by a central station). | Press [5, 6, 8 OR 9] + [USER CODE] + E Add one these digits in front of a user code when disarming. This sequence will disarm the panel and send a Duress report by dialler to the central station. (REPORT KEYPAD DURESS must be enabled, P75E 1E) | N/A | N/A |
| EXCLUDE ZONES EXCLUDE + E can only be used when the panel is disarmed. EXCLUDE + CODE + E can be used anytime. | Press EXCLUDE + E (If the EXCLUDE SHORTCUT is enabled, P62E 2E) then [ZONE No.] + E [ZONE No.] + E (Enter the zone number/s to be excluded.) then press E to exit Exclude mode The Exclude light flashes constantly while zones are excluded. Excluded zones are automatically Included next time the panel is disarmed. | N/A | N/A |

* If a user code is assigned to a radio key and has Extra Option 4E enabled, (CODE ONLY ARMING), then pressing OFF toggles the panel arm/disarm state.

| TEMPORARY DAY ZONE (TDZ) operation | |
|---|---|
| While remaining in normal operating mode, the user can add and remove Temporary Day Zones and enable/disable day zone operation. | |
| The panel must initially be disarmed. P64E 2E must be on to enable the use of Temporary Day Zones. See page 20 for more information on Temporary Day Zones. | Press P + E To enter TDZ Selection Mode. then press [ZONE No.] + E To select one or more zone to be Temporary Day Zones. then press E To save changes and exit TDZ Selection Mode. Press 0 + E To enable/disable TDZ operation. Temporary Day Zone mode enabled is indicated by the MONITOR icon flashing (LCD Keypad only). |

INSTALLATION RECORD



- NESS D8 ALARM CONTROL PANEL
 NESS D16 ALARM CONTROL PANEL

- P26E** ENTRY DELAY TIME 1
P27E ENTRY DELAY TIME 2
P28E EXIT DELAY TIME
P29E SIREN RESET TIME

| | |
|-----------------------|-----------------|
| DATE PURCHASED: | DATE INSTALLED: |
| INSTALLATION COMPANY: | |
| TELEPHONE: | |
| MONITORING COMPANY: | |
| TELEPHONE: | |

| | |
|----------------------|---------|
| <input type="text"/> | Seconds |
| <input type="text"/> | Seconds |
| <input type="text"/> | Seconds |
| <input type="text"/> | Minutes |

ZONE ASSIGNMENT

- P41E** ENTRY DELAY 1
P43E ENTRY DELAY 2
P42E HANDOVER
P40E INSTANT
P45E AREA 1
P46E AREA 2
P51E MONITOR
P52E 24 HOUR
P54E RESET OUTPUT
P55E STROBE OUTPUT
P56E SONALERT OUTPUT
P57E SIREN OUTPUT
P74E Report (dialler)

| ZONES | DEVICE TYPE | PIR, Reed switch, etc | DESCRIPTION | Entrance, bedroom1, etc | P41E | P43E | P42E | P40E | P45E | P46E | P51E | P52E | P54E | P55E | P56E | P57E | P74E |
|----------|-------------|-----------------------|-------------|-------------------------|------|------|------|------|------|------|------|------|------|------|------|------|------|
| D8 & D16 | 1 | | | | | | | | | | | | | | | | |
| | 2 | | | | | | | | | | | | | | | | |
| | 3 | | | | | | | | | | | | | | | | |
| | 4 | | | | | | | | | | | | | | | | |
| | 5 | | | | | | | | | | | | | | | | |
| | 6 | | | | | | | | | | | | | | | | |
| | 7 | | | | | | | | | | | | | | | | |
| | 8 | | | | | | | | | | | | | | | | |
| D16 | 9 | | | | | | | | | | | | | | | | |
| | 10 | | | | | | | | | | | | | | | | |
| | 11 | | | | | | | | | | | | | | | | |
| | 12 | | | | | | | | | | | | | | | | |
| | 13 | | | | | | | | | | | | | | | | |
| | 14 | | | | | | | | | | | | | | | | |
| | 15 | | | | | | | | | | | | | | | | |
| | 16 | | | | | | | | | | | | | | | | |

| USER CODE | OPTION No | Extra Options Assigned E.g. Radio Code, Arm Only, etc. |
|---------------|-----------|---|
| 1 Master Code | P201E | |
| 2 | P202E | |
| 3 | P203E | |
| 4 | P204E | |
| 5 | P205E | |
| 6 | P206E | |
| 7 | P207E | |
| 8 | P208E | |
| 9 | P209E | |
| 10 | P210E | |
| 11 | P211E | |
| 12 | P212E | |
| 13 | P213E | |
| 14 | P214E | |
| 15 | P215E | |
| 16 | P216E | |
| 17 | P217E | |
| 18 | P218E | |
| 19 | P219E | |

| USER CODE | OPTION No | Extra Options Assigned E.g. Radio Code, Arm Only, etc. |
|-----------|-----------|---|
| 20 | P220E | |
| 21 | P221E | |
| 22 | P222E | |
| 23 | P223E | |
| 24 | P224E | |
| 25 | P225E | |
| 26 | P226E | |
| 27 | P227E | |
| 28 | P228E | |
| 29 | P229E | |
| 30 | P230E | |
| 31 | P231E | |
| 32 | P232E | |
| 33 | P233E | |
| 34 | P234E | |
| 35 | P235E | |
| 36 | P236E | |
| 37 | P237E | |
| 38 | P238E | |

| USER CODE | OPTION No | Extra Options Assigned E.g. Radio Code, Arm Only, etc. |
|-----------|-----------|---|
| 39 | P239E | |
| 40 | P240E | |
| 41 | P241E | |
| 42 | P242E | |
| 43 | P243E | |
| 44 | P244E | |
| 45 | P245E | |
| 46 | P246E | |
| 47 | P247E | |
| 48 | P248E | |
| 49 | P249E | |
| 50 | P250E | |
| 51 | P251E | |
| 52 | P252E | |
| 53 | P253E | |
| 54 | P254E | |
| 55 | P255E | |
| 56 | P256E | |